



QUALITY EXPERIENCE



Microwave Oven
Model: NL-2744BL

فارسی ☐
English ☐

Please read these instructions carefully before installing and operating the oven.

SPECIFICATIONS

Power Consumption:	230-240V/50Hz, 1500W(Microwave)
	1300W(Grill)
Rated Microwave Power Output:	1000W
Operation Frequency:	2450MHz
Outside Dimensions:	300mm(H)×539mm(W)×445mm(D)
Oven Cavity Dimensions:	240mm(H)×376mm(W)×404mm(D)
Oven Capacity:	34Litres
Net Weight:	Approx.17.4kg

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any bent),
 - b) Hinges and latches (broken or loosened),
 - c) Door seals and sealing surfaces.

The oven should not be adjusted or repaired by anyone except qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

WARNING!--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance and keep for future reference.
2. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING!**--Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. **WARNING!**--When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated
7. To reduce the risk of fire in the oven cavity:
 - When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
 - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
8. **WARNING!**--Liquid or other food must not be heated in sealed containers since they are liable to explode.

9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING!--**It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This Microwave complies with EN 55011/CISPR 11, in this standard it belong to Class B Group 2 classification. Group 2 equipment: group 2 contains all ISM RF equipment in which radio-frequency energy in the frequency range 9 kHz to 400 GHz is intentionally generated and used or only used locally, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material, for inspection/analysis purposes, or for transfer of electromagnetic energy. Class B equipment is equipment suitable for use in locations in residential environments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The microwave oven is only used in freestanding.
21. **WARNING!--**Do not install oven over a range cook top or other heat-producing appliance. if installed could be damaged and the warranty would be avoid.

22. The microwave oven must not be placed in the cabinet.
23. The door or the outer surface may get hot when the appliance is operating.
24. **WARNING!**--Accessible parts may become hot during use. Young children should be kept away.
25. During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven, for cooking ranged and ovens.
26. The temperature of accessible surfaces may be high when the appliance is operating.
27. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
28. **WARNING!**--If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
29. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The microwave oven is for household use only and not for commercial use.
31. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
32. Please secure the turntable before you move the appliance to avoid damages.
33. **CAUTION!**--It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
34. The microwave oven is intended for defrosting, cooking and steaming of food only.
35. Use gloves if you remove any heated food.
36. Caution! Steam will escape, when opening lids or wrapping foil.
37. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
38. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING!**--Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. The microwave oven rear plate must be placed close to the wall. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING!--Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.

2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

BEFORE CALLING FOR SERVICE

Before asking for service, please check each item below:

- Check to ensure the oven is plugged in securely. If not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure the control panel is programmed correctly and the timer is set.
- Check to ensure the door is securely closed, engaging the door lock system. If the door is not properly closed, the microwave energy will not flow inside.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

COOKING TECHNIQUES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

COOKING UTENSILS GUIDE

1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.


The list below is a general guide to help you select the correct utensils.

COOKWARE	MICROWAVE	GRILL	COMBINATION
Heat-Resistant Glass	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes


Microwave–Safe Plastic Dish	Yes	No	No
Kitchen Paper	Yes	No	No
Metal Tray	No	Yes	No
Metal Rack	No	Yes	No
Aluminum Foil & Foil Containers	No	Yes	No

PRODUCT DIAGRAM

1. Door Safety Lock System
2. Oven Window
3. Roller Ring
4. Shaft
5. Door Release Button
6. Control Panel
7. Wave Guide
- (Please do not remove the mica plate covering the wave guide)
8. Glass Tray
9. Grill Heater
10. Metal Rack

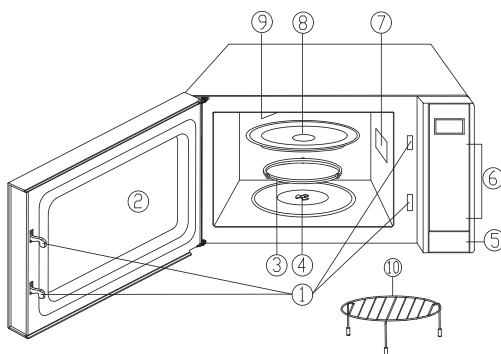

CONTROL PANEL

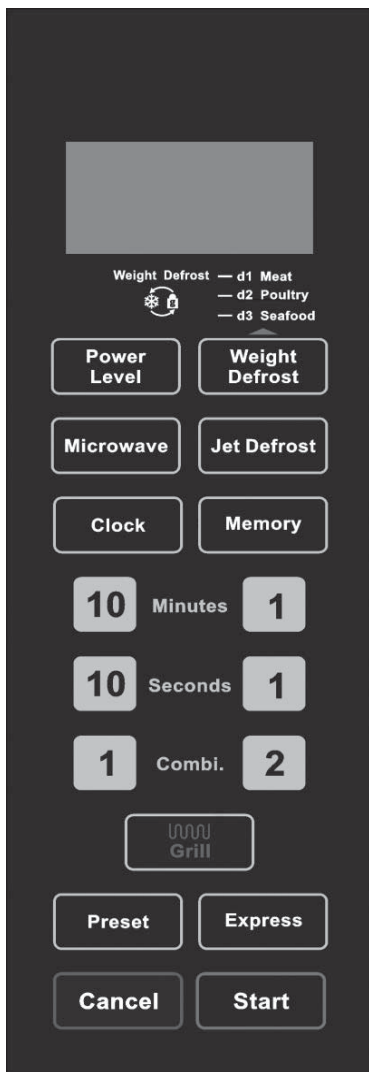

- **DISPLAY**

Cooking time, power, indicators and clock time are displayed.

- **POWER LEVEL**

Press to set microwave cooking power level.

- **WEIGHT DEFROST**

Press to defrost food based on weight.

- **MICROWAVE**

Press to set microwave cooking program.

- **JET DEFROST**

Press to defrost food based on time.

- **CLOCK**

Press to set clock time.

- **MEMORY**

Use to set multistage cooking program.

- **NUMBER BUTTONS**

Press to set time, food weight or servings.

- **COMBI.1/COMBI.2**

Press to set combination cooking program.

- **GRILL**

Press to set grill cooking program.

- **PRESET**

Use to start the oven at later time.

- **EXPRESS**

Press to set express cooking program.

- **CANCEL**

Press to stop cooking program or clear all previous settings before cooking starts.

It is also used to set child lock.

- **START**

Press to start cooking programs.

OPERATION INSTRUCTIONS

- When the oven is first plugged in, a beep will sound and the display will show "1:01".
- After cooking ends, the display will show End and beep will sound every two minutes until user press any button or open the door.

SETTING THE CLOCK

1. Press CLOCK button once.
2. Press CANCEL button once
3. Use number buttons to set the correct time.
4. Press CLOCK button once again to confirm.

NOTE: This is a 12- hour clock. You can check the current clock time by pressing CLOCK button.

EXPRESS COOKING

You can set 100% power level cooking quickly by pressing EXPRESS button repeatedly to select a cooking time. Use this feature to program the oven for 4 popular cooking times (15 seconds → 30 seconds → 1 minute → 2 minutes).

1. Press EXPRESS button repeatedly to set cooking time.
2. Press START button to confirm.

MICROWAVE COOKING

1. In standby mode, press MICROWAVE button once.
2. Use number buttons to set cooking time. The longest time is 99 minutes and 99 seconds.
3. Press POWER LEVEL button repeatedly to set cooking power level.
4. Press START button once to start.

Press POWER LEVEL button to set a cooking power level:

Press POWER LEVEL	Cooking power (Display)
Once	100% (P10)
Twice	80% (P8)
3 times	60% (P6)
4 times	40% (P4)
5 times	20% (P2)
6 times	0% (P0)

NOTE: You can press MICROWAVE button repeatedly to select power level, use number buttons to set cooking time, and then press START button to start.

GRILL

Grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages and pieces of chicken. It is also suitable for hot sandwiches and au gratin dishes.

1. In standby mode, press GRILL button once.
2. Use number buttons to set cooking time. The longest time is 99 minutes and 99 seconds.
3. Press START button to start.

COMBINATION

Combination1: 30% time for microwave cooking, 70% for grill cooking. Use for fish or au gratin.

Combination2: 55% time for microwave cooking, 45% for grill cooking. Use for puddings omelettes, baked potatoes and poultry.

1. Press COMBI.1 or COMBI.2 button once.
2. Use number buttons to set cooking time. The longest time is 99 minutes and 99 seconds.
3. Press START button to confirm.

WEIGHT DEFROST

The defrosting time and power level are automatically set once the food category and the weight are programmed.

1. Press WEIGHT DEFROST button repeatedly to select a food code (d1, d2, d3).
2. Use number buttons to set the food weight.
3. Press START button to confirm.

Press WEI.DEF.	Code	Food	Maximum Weight
Once	d1	Meat	2300 g
Twice	d2	Poultry	4000 g
3 times	d3	Seafood	900 g

NOTE: User must set the correct weight, otherwise the microwave oven will not start.

JET DEFROST

1. Press JET DEFROST button once.
2. Use number buttons to set defrosting time. The longest time is 99 minutes and 99 seconds.
3. Press START button once to confirm.

PRESET

This function allows the oven to start in a later time.

1. Press PRESET button once.
2. Use number buttons to set the preset time.
3. Input a cooking program (except express cooking).
4. Press START button to start.

MULTISTAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences. Jet defrost and weight defrost can only be set in the first stage.

Suppose you want to set the following cooking program.

Jet defrost



Microwave cooking



Microwave cooking (with lower power level)

1. Open the door and place the food into the oven, close it.
2. Press JET DEFROST button once.
3. Use number buttons to set defrosting time.
4. Press MEMORY button once.
5. Input the first microwave cooking program.
6. Press MEMORY button once.
7. Input the second microwave cooking program.
8. Press START button to start.

NOTE: Express cooking cannot be set in the multi-stage cooking program.

CHILD LOCK

Use to prevent unsupervised operation of the oven by children.

To set: In standby mode, press and hold CANCEL button for 3 seconds, a beep will sound and the lock indicator light will turn on. In the lock state, the oven can't be operated.

To cancel: Press and hold CANCEL button for 3 seconds, then a beep will sound and the indicator light will come off.

CLEANING AND CARE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation

openings.

4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
10. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. If the light bulb burns out, please contact customer service to have it replaced.
12. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
13. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

را می‌توان در آب ملایم و صابون یا در ماشین ظرفشویی تمیز کرد. هنگام برداشتن حلقه غلتکی، مراقب باشید تا آن را در جای مناسبی بگذارید.

۱۰. با ترکیب یک فنجان آب با عصاره و پوست لیمو در یک کاسه قابل استفاده در ماکروویو، بوهای بد را از دستگاه خود پاک کنید. به مدت ۵ دقیقه در مایکروفر قرار داده، کاملاً پاک کنید و با یک پارچه نرم خشک کنید.

۱۱. اگر لامپ دستگاه سوخت، لطفاً با خدمات مشتری تماس بگیرید تا آن را تعویض کنند.

۱۲. مرتباً دستگاه را تمیز کرده و ته‌مانده‌های غذا را خارج کنید. تمیز نگاه نداشتن دستگاه موجب فرسودگی سطح دستگاه خواهد شد که می‌تواند طول عمر آن را کم کرده و شاید شرایط ناگواری به وجود بیاورد.

۱۳. لطفاً این دستگاه را در سطل زباله خانگی نیندازید. دفع آن باید بوسیله مرکز دفع مخصوصی که توسط شهرداری‌ها ارائه می‌شود، انجام شود.

شوینده ملایم استفاده کنید. از اسپری یا سایر پاک‌کننده‌های تند استفاده نکنید. سطح در را لکه دار، خط‌خطی یا کدر می‌کنند.

۳. قسمت بیرونی فر را باید با دستمال مرطوب تمیز کرد. مراقب باشید که آب به منافذ تهویه نفوذ نکند تا بخش‌های کاربردی داخل دستگاه آسیب نبیند.

۴. درب و پنجره را از هر دو طرف، درزگیر و قسمت‌های کنار هم را مرتباً با یک پارچه مرطوب پاک کنید تا هرگونه کثیفی از بین برود. از پاک‌کننده‌های ساینده استفاده نکنید.

۵. از بخارشوی استفاده نکنید.

۶. اجازه ندهید صفحه کنترل خیس شود و با یک دستمال نرم و نمناک آن را تمیز کنید. هنگام تمیز کردن صفحه کنترل، درب فر را باز بگذارید تا دستگاه به طور اتفاقی روشن نشود.

۷. اگر در داخل یا اطراف بیرون درب فر، بخار جمع شد، با یک دستمال نرم پاک کنید. این اتفاق مکن است زمانی رخ دهد که دستگاه در یک فضای با رطوبت بالا کار کند و طبیعی است.

۸. بهتر است گاهی اوقات سینی شیشه‌ای را بیرون بیاورید و تمیز کنید. سینی را در آب گرم و پر کف یا در ماشین ظرفشویی بشویید.

۹. حلقه غلتکی و کف فر باید به طور مرتب تمیز شوند تا از صدای زیاد جلوگیری شود. به راحتی سطح پایین دستگاه را با مواد شوینده ملایم پاک کنید. حلقه غلتکی

۵. اولین برنامه پخت ماکروویو را وارد کنید.

۶. دکمه MEMORY را یک بار فشار دهید.

۷. دومین برنامه پخت ماکروویو را وارد کنید.

۸. دکمه START را فشار دهید تا شروع شود.

توجه: در برنامه پخت چندمرحله‌ای، نمی‌توان پخت سریع را انتخاب کرد.

قفل کودک

برای جلوگیری از کار با دستگاه توسط کودکان بدون نظارت شما از این گزینه استفاده کنید.

برای تنظیم: در حالت استندبای، دکمه CANCEL را به مدت ۳ ثانیه فشار داده و نگه دارید، یک بوق خواهید شنید و چراغ نشانگر قفل روشن می‌شود. در حالت قفل، فر نمی‌تواند کار کند.

برای لغو: دکمه CANCEL را به مدت ۳ ثانیه فشار داده و نگه دارید، سپس یک بوق به صدا در می‌آید و چراغ نشانگر خاموش می‌شود.

نظافت و نگهداری

۱. فر را خاموش کنید و هنگام تمیز کردن، سیم برق را از دیوار جدا کنید.

۲. داخل فر را تمیز نگه دارید. زمانی که مواد غذایی یا مایعات می‌پاشد و به دیواره‌های فر می‌چسبد، با یک پارچه مرطوب پاک کنید. اگر فر بسیار کثیف شد، پ از مواد

۲. از دکمه‌های عددی برای تنظیم زمان پیشاپیش استفاده کنید.

۳. یک برنامه آشپزی را وارد کنید (به جز پخت سریع).

۴. برای شروع دکمه START را فشار دهید.

آشپزی چند مرحله‌ای

این دستگاه می‌تواند برای حداکثر ۳ مرحله پشت سر هم پخت خودکار برنامه‌ریزی شود. یخ‌زدایی جت و یخ‌زدایی گرمی فقط در مرحله اول قابل تنظیم است.

فرض کنید می‌خواهید برنامه پخت زیر را تنظیم کنید.

یخ‌زدایی فوری



آشپزی با ماکروویو



پخت و پز در ماکروویو (با میزان قدرت کمتر)

۱. در را باز کنید و غذا را داخل فر قرار دهید، در آن را ببندید.

۲. دکمه JET DEFROST را یک بار فشار دهید.

۳. از دکمه‌های عددی برای تنظیم زمان یخ‌زدایی استفاده کنید.

۴. دکمه MEMORY را یک بار فشار دهید.

۱. دکمه WEIGHT DEFROST را برای انتخاب کد غذایی (d1، d2، d3) چند بار فشار دهید.

۲. برای تنظیم وزن غذا از دکمه‌های عددی استفاده کنید.

۳. برای تأیید دکمه START را فشار دهید.

یخ‌زدایی گرمی را فشار دهید.	کد	غذا	حداکثر وزن
یک بار	D1	گوشت	۲۳۰۰ گرم
دو بار	D2	مرغ	۴۰۰۰ گرم
۳ بار	D3	غذاهای دریایی	۹۰۰ گرم

توجه: کاربر باید وزن درست را تنظیم کند، در غیر این صورت مایکروفر روشن نمی‌شود.

یخ‌زدایی فوری

۱. دکمه JET DEFROST را یک بار فشار دهید.

۲. از دکمه‌های عددی برای تنظیم زمان یخ‌زدایی استفاده کنید. طولانی‌ترین زمان ۹۹ دقیقه و ۹۹ ثانیه است.

۳. برای تأیید یک بار دکمه START را فشار دهید.

پیش تنظیمات

این عملکرد کمک می‌کند تا دستگاه در زمان مورد نظر شما بعداً روشن شود.

۱. دکمه PRESET را یک بار فشار دهید.

۱. در حالت استندبای، یک بار دکمه GRILL را فشار دهید.

۲. از دکمه‌های عددی برای تنظیم زمان پخت استفاده کنید. طولانی‌ترین زمان ۹۹ دقیقه و ۹۹ ثانیه است.

۳. دکمه START را بزنید تا شروع شود.

ترکیبی

ترکیب ۱: برای ماهی یا خوراک نان و پنیر، ۳۰٪ زمان پخت روی ماکروویو، ۷۰٪ روی گریل بگذارید.

ترکیب ۲: برای پودینگ املت، سیب‌زمینی پخته و مرغ، ۵۵٪ زمان روی حالت ماکروویو و ۴۵٪ روی گریل بگذارید.

۱. دکمه COMBI.1 یا COMBI.2 را یک بار فشار دهید.

۲. از دکمه‌های عددی برای تنظیم زمان پخت استفاده کنید. طولانی‌ترین زمان ۹۹ دقیقه و ۹۹ ثانیه است.

۳. برای تأیید دکمه START را فشار دهید.

یخ‌زدایی گرمی

زمان یخ‌زدایی و میزان قدرت به طور خودکار پس از برنامه‌ریزی گروه غذایی و وزن تنظیم می‌شود.

۳. دکمه POWER LEVEL را چند بار فشار دهید تا میزان قدرت پخت را تنظیم کنید.

۴. برای شروع یکبار دکمه START را فشار دهید.

برای تنظیم میزان قدرت پخت، دکمه POWER LEVEL را فشار دهید:

فشار دادن دکمه POWER LEVEL	قدرت پخت (نمایشگر)
یک بار	۱۰۰٪ (P10)
دو بار	۸۰٪ (P8)
سه بار	۶۰٪ (P6)
چهار بار	۴۰٪ (P4)
پنج بار	۲۰٪ (P2)
شش بار	۰٪ (P0)

توجه: می‌توانید دکمه ماکروویو را چندبار فشار دهید تا میزان قدرت را انتخاب کرده و برای تنظیم زمان پخت از دکمه عددی استفاده کنید و بعد دکمه START را فشار دهید.

گریل

آشپزی با گریل مخصوصاً برای برش‌های نازک گوشت، استیک، گزمه، کباب، سوسیس و تکه‌های مرغ مناسب است. همچنین برای ساندویچ‌های داغ و غذاهای نان و پنیری مناسب است.

۲. دکمه CANCEL را یک بار فشار دهید.

۳. از دکمه‌های عددی برای تنظیم زمان درست استفاده کنید.

۴. دکمه CLOCK را یک بار دیگر برای فشار دهید تا تأیید شود.

توجه: ساعت این دستگاه ۱۲ ساعته است. با فشار دادن دکمه CLOCK می‌توانید زمان فعلی ساعت را بررسی کنید.

پخت سریع

شما می‌توانید سریعاً با چند بار فشار دادن دکمه EXPRESS، میزان قدرت پخت را روی ۱۰۰٪ تنظیم کرده و زمان آشپزی را انتخاب کنید. برای برنامه‌ریزی فر روی ۴ زمان پخت رایج (۱۵ ثانیه → ۳۰ ثانیه → ۱ دقیقه → ۲ دقیقه)، از این حالت استفاده کنید.

۱. دکمه EXPRESS را چند بار فشار دهید تا زمان پخت را تنظیم کنید.

۲. دکمه START را فشار دهید تا تأیید شود.

آشپزی با ماکروویو

۱. در حالت آماده‌باش استندبای، یک بار دکمه ماکروویو را فشار دهید.

۲. برای تنظیم زمان پخت از دکمه‌های عددی استفاده کنید. طولانی‌ترین زمان ۹۹ دقیقه و ۹۹ ثانیه است.

*لغو: برای توقف برنامه پخت یا پاک کردن تمام تنظیمات قبلی قبل از شروع پخت و همچنین برای تنظیم قفل کودک این دکمه را فشار دهید.

*شروع کنید: برای شروع برنامه‌های آشپزی فشار دهید.

□ لغو

برای توقف برنامه پخت یا پاک کردن تمام تنظیمات قبلی قبل از شروع پخت، فشار دهید.

همچنین برای تنظیم قفل کودک استفاده می‌شود.

□ شروع کنید


برای شروع برنامه‌های آشپزی فشار دهید.

دستورالعمل‌های راه‌اندازی

- هنگامی که فر برای اولین بار به برق وصل می‌شود، یک بوق خواهید شنید و صفحه نمایش "۱:۰۱" را نشان می‌دهد.
- پس از پایان پخت و پز، صفحه نمایش پایان را نشان می‌دهد و هر دو دقیقه یک بوق به صدا در می‌آید تا زمانی که دکمه‌ای را فشار دهید یا در را باز کنید.

تنظیم ساعت

۱. دکمه CLOCK را یک بار فشار دهید.

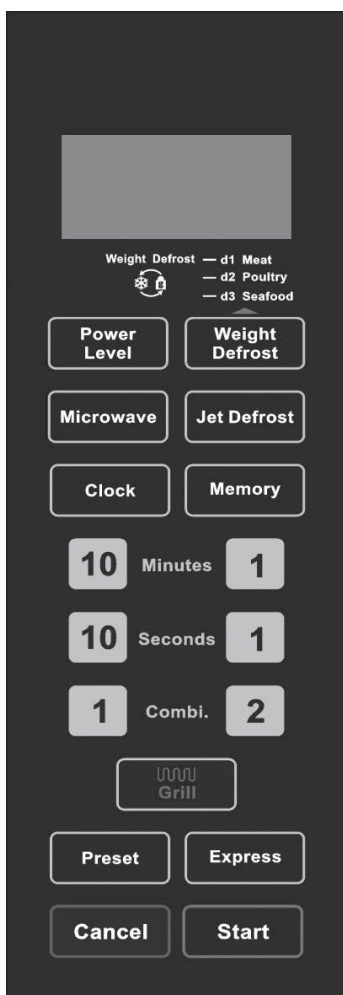

*یخ‌زدایی گرمی: برای یخ‌زدایی غذا بر اساس وزن فشار دهید.

*ماکروویو: برای تنظیم برنامه پخت در ماکروویو فشار دهید.

*یخ‌زدایی فوری: برای یخ‌زدایی غذا بر اساس زمان فشار دهید.

*ساعت: برای تنظیم زمان فشار دهید.

*حافظه: برای تنظیم برنامه پخت چندمرحله‌ای استفاده کنید.


*دکمه‌های عددی: برای تنظیم زمان، وزن غذا یا تعداد غذاها فشار دهید.

COMBI.1/COMBI.2: برای تنظیم برنامه پخت ترکیبی فشار دهید.

*گریل: برای تنظیم برنامه پخت گریل فشار دهید.

*از پیش تعیین‌شده: این دکمه را بزنید تا در زمان دلخواه پیش رو، دستگاه روشن شود.

*EXPRESS: برای تنظیم برنامه پخت سریع فشار دهید.

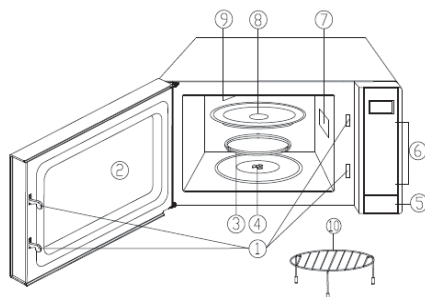

۱. قفل ایمنی درب	۲. پنجره فر	۳. حلقه غلطکی
۴. شفت	۵. دکمه باز شدن درب	۶. صفحه کنترل
۷. راهنمای اشعه	(لطفاً تلق نسوز که پوشاننده صفحه راهنمای اشعه است را جدا نکنید)	۸. سینی شیشه‌ای
۹. گرم کننده گریل	۱۰. پایه فلزی	

صفحه کنترل

* صفحه نمایش: زمان پخت، روشن/خاموش، نشانگرها و ساعت نمایش داده می‌شود.

* میزان قدرت: برای تنظیم میزان قدرت پخت ماکروویو فشار دهید.

۴. به جای ظروف مربعی / مستطیلی، از ظروف گرد / بیضی استفاده کنید، زیرا غذا در ۸ گوشه کاملاً پخته می‌شود.

۵. برای جلوگیری از پختن بیش از حد قسمت‌های روباز، ممکن است از نوارهای باریک فویل آلومینیومی استفاده شود. اما زیاد از آنها استفاده نکنید و فاصله ۱ اینچ (۲.۵۴ سانتی‌متر) بین فویل و محفظه را حفظ کنید.

لیست زیر یک راهنمای کلی برای کمک به شما در انتخاب ظروف صحیح است.

ظروف آشپزی	ماکروویو	گریل	ترکیبی
شیشه مقاوم در برابر حرارت	بله	بله	بله
شیشه غیر مقاوم در برابر حرارت	خیر	خیر	خیر
سرامیک‌های مقاوم در برابر حرارت	بله	بله	بله
ظرف پلاستیکی بی‌خطر برای ماکروویو	بله	خیر	خیر
کاغذ آشپزخانه	بله	خیر	خیر
سینی فلزی	خیر	بله	خیر
قفسه فلزی	خیر	بله	خیر
ظروف فویل و فویل آلومینیومی	خیر	بله	خیر

نمودار محصول

۳. هنگام پخت غذاها را بیوشانید. این کار از پخش شدن غذا جلوگیری کرده و به پخت یکنواخت غذا کمک می‌کنند.

۴. در طول پخت غذاهایی مانند مرغ و همبرگر، یک بار آنها را در ماکروویو برگردانید تا سریع‌تر بپزند. در پخت خوراکی‌هایی بزرگ‌تر مانند کباب‌ها، این کار باید حداقل یک بار یا بیشتر انجام شود.

۵. در اواسط پخت غذاهایی مانند کوفته نیز، از بالا به پایین و هم از مرکز ظرف به بیرون، چیدمان آن را تغییر دهید.

راهنمای لوازم آشپزی

۱. ماکروویو به ظروف فلزی رسوخ نمی‌کند. فقط از ظروفی استفاده کنید که برای استفاده در ماکروویو مناسب هستند. ظروف فلزی برای پخت و پز غذا و نوشیدنی در ماکروویو، مجاز نیستند. اگر تولید کننده اندازه و شکل ظروف فلزی مناسب برای پخت‌وپز ماکروویو را مشخص کند، این شرط قابل اجرا نیست.

۲. ماکروویو به ظروف فلزی رسوخ نمی‌کند، بنابراین نباید از ظروف فلزی یا ظروف با تزئینات فلزی استفاده کرد.

۳. هنگام پخت و پز در ماکروویو از محصولات کاغذی بازیافتی استفاده نکنید، زیرا ممکن است حاوی قطعات فلزی کوچکی باشند که ممکن است منجر به جرقه و/یا آتش‌سوزی شوند.

- چک کنید که آیا دستگاه به درستی به برق وصل شده است. اگر نه دوشاخه را از پریز خارج کنید، ۱۰ ثانیه صبر کنید و مجدداً و با ایمنی کامل آن را وصل کنید.
- فیوز سوخته یا قطع کننده مدار اصلی را بررسی کنید. اگر درست و سالم هستند، با دستگاه دیگری پریز را تست کنید.
- ببینید که آیا صفحه کنترل به درستی برنامه‌ریزی شده و تایمر تنظیم است یا خیر.
- بررسی کنید که آیا درب دستگاه درست بسته است و سیستم قفل فعال است یا خیر. اگر درب به درستی بسته نشود، انرژی ماکروویو به داخل منتشر نمی‌شود.

اگر هیچ یک از موارد فوق مشکل را برطرف نکرد، با یک متخصص واجد شرایط تماس بگیرید و هرگز تلاش نکنید تا خودتان دستگاه را تنظیم یا تعمیر کنید.

تکنیک‌های آشپزی

۱. غذا را با دقت بچینید. ضخیم‌ترین قسمت‌های غذا را در قسمت بیرونی ظرف قرار دهید.
۲. به زمان پخت نگاه کنید. کوتاه‌ترین زمان مشخص شده را در نظر بگیرید و در صورت نیاز به زمان اضافه کنید. طبخ بالای غذا، باعث بلند شدن دود و مشتعل شدن می‌شود.

سیم‌های برق اصلی مطابق با کدهای رنگی زیر قرار دارند:

سبز و زرد = زمین

آبی = خنثی

قهوه‌ای = زنده

پارازیت رادیویی

روشن بودن ماکروویو ممکن است باعث پارازیت در رادیو، تلویزیون یا تجهیزات مشابه شود. در هنگام وجود پارازیت، انجام اقدامات زیر شاید پارازیت را کم یا حذف کند:

۱. درب و سطح آببندی دستگاه را تمیز کنید.
۲. جهت آنتن گیرنده رادیو یا تلویزیون را تغییر دهید.
۳. با در نظر گرفتن گیرنده این دستگاه‌ها، مکان ماکروویو را تغییر دهید.
۴. مایکروفر را از گیرنده دور کنید.
۵. ماکروویو را به یک پریز دیگر وصل کنید تا ماکروویو و گیرنده دستگاه‌ها در مدارهای انشعاب مختلف قرار داشته باشند.

قبل از درخواست از مرکز خدمات

قبل از درخواست خدمات، لطفاً موارد زیر را بررسی کنید:

۷. مراقب باشید که سیم برق آسیب ندیده باشد یا زیر فر یا روی هیچ سطح داغ یا تیزی قرار نگیرد.

۸. پریز باید به راحتی در دسترس باشد تا بتوان در مواقع اضطراری فوراً آن را از برق جدا کرد.

۹. در فضای باز از دستگاه استفاده نکنید.

دستورالعمل‌های اساسی

این دستگاه باید مجهز به سیم ارت به زمین بوده و به حفره دیواری که به درستی نصب شده و به زمین متصل است وصل شود. در صورت اتصال کوتاه الکتریکی، اتصال زمین با ایجاد یک سیم خروجی در جریان الکتریکی، خطر برق‌گرفتگی را کاهش می‌دهد. بهتر است مدار جداگانه‌ای تنها برای این دستگاه در نظر گرفته شود. استفاده از ولتاژ بالا خطرناک است و باعث آتش‌سوزی یا حوادث دیگری می‌شود که به دستگاه آسیب می‌زند.

هشدار!--استفاده نادرست از دوشاخه ارت می‌تواند منجر به خطر برق‌گرفتگی شود.

توجه داشته باشید:

۱. اگر در مورد اتصال ارت یا دستورالعمل‌های الکتریکی سؤالی دارید، با یک متخصص برق یا متخصص خدمات واجد شرایط مشورت کنید.

۲. تولید کننده و فروشنده در قبال آسیب وارده به دستگاه یا صدمات شخصی ناشی از عدم رعایت مراحل اتصال الکتریکی، هیچ مسئولیتی نمی‌پذیرند.

راهنمای نصب

۱. مطمئن شوید که تمام لوازم بسته بندی از داخل دستگاه بیرون آورده شود.
۲. **اخطار!**-- بررسی کنید که دستگاه هیچ گونه نقص و ایرادی نداشته باشد، مانند تراز نبودن یا خم شدگی در درزگیرهای آسیب دیده درب و آببندی نا مناسب، شکستگی یا شل بودن لولاها و چفت‌ها و فرورفتگی‌های داخل حفره یا روی درب. در صورت وجود هرگونه ایراد و نقص، دستگاه را روشن نکنید و با متخصصین واجد شرایط مرکز خدمات تماس بگیرید.
۳. دستگاه ماکروویو باید روی یک سطح صاف و ثابت قرار بگیرد تا با ثابت ماندن وزن آن، قادر باشید غذاهای پرحجم و مقدار بالا را در آن طبخ کنید.
۴. فر را در مکان‌هایی با گرما، رطوبت یا رطوبت بالا یا نزدیک مواد قابل احتراق قرار ندهید.
۵. جریان هوای کافی برای فر در نظر بگیرید تا درست کار کند. حداقل ۲۰ سانتی‌متر فضای خالی لازم در بالای سطح فر و ۵ سانتی‌متر در هر دو طرف بگذارید. صفحه پشتی ماکروویو باید نزدیک به دیوار قرار گیرد. روی دستگاه را نپوشانید یا مسدود نکنید. پایه‌ها را برنارید.
۶. بدون سینی شیشه‌ای، تکیه‌گاه غلتکی و شفت از دستگاه استفاده نکنید و همگی آنها در جای درست خود باشند.

۳۰. تنها برای مصارف خانگی نه تجاری، از دستگاه استفاده کنید.

۳۱. هرگز جداکننده‌های پشت یا کناره‌ها را برندارید، زیرا برای حداقل فاصله از دیوار به منظور گردش هوا لازم است.

۳۲. لطفاً قبل از جابجایی دستگاه، صفحه گردان را محکم کنید تا آسیبی نبیند.

۳۳. احتیاط! -- تعمیر یا نگهداری دستگاه و همچنین تعویض سیم برق یا روشنایی توسط هر کسی غیر از متخصص واجد شرایط خطرناک است، زیرا در این شرایط باید پوششی که محافظ تشعشعات ماکروویو است برداشته شود. در این موارد دستگاه را به مرکز خدمات ما ارسال کنید.

۳۴. ماکروویو فقط برای یخ‌زدایی، پختن و بخارپز کردن غذا در نظر گرفته شده است.

۳۵. در زمان برداشتن مواد غذایی گرم شده، از دستکش استفاده کنید.

۳۶. احتیاط! هنگام باز کردن درب‌ها یا بسته بندی فویل، بخار خارج می‌شود.

۳۷. کودکان بالای ۸ سال و معلولین جسمی و ذهنی که فاقد تجربه و دانش هستند، تحت نظارت قرار بگیرند و در یک بستر امن خطرات آن را درک کنند، می‌توانند از این دستگاه استفاده کنند. کودکان نباید با دستگاه بازی کنند. نظافت و نگهداری دستگاه نباید توسط کودکان انجام شود مگر اینکه از ۸ سال به بالا باشند و تحت نظارت بزرگترها این کار انجام شود.

۳۸. در صورت پخش شدن دود، دستگاه را خاموش کرده یا از برق بکشید و درب آن را ببندید تا شعله‌های آتش خاموش شود.

۱۹. مراقب کودکان باشید تا برای بازی به این دستگاه دست نزنند.
۲۰. مایکروفر فقط باید به صورت ایستاده استفاده می‌شود.
۲۱. **هشدار!**-- فر را روی صفحه اجاق گاز یا دیگر وسایل گرماساز قرار ندهید. در صورت انجام این کار باعث آسیب به دستگاه شده و گارانتی باطل خواهد شد.
۲۲. مایکروفر را در کابینت قرار ندهید.
۲۳. درب دستگاه یا سطح بیرونی آن ممکن است در هنگام کار داغ شود.
۲۴. **هشدار!** قطعات بیرونی دستگاه ممکن است در حین استفاده داغ شوند. کودکان را از دستگاه دور نگاه دارید.
۲۵. در حین استفاده از دستگاه، قطعات داخلی آن داغ می‌شود، پس از دست زدن به قطعات داخلی آن خودداری کنید.
۲۶. دمای سطوح بخش‌های بیرونی دستگاه ممکن است در هنگام کار بالا باشد.
۲۷. کودکان، معلولین جسمی و ذهنی یا کسانی که تجربه و دانش کافی ندارند نباید از این دستگاه استفاده کنند، مگر اینکه تحت نظارت بزرگترها این کار انجام شود.
۲۸. **هشدار!** اگر درب یا واشر آن خراب است تا زمانی که توسط متخصص تعمیر نشده است، از دستگاه استفاده نکنید.
۲۹. طراحی این دستگاه به گونه‌ای نیست تا بتوان با تایمر یا سیستم کنترل از راه دور از آن استفاده کند.

۱۳. محتویات شیشه و بطری شیر کودک باید به هم زده یا تکان داده شود و درجه حرارت آن قبل از سرو چک شود تا باعث سوختگی نشود.

۱۴. به دلیل گرمای منتقل شده از غذای گرم شده، ممکن است ظروف آشپزی داغ شوند. شاید برای جابجایی ظروف به ظروف به دستگیره نیاز باشد.

۱۵. لازم است ظروف مناسب برای استفاده در ماکروویو را انتخاب کنید.

۱۶. **هشدار!** اگر هرگونه خدمات یا عملیات تعمیری از جمله برداشتن هر نوع حائل که محافظ در مواجهه با اشعه ماکروویو است، توسط هر کسی غیر از متخصصین واجد شرایط انجام شود، خطرناک است.

۱۷. این ماکروویو مطابق با EN 55011/CISPR 11 است، در این استاندارد به طبقه‌بندی گروه B گروه ۲ تعلق دارد. تجهیزات گروه ۲: گروه ۲ شامل تمام تجهیزات ISM RF است که در آنها انرژی فرکانس رادیویی در محدوده فرکانسی ۹ کیلوهرتز تا ۴۰۰ گیگاهرتز عمداً تولید و استفاده می‌شود یا فقط به صورت محلی و به صورت تابش الکترومغناطیسی، کوپلینگ القایی و/یا خازنی، برای تصفیه مواد، برای اهداف بازرسی/تحلیل یا برای انتقال انرژی الکترومغناطیسی استفاده می‌شود. تجهیزات گروه B تجهیزاتی هستند که برای استفاده در مکان‌هایی مانند محیط‌های مسکونی و در موسساتی که مستقیماً به شبکه منبع تغذیه ولتاژ پایین متصل هستند، مناسب است که ساختمان‌های مورد استفاده برای مصارف خانگی را تأمین می‌کنند.

۱۸. کودکان، معلولین جسمی و ذهنی یا کسانی که تجربه و دانش کافی ندارند نباید از این دستگاه استفاده کنند، مگر اینکه تحت نظارت بزرگترها این کار انجام شود.

- از محفظه دستگاه به عنوان انباری استفاده نکنید. اگر از دستگاه استفاده نمی‌کنید، محصولات کاغذی، لوازم پخت و پز یا مواد غذایی را در محفظه نگذارید.

- ماکروویو برای گرم کردن غذا و نوشیدنی در نظر گرفته شده است. خشک کردن لباس و داغ کردن بالشتک‌های گرم کننده، دمپایی، اسفنج، پارچه مرطوب و موارد مشابه ممکن است آسیب، اشتعال یا آتش‌سوزی را در پی داشته باشد.

۸. **هشدار!**--مایعات یا مواد غذایی را در ظروف در بسته حرارت ندهید، احتمال انفجار وجود دارد.

۹. گرم کردن نوشیدنی در ماکروویو می‌تواند باعث جوشیدن فورانی تأخیری شود، پس موقع برداشتن ظرف مراقب باشید.

۱۰. غذا را در فر سرخ نکنید. روغن داغ به قطعات و لوازم آسیب زده و حتی ممکن است باعث سوختگی پوست شود.

۱۱. تخم‌مرغ‌های خام و کامل پخته شده نباید در ماکروویو حرارت داده شوند، زیرا ممکن است حتی پس از اتمام حرارت دهی منفجر شوند.

۱۲. خوراکی‌هایی که پوسته سفت دارند مانند سیب‌زمینی، کدو حلوائی درسته، سیب و شاه بلوط را قبل از پختن سوراخ کنید.

نکنید. این دستگاه به طور خاص برای گرم کردن، پختن یا غذای خشک طراحی شده و برای مصارف صنعتی یا آزمایشگاهی قابل استفاده نیست.

۳. به صورت خالی از دستگاه استفاده نکنید.

۴. اگر سیم یا دوشاخه دستگاه آسیب دیده است، اگر به درستی کار نمی‌کند، یا اگر آسیب دیده یا افتاده است، از آن استفاده نکنید. اگر سیم برق آسیب دیده است، برای جلوگیری از خطرات احتمالی، باید توسط تولید کننده یا مرکز خدمات یا یک فرد واجد شرایط مشابه تعویض شود.

۵. اخطار! — تنها زمانی که راهنمایی‌های لازم به کودکان داده شده است و از خطرات آن آگاه هستند، اجازه دهید که بدون نظارت و در یک بستر امن از دستگاه استفاده کنند.

۶. هشدار! — وقتی دستگاه روی حالت ترکیبی قرار دارد، به دلیل دمای تولید شده، کودکان تنها تحت نظارت بزرگسالان اجازه دارند از دستگاه استفاده کنند.

۷. برای کاهش خطر آتش‌سوزی در محفظه فر:

- هنگام گرم کردن غذا در ظرف پلاستیکی یا کاغذی، به دلیل امکان اشتعال، مراقب دستگاه باشید.
- قبل از قرار دادن کیسه و پاکت در دستگاه، سیم مفتولی دور کیسه‌های کاغذی یا پلاستیکی را جدا کنید.
- در صورت مشاهده دود، دستگاه را خاموش کرده یا از برق بکشید و درب دستگاه را ببندید تا آتش خاموش شود.

۲. بین قسمت جلوی فر و درب دستگاه را با چیزی نپوشانید و مراقب باشید که خاک یا مواد پاک‌کننده روی درزگیر جمع نشود.

۳. اگر دستگاه خراب است، از آن استفاده نکنید. درب فر باید حتماً به درستی بسته شود و هیچ یک از این بخش‌ها معیوب نباشند

(الف) درب (از هر طرف)

(ب) لولاها و چفت‌ها (شکسته یا شل شده)

(ج) آب‌بندی درب‌ها

۴. این دستگاه نباید توسط کسی به جز پرسنل مرکز خدمات تنظیم یا تعمیر شود.

دستورالعمل‌های مهم ایمنی

به هنگام استفاده از وسایل برقی اقدامات احتیاطی اساسی از جمله موارد زیر، باید رعایت شود:

هشدار!— برای کاهش خطر سوختگی، شوک الکتریکی، آتش‌سوزی، آسیب به افراد یا مواجهه با اشعه بیش از حد ماکروویو:

۱. تمام دستورالعمل‌ها را قبل از استفاده از دستگاه بخوانید و برای مراجعات بعدی نگه دارید.

۲. همانطور که در راهنما توضیح داده شده است، از این دستگاه فقط برای استفاده مورد نظر استفاده کنید. از مواد شیمیایی خورنده یا بخارات در این دستگاه استفاده

لطفاً قبل از نصب و راه اندازی فر، این دستورالعمل ها را به دقت بخوانید.

مشخصات

مصرف برق	۲۳۰-۲۴۰ ولت / ۵۰ هرتز، ۱۵۰۰ وات (ماکروویو)
	۱۳۰۰ وات (گریل)
توان خروجی ماکروویو	۱۰۰۰ وات
فرکانس در گردش	۲۴۵۰ مگاهرتز
ابعاد بیرونی	۳۰۰ میلی متر (H) × ۵۳۹ میلی متر (W) × ۴۴۵ میلی متر (D)
ابعاد محفظه فر	۲۴۰ میلی متر (H) × ۳۷۶ میلی متر (W) × ۴۰۴ میلی متر (D)
ظرفیت فر	۳۴ لیتر
وزن خالص	حدود ۱۷.۴ کیلوگرم

اقدامات احتیاطی برای پیشگیری از مواجهه با اشعه بیش از حد

ماکروویو

۱. هرگز از این دستگاه با درب باز استفاده نکنید، زیرا در صورت باز بودن درب دستگاه در معرض اشعه قرار خواهید گرفت. چفت و بست های دستگاه را دستکاری نکنید.

NEW LAND

New Generation of Appliance



ماکروویو

مدل: NL-2744BL

فارسی ☐

English ☐