

Ceiling Fan Installation Guide

Model:

NL-3106WH

NL-3107WH

NL-3107BL

NL-3108WH

**NEWLAND
HOUSEHOLD
TRADING CO. L.L.C**

INSTALLATION INSTRUCTION FOR CEILING FANS

FAN INSTALLATION

A CONDITION OF THE WARRANTY IS THAT YOUR FAN IS INSTALLED BY A LICENSED ELECTRICAL CONTRACTOR. INCORRECTLY INSTALLED CEILING FANS CAN BE DANGEROUS AND EXPENSIVE TO REPAIR.

MOTOR GIVES OFF BURNING SMELL

This is caused by the burning off of varnish on the windings and will gradually disappear. The symptom may persist for eight hours. (Burning off excess varnish on windings)

J HOOK INSTALLATION (ONLY FOR REFERENCE)

CAUTION:a. Be sure that J Hook can support a load of not less than 25kgs.

b. Non-metallic outlet box should not be used.

C.A lubricant should not be used on the single mounting screw.

1. Drill pilot hole into ceiling material for ease installation of hook. Be sure that the pilot hole is drilled no larger than the minor diameter of the mounting screw threads.


2. Install hook into ceiling pilot hole with at least 11/2 inches of the mounting screw threads securing into a structural wood joist to provide a secure mounting. Remain 1-1/8 inches gap between the hook tip and ceiling as shown in FIG.1.

3.Install outlet box onto the ceiling.

CAUTION:

1.Don't let the blades less than 2.3M from the floor

2.The equipment is not fit for using by weak physical, slow reflective, mental disorders(including children)people. Except that the using is under instruction and help by responsible staff.

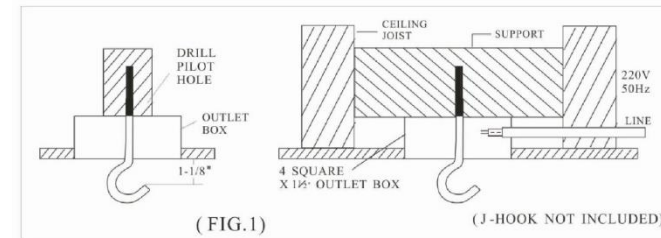

FAN ASSEMBLY AND HANGING

1.Unpack the fan see whether all components and parts are complete and in good condition.

Check the rating plate on the motor head(11) to see whether the voltage and frequency are suitable for local use.

3.Slip the upper canopy (3) into the down rod(1).

4.Slip the lower canopy (5) onto the down rod(1).

5.Feed the wires (2) through the down rod (1) and connect to the wire terminal block(10).

*** IMPORTANT:MAKE SURE THE FAN EARTH WIRE**

IS CONNECTED WITH SUPPLY GROUND WIRE PROPERLY.

6.Insert the down rod (1) into the hanger (8) and fix it with bolt(6) and split pin (7). Be sure to tighten the Hex.Nut(15).

7.Fix the lower canopy (5) to the down rod (1) with set screws (14).

8.Fix the blades (13) firmly onto the motor head (11) by screws and washers(12).Remember to put the shock absorber (16) under the blade to prevent wobbling.

9.Hang the fan on the hanger hook.(see FIG.1)

10.Connect the leads (2) to the power supply.(220V 50Hz) and the earth wire to the earth.



11.Tighten the upper canopy (3) onto the upper end of the down rod(1)by set screws(4).

SPEED REGULATOR INSTALLATION

1.Unscrew the regulator cap.

2.Connect wires through the inlet hole according to the diagrams.(FIG.3)

3.Mount the regulator on wall or wooden base block.

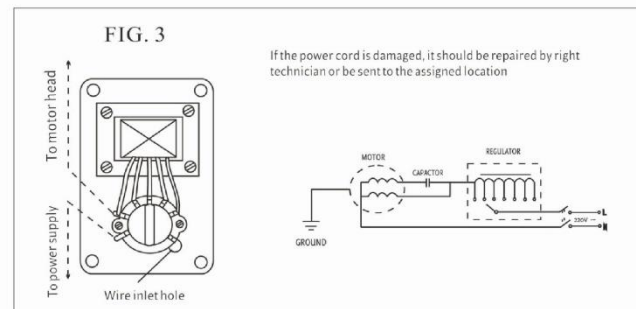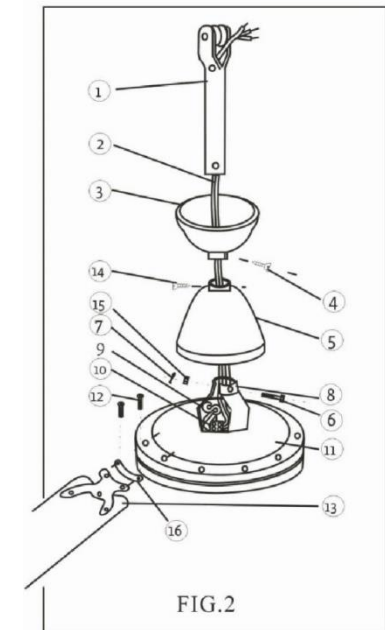

دستورالعمل نصب برای پنکه‌های سقفی

نصب پنکه یکی از شرایط گارانتی این است که نصب پنکه توسط یک پیمانکار برق دارای مجوز انجام شود. نصب نادرست پنکه‌های سقفی می‌تواند خطرناک بوده و هزینه‌های بالایی برای تعمیر به دنبال داشته باشد.

بوی سوختگی موتور این بو به دلیل سوختن وارنیش اضافی روی سیم‌پیچ‌ها ایجاد می‌شود و به تدریج از بین خواهد رفت. این نشانه ممکن است تا هشت ساعت باقی بماند (سوختن وارنیش اضافی روی سیم‌پیچ‌ها).


نصب قلاب J (فقط برای مرجع) احتیاط: الف. مطمئن شوید که قلاب J می‌تواند باری حداقل ۲۵ کیلوگرم را تحمل کند. ب. از جعبه اتصالات غیر فلزی استفاده نشود. پ. از روغن کاری روی پیچ نصب استفاده نکنید.

سوراخ راهنمای کوچکی در سقف ایجاد کنید تا نصب قلاب آسان‌تر شود. مطمئن شوید که قطر سوراخ راهنما از قطر کوچکتر رزوه‌های پیچ نصب بیشتر نباشد.

قلاب را به گونه‌ای در سوراخ راهنما قرار دهید که حداقل ۵/۱ اینچ از رزوه‌های پیچ در تیر چوبی ساختاری سقف محکم شده باشد تا نصب ایمنی فراهم شود. فاصله‌ای معادل ۱/۱-۸ اینچ بین نوک قلاب و سقف باقی بگذارید، همان‌طور که در شکل ۱ نشان داده شده است.

جعبه اتصالات را روی سقف نصب کنید.


۱. احتیاط: فاصله پره‌ها از کف باید حداقل ۲.۳ متر باشد.
۲. این تجهیزات برای استفاده افراد با توان فیزیکی ضعیف، واکنش کند، یا دارای اختلالات ذهنی (شامل کودکان) مناسب نیست، مگر اینکه استفاده تحت نظارت و کمک کارکنان مسئول صورت گیرد.

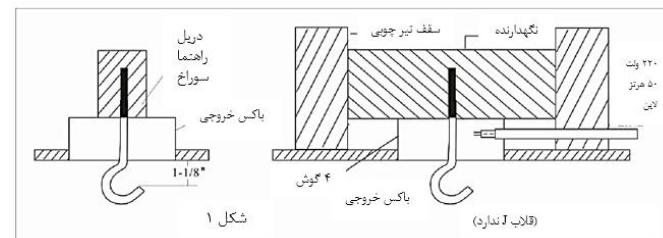

مونتاژ و نصب پنکه

۱. پنکه را باز کرده و بررسی کنید که تمام قطعات و اجزا کامل و در شرایط مناسب باشند.
۲. برچسب مشخصات روی سر موتور (۱۱) را بررسی کنید تا مطمئن شوید ولتاژ و فرکانس با استاندارد محل استفاده همخوانی دارد.
۳. کاور بالایی (۳) را به میله‌ی اصلی (۱) سر دهید.
۴. کاور پایینی (۵) را روی میله اصلی (۱) سر دهید.
۵. سیم‌ها (۲) را از داخل میله اصلی (۱) عبور داده و به بلوک ترمینال سیم‌ها (۱۰) متصل کنید.
۶. میله اصلی (۱) را وارد نگهدارنده (۸) کنید و با استفاده از پیچ و مهره (۶) و پین (۷) آن را محکم کنید. مهره شش‌گوش (۱۵) را کاملاً سفت کنید.


۷. کاور پایینی (۵) را با پیچ‌های تنظیم (۱۴) به میله اصلی (۱) متصل کنید.
۸. پره‌ها (۱۳) را با استفاده از پیچ‌ها و واشرها (۱۲) به‌طور محکم به سر موتور (۱۱) وصل کنید. حتماً

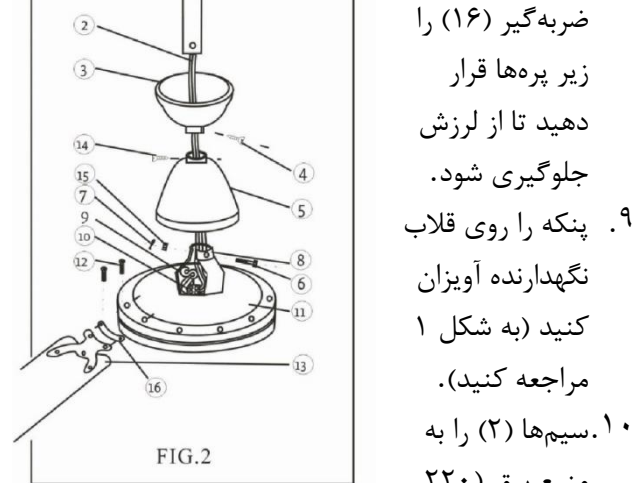

۹. پنکه را روی قلاب نگه‌دارنده آویزان کنید (به شکل ۱ مراجعه کنید).
۱۰. سیم‌ها (۲) را به منبع برق (۲۰) ولت ۵۰ هرتز و سیم زمین را به زمین متصل کنید.
۱۱. کاور بالایی (۳) را با پیچ‌های تنظیم (۴) روی انتهای بالایی میله اصلی (۱) محکم کنید.

نصب تنظیم‌کننده سرعت

۱. درپوش تنظیم‌کننده سرعت را باز کنید.
۲. سیم‌ها را از طریق سوراخ ورودی طبق دیاگرام‌ها متصل کنید (شکل ۳).
۳. تنظیم‌کننده سرعت را بر روی دیوار یا پایه چوبی نصب کنید.

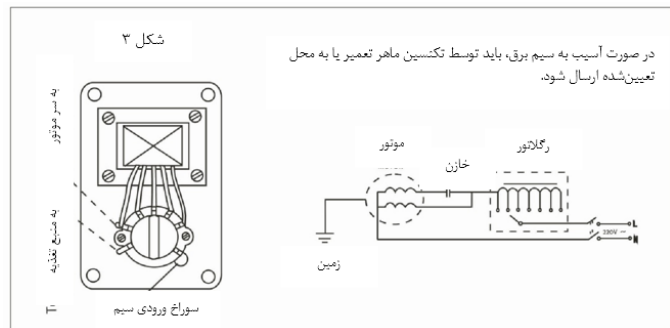

۷. کاور پایینی (۵) را با پیچ‌های تنظیم (۱۴) به میله اصلی (۱) متصل کنید.
۸. پره‌ها (۱۳) را با استفاده از پیچ‌ها و واشرها (۱۲) به‌طور محکم به سر موتور (۱۱) وصل کنید. حتماً



دستورالعمل نصب

پنکه سقفی

مدل:

NL-3106WH

NL-3107WH

NL-3107BL

NL-3108WH

NEWLAND
HOUSEHOLD
TRADING CO. L.L.C