

NEW LAND

New Generation of Appliance



فن گردش هوا ۱۰ اینچ

مدل: NL-3130GR

فارسی ☐

English ☐

مشتری گرامی،

برای جلوگیری از آسیب ناشی از استفاده نادرست، لطفاً قبل از اتصال دستگاه به برق، این راهنمای استفاده را به دقت مطالعه کنید.

لطفاً به هشدارهای ایمنی توجه ویژه داشته باشید. اگر دستگاه را به شخص دیگری منتقل می‌کنید، حتماً این راهنمای استفاده را نیز به او تحویل دهید.

هشدارهای ایمنی

۱. این دستگاه می‌تواند توسط کودکان بالای ۸ سال و افرادی با توانایی‌های فیزیکی، حسی یا ذهنی کاهش یافته یا کسانی که تجربه و دانش کافی ندارند استفاده شود، **مشروط بر اینکه** تحت نظارت یا آموزش‌های لازم در مورد استفاده ایمن از دستگاه قرار گرفته و خطرات مربوطه را درک کنند. کودکان نباید با دستگاه بازی کنند. نظافت و نگهداری توسط کودکان تنها تحت نظارت مجاز است. دستگاه و سیم آن را دور از دسترس کودکان زیر ۸ سال نگه دارید.
۲. بسته‌بندی را برداشته و اطمینان حاصل کنید که دستگاه سالم است. در صورت تردید، از دستگاه استفاده نکنید و فقط با افراد واجد شرایط تماس بگیرید. مواد بسته‌بندی (کیسه‌های پلاستیکی، پلی‌استایرن، گیره‌ها و غیره) باید دور از دسترس کودکان نگهداری شوند زیرا ممکن است خطرناک باشند.
۳. قبل از اتصال دستگاه، بررسی کنید که مشخصات دستگاه با مشخصات برق منطبق باشد. اگر کابل برق آسیب دیده باشد، باید توسط سازنده، نماینده خدمات یا یک فرد واجد شرایط مشابه جایگزین شود تا از خطر جلوگیری شود.
۴. اگر کابل برق آسیب دیده باشد، باید توسط سازنده یا خدمات پس از فروش آن یا یک فرد واجد شرایط جایگزین شود تا هرگونه خطر جلوگیری شود.

۵. این دستگاه فقط باید برای هدفی که برای آن ساخته شده است، یعنی به عنوان یک فن، استفاده شود. تولیدکننده مسئولیتی در قبال هرگونه آسیب ناشی از استفاده نادرست یا غیرصحیح ندارد.
۶. قبل از تمیزکاری یا انجام هرگونه تعمیرات و نگهداری بر روی دستگاه، دستگاه را خاموش کرده و آن را از برق جدا کنید (با جدا کردن دوشاخه از پریز برق یا خاموش کردن کلید سیستم).
۷. اگر دستگاه معیوب بوده یا به طور نادرست کار می کند، بدون دستکاری آن را خاموش کنید. در صورت نیاز به تعمیر، فقط با مراکز خدمات پس از فروش تماس بگیرید و از قطعات یدکی اصلی درخواست کنید. در غیر این صورت، ممکن است ایمنی دستگاه به خطر بیفتد.
۸. هنگام عدم استفاده از دستگاه، آن را خاموش کرده و دوشاخه را از پریز خارج کنید.
۹. استفاده از هر دستگاه الکتریکی نیازمند رعایت برخی قوانین اساسی است، از جمله:
۱۰. از دستگاه در نزدیکی منابع آب مانند وان، دوش یا استخر استفاده نکنید.
۱۱. با دست ها یا پاهای مرطوب یا خیس به دستگاه دست نزنید.
۱۲. دستگاه را در معرض عوامل جوی قرار ندهید.
۱۳. از دستگاه در حضور مایعات یا گازهای قابل اشتعال یا انفجاری استفاده نکنید.
۱۴. این محصول فقط برای **مصرف خانگی** طراحی شده است و برای استفاده تجاری/صنعتی یا فضای باز مناسب نیست.
۱۵. قبل از نصب، اطمینان حاصل کنید که برق از کلید اصلی یا قطع کننده مدار قطع شده است.
۱۶. هشدارهای ایمنی و دستورالعمل های موجود در این دفترچه راهنما تمام شرایط و موقعیت های ممکن را پوشش نمی دهد. باید درک شود که **حس مشترک**، **احتیاط و دقت** عواملی هستند که نمی توان آنها را در هیچ محصولی تعبیه کرد.

این عوامل باید توسط افرادی که از دستگاه استفاده می کنند و آن را نگهداری می کنند فراهم شوند.

۱۷. هیچ مسئولیتی بابت هرگونه آسیب که ممکن است در حین حمل و نقل، نصب نادرست، نوسانات ولتاژ یا تغییر یا اصلاح هر بخشی از محصول رخ دهد، پذیرفته نمی شود.

۱۸. کودکان باید تحت نظارت باشند تا اطمینان حاصل شود که با دستگاه بازی نمی کنند.

۱۹. اگر کابل برق آسیب دیده باشد، باید توسط سازنده، نماینده خدمات یا افراد مشابه واجد شرایط تعویض شود تا از خطر جلوگیری شود.

۲۰. نصب نادرست ممکن است خطر آتش سوزی، شوک الکتریکی یا آسیب به افراد را به همراه داشته باشد.

۲۱. برای جلوگیری از خطر آتش سوزی و شوک الکتریکی، از دستگاه در نزدیکی پنجره ها استفاده نکنید.

۲۲. فن باید هنگام کار روی یک سطح صاف و پایدار قرار گیرد تا از واژگونی جلوگیری شود.

۲۳. فن نباید در مکان های مرطوب یا جاهایی با رطوبت بالا (مانند حمام) قرار گیرد.

۲۴. دستگاه را در نزدیکی شعله باز، وسایل پخت و پز یا سایر دستگاه های گرمایشی قرار ندهید.

۲۵. هیچ ابزاری یا انگشتان خود را در توری محافظ تیغه ها وارد نکنید.


۲۶. **توجه:** هنگام استفاده از دستگاه های الکتریکی، همیشه باید احتیاط های ایمنی اساسی رعایت شوند تا خطرات آتش سوزی، شوک الکتریکی و آسیب جسمی جلوگیری شود.

۲۷. از دستگاه استفاده نکنید اگر به درستی کار نمی کند یا به نظر آسیب دیده است؛ در صورت تردید، با تکنسین های حرفه ای واجد شرایط تماس بگیرید.

۲۸. همیشه قبل از مونتاز، جداسازی یا تنظیم دستگاه، برق آن را از منبع اصلی قطع کنید.
۲۹. اطمینان حاصل کنید که دستگاه به درستی کار می‌کند؛ اگر این‌گونه نیست، دستگاه را خاموش کنید و توسط تکنسین‌های حرفه‌ای واجد شرایط بررسی کنید.
۳۰. هنگام کار دستگاه، آن را جابجا نکنید.
۳۱. هنگام عدم استفاده، دوشاخه دستگاه را از برق بکشید.
۳۲. فن را در معرض عوامل جوی (مانند آفتاب، باران و غیره) قرار ندهید.
۳۳. برای جدا کردن دوشاخه از پریز، کابل برق را نکشید.
۳۴. اگر کابل برق آسیب دیده است، باید توسط تأمین‌کننده، مرکز خدمات مجاز یا تکنسین‌های حرفه‌ای واجد شرایط تعویض شود.
۳۵. فن را از پارچه‌هایی مانند پرده یا مواد ناپایدار که ممکن است دریچه ورودی هوا را مسدود کنند، دور نگه دارید؛ اطمینان حاصل کنید که قسمت جلویی از مواد ناپایدار (مانند گرد و غبار و غیره) پاک است.
۳۶. مطمئن شوید که کابل برق با سطوح خشن، داغ یا متحرک تماس ندارد و پیچیده یا دور دستگاه پیچیده نشده باشد.
۳۷. دستگاه را روی یک سطح افقی و صاف قرار دهید؛ آن را روی سطح شیب‌دار قرار ندهید زیرا ممکن است فن سقوط کند.
۳۸. از دستگاه با تایمر، برنامه‌ریزی‌کننده یا سیستم کنترل از راه دور که می‌تواند به‌طور خودکار دستگاه را روشن کند، استفاده نکنید.

دستورالعمل‌های مونتاژ

تمام قطعات را از جعبه کارتن خارج کنید:

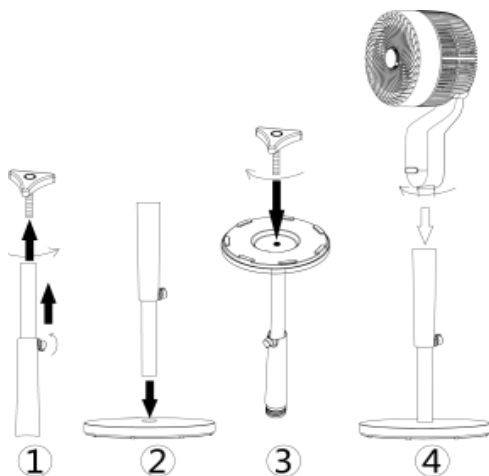

۱. پیچ را از پایین ستون جدا کنید.
۲. ستون را داخل سوراخ پایه قرار دهید.
۳. پیچ را محکم ببندید.
۴. بخش اصلی را با چرخاندن به ستون متصل کنید.

نگهداری و ذخیره‌سازی

لطفاً با فشار دادن کلید روشن/خاموش، محصول را خاموش کرده و قبل از تمیزکاری یا نگهداری، دوشاخه را از پریز جدا کنید.

اطلاعیه مهم:

- دستگاه را برای تمیز کردن داخل آن باز نکنید.

تمیز کردن قسمت خارجی:

- از یک پارچه تمیز و نرم یا حلال خنثی برای تمیز کردن قسمت خارجی استفاده کنید.
- از حلال‌های خورنده یا قلیایی برای تمیز کردن این محصول استفاده نکنید.

- از هیچ حلالی برای تمیز کردن داخل این محصول (برد مدار، موتور و غیره) استفاده نکنید و اطمینان حاصل کنید که آب به مدار کنترل وارد نشود تا از اتصال کوتاه جلوگیری شود.
- قسمت خارجی این محصول را خشک کنید.
- تحت هیچ شرایطی محصول، سیم برق یا دوشاخه را در آب فرو نبرید.
- توصیه می‌شود هر ۲ ماه یکبار محصول را تمیز کنید.

نگهداری فصلی:

محصول را در پایان فصل و قبل از ذخیره‌سازی تمیز کنید:

- قسمت خارجی را مطابق دستورالعمل‌های بالا تمیز کنید.
- دسته را به‌درستی در پشت محصول قرار دهید.
- محصول را بپوشانید و در حالت عمودی، در یک مکان خشک و خنک نگهداری کنید.

توجه:

- اگر متوجه شدید که این محصول کار نمی‌کند یا بوی غیرعادی می‌دهد، فوراً برق را قطع کرده و با بخش خدمات پس از فروش ما تماس بگیرید.

Dear Customer,

In order to avoid damage due to incorrect use, please read these Instructions for Use through carefully before connecting your device to the mains.

Please pay particular attention to the safety information. If you pass the device on to a third party, these Instructions for Use must also be handed over.

SAFETY WARNINGS

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the appliance and its cord out of reach of children less than 8 years.
2. Remove the packaging and make sure that the appliance is intact. If in doubt, do not use it and contact qualified personnel only. Packaging materials (plastic bags, polystyrene, staples etc.) Must be kept out of the reach of children as they could be hazardous.
3. Before connecting the appliance, check that the appliance rating corresponds to the mains rating. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
4. If the power cable is damaged, it must be replaced by the manufacturer or by its after sales service or otherwise by a qualified person in order to prevent any risk.
5. This appliance must only be used for the purpose for which it has been manufactured, i.e. As a fan. The manufacturer is not responsible for any damage caused by improper or incorrect use.
6. Before cleaning or carrying out maintenance on the appliance, switch off the appliance and disconnect it from the electrical mains by removing the plug from the power socket or by switching off the system switch.

7. If the appliance is faulty and/or operating incorrectly, switch it off without tampering with it. If any repair is required, please contact our after-sale centres only and ask for original spare parts. If the above is disregarded, the safety of the appliance may be compromised.
8. Switch off the appliance and remove the plug from the power socket when not in use.
9. The use of any electrical appliance calls for the awareness of some basic rules, such as:
 10. Do not use the appliance near sources of water such as baths, showers or swimming pools.
 11. Do not touch the appliance with wet or damp hands or feet
 12. Do not leave the appliance exposed to atmospheric agents
 13. Do not use the appliance in the presence of potentially flammable or explosive liquids or gases.
14. This product is intended for household use only and not for commercial / industrial or outdoor use.
15. Be sure to shut off electric supply at main switch or circuit breaker before installation.
16. The important safeguards and instruction appearing in this manual are not meant to cover all possible conditions and situation that may occur. It must be understood that common sense, caution and care are factors which cannot be built into any product .these factors must be supplied by the person(s) caring for and operating the unit.
17. No responsibility will be accepted for any damage which may occur during transport or by improper installation or voltage fluctuation or if any portion of the product has been altered or modified.
18. Children should be supervised to ensure that they do not play with the appliance.
19. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
20. Improper installation may result in the risk of fire, electric shock, or injury to persons.

21. To present risk of fire and electric shock, do not use the unit near windows.
22. The fan should be placed on a flat and stable surface when operating to avoid overturning.
23. The fan should not be placed in a damp place or where humidity is high (such as in a bathroom).
24. Do not place the appliance near an open flame, cooking or other heating appliance.
25. Do not insert any tool, or your fingers, into the grille protecting the blades.
26. Attention: when using electric appliances, the basic safety precautions must always be observed to avoid risks of fire, electric shocks and physical injury.
27. Do not use the appliance if it is not operating correctly or seems damaged; in doubt, contact professionally qualified technicians.
28. Always disconnect from the main supply the appliance before you assemble, disassemble or make adjustments to the appliance.
29. Make sure that the appliance is working correctly: if not, power the appliance off and make it checked by professionally qualified technicians.
30. Do not move the appliance when it is operating.
31. Unplug the appliance when not in use.
32. Do not leave the fan exposed to the weather (sun, rain, etc.).
33. Do not pull on the cord to disconnect the plug from the socket.
34. If the electric cord is damaged, it has to be replaced by the supplier or an authorized service center or a professionally qualified technicians.
35. Keep the fan far from fabrics like curtains, or unstable materials that could obstruct the air intake grille; make sure that the front is free of unstable materials (dust, etc.).
36. Make sure that the electric cord is not touching rough, hot or moving surfaces and not twisted or wrapped around the appliance.
37. Stand the appliance on a horizontal, flat surface or table; do not stand on a inclined plane since the fan could fall down.

38. Do not use the appliance with a timer or a programmer or with a remote system that can switch on the appliance automatically.

Assembly instructions

Take out all parts from the carton box:


Take out all parts from the carton box:

1, Take off the screw from the bottom of the column;

2, Put the column into the hole of the base;

3, Fasten the screw;

4, Install the main part by rotating it into the column. .

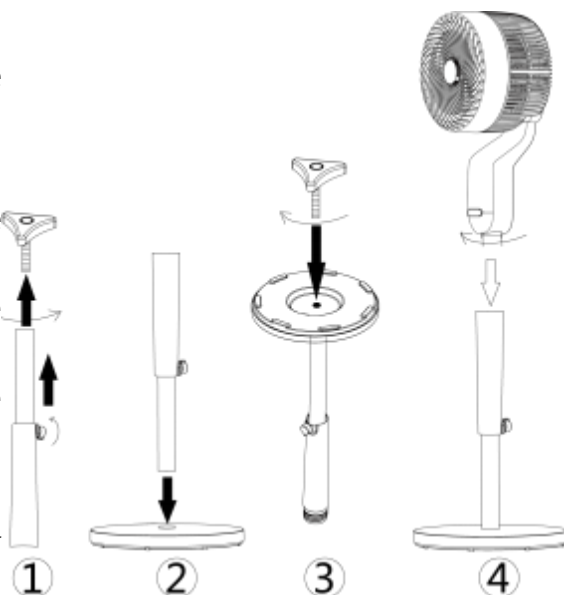

Maintenance and Storage

Please press the ON/OFF key to turn off the product, unplug from the socket before cleaning or maintenance.

Important Notice: Do not disassembly the product to clean inside of this product.

Cleaning the exterior:

Please use a clean and soft cloth or with neutral solvent to clean the exterior.

*Do not use corrosive or alkaline solvent to clean this product.

*Do not clean the inside of this product (Circuit board, motor, ect.) with any solvent, and ensure no water reaches the control circuit in case of short circuit.

*Dry the exterior of this product.

*Do not submerge the product, power cord or plug in water in any circumstances.

*It's recommended to clean the product every 2 months.

Seasonal Maintenance: Clean the product at the end of the season before storing it.

*Clean the exterior in accordance with above instructions.

*Put the handle on the back of the product properly.

*Cover the product and store it upright on a dry and cool location.

Notice: When you found this product won't work or with abnormal smells, please cut-off the power immediately and inform our after-sales service department.



QUALITY EXPERIENCE



**10 Inch Air Circulation
Fan**

Model: NL-3130GR

فارسی ☐
English ☐