


 **NEW LAND**

New Generation of Appliance

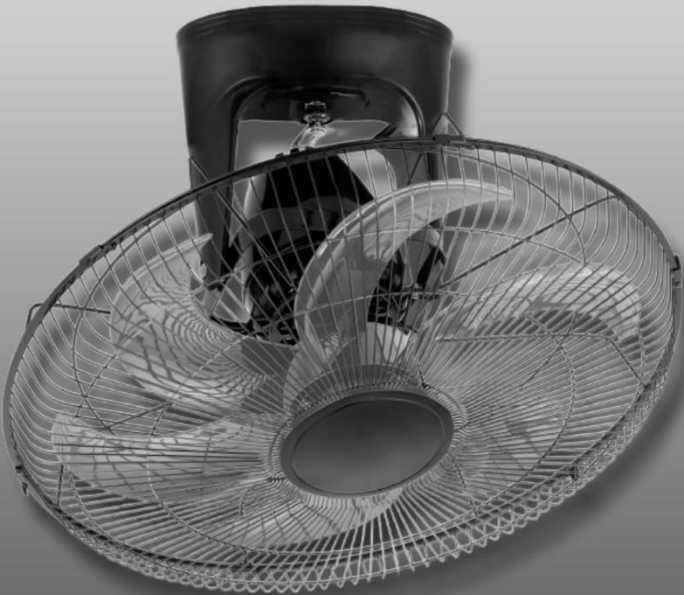

فن گردان ۱۸ اینچی
مدل: NL-3134BL


فارسی ☐
English ☐

مشتری گرامی،


برای جلوگیری از آسیب ناشی از استفاده نادرست، لطفاً قبل از اتصال دستگاه به برق، این راهنمای استفاده را به دقت مطالعه کنید.

لطفاً به اطلاعات ایمنی توجه ویژه داشته باشید. اگر دستگاه را به شخص دیگری منتقل می‌کنید، حتماً این راهنمای استفاده را نیز به او تحویل دهید.

۱. معرفی کوتاه: این فن مداری مطابق با استانداردهای بین‌المللی ایمنی طراحی شده است. این فن‌ها به‌طور گسترده در خانه‌ها، کارخانه‌ها و رستوران‌ها استفاده می‌شوند و باد را در تمامی جهات به گردش درمی‌آورند.
۲. نمودار مدار:

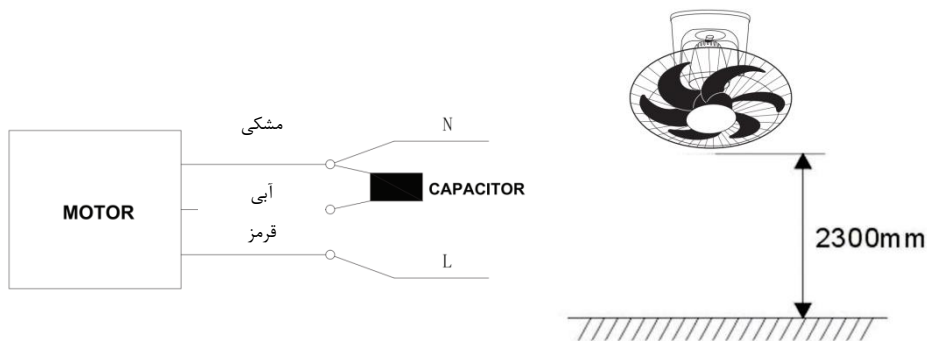

اجزا:

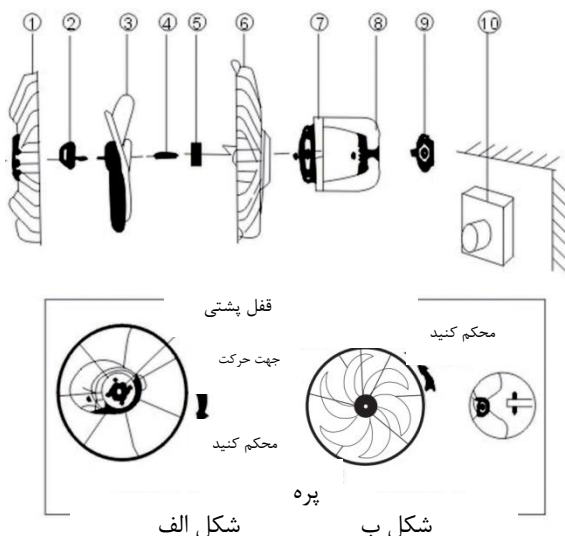

- ① توری جلویی ② مهره
تیغه ③ تیغه ④ لوله
پلاستیکی ⑤ مهره قفل
توری پشتی ⑥ توری پشتی
⑦ ست موتور ⑧ مجموعه
مونتاژ ⑨ پایه ⑩ کنترل
سرعت

۳. نحوه مونتاژ فن

① **نصب توری فن:** ابتدا کلاhek تیغه و مهره قفل توری پشتی را از شفت موتور جدا کنید. سپس توری پشتی را به شفت موتور وصل کرده و مهره قفل توری پشتی را محکم کنید (مطابق تصویر سمت راست).


② **نصب تیغه:** محافظ PVC روی شفت موتور را جدا کنید. تیغه فن را روی شفت موتور نصب کنید و مطمئن شوید که پین نگه‌دارنده در شیار روی تیغه قرار می‌گیرد. کلاhek تیغه را در جهت خلاف عقربه‌های ساعت بچرخانید تا تیغه در جای خود ثابت شود (مطابق تصویر ب).

توجه: مهره قفل تیغه را بیش از حد محکم نکنید، زیرا ممکن است به مهره آسیب برساند.

③ **نصب توری جلویی:** توری جلویی را با استفاده از کلیپ‌های انعطاف‌پذیر به توری پشتی متصل کرده و پیچ‌ها را محکم ببندید (مطابق تصویر ج).

④ **نحوه نصب فن:** فن مداری برای نصب در سطوح بالا طراحی شده است. فن باید طوری نصب شود که تیغه‌های آن بیش از ۲.۳ متر از کف فاصله داشته باشند.

زبانه فلزی پشتیبان را با استفاده از پیچ لنگر به سقف متصل کنید. سپس کنترل سرعت را طبق نمودار مدار نصب کنید.

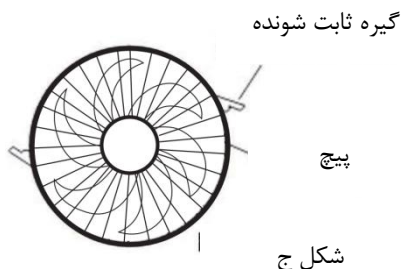


۴. نحوه استفاده از فن

① نحوه استفاده از تنظیم سرعت:


- سرعت فن از کم به زیاد قابل تنظیم است.
- برای تنظیم سرعت دلخواه، کلید را در جهت عقربه‌های ساعت بچرخانید.

② نحوه استفاده از عملکرد نوسان:

- این فن مداری در یک چرخه ۳۶۰ درجه باد می‌زند و محدوده دمیدن قابل تنظیم است.
- برای فعال کردن نوسان، کلید کششی نوسان را بکشید.
- با کشیدن مجدد این کلید، فن در حالت توقف قرار می‌گیرد.

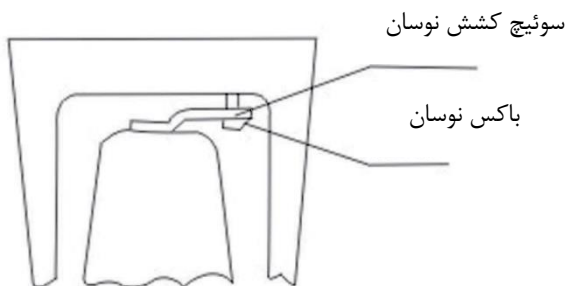

هشدار

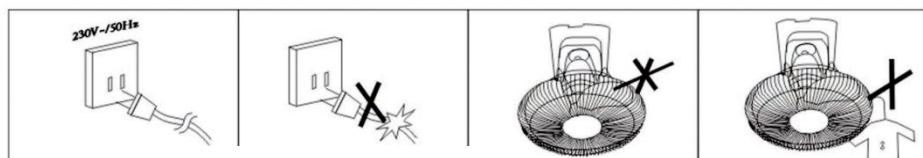

قبل از نصب، از مطابقت ولتاژ دستگاه به منزلتان اطمینان حاصل کنید.
اگر کابل برق آسیب دید، حتما باید توسط شخص متخصص تعویض شود. حتما از خطر جلوگیری کنید.
حین کار کردن دستگاه، هیچ چیزی را از گارد فن به داخل وارد نکنید زیرا باعث آسیب به پره‌ها می‌شود.
از دستگاه لباس آویزان نکنید. دستگاه را در کنار مورد خطرناک قرار ندهید.

دستورالعمل‌های استفاده از فن

- ① نصب فن باید توسط یک فرد واجد شرایط انجام شود. همیشه پس از نصب فن، آن را به پریز برق متصل کنید.
- ③ قبل از جابه‌جایی فن، مطمئن شوید که برق آن خاموش شده است.
- ④ پیش از تمیز کردن فن، دوشاخه دستگاه را از منبع برق جدا کنید.
- ⑤ هنگامی که از فن استفاده نمی‌شود، آن را خاموش کنید.

⑥ سیستم تعلیق فن را هر شش ماه یکبار بررسی کنید.

⑦ از آنجا که فن مداری به صورت مستقیم به شبکه برق متصل می شود، این دستگاه بدون دوشاخه ایمنی عرضه می شود.


۶. نحوه نگهداری از فن

① لطفاً قبل از نگهداری، دوشاخه فن را از منبع برق جدا کنید.

② از حلال هایی مانند بنزین برای تمیز کردن دستگاه استفاده نکنید.

③ پس از تمیز کردن، چند قطره روغن روان کننده به پایه شفت موتور اضافه کنید تا عمر موتور افزایش یابد.

④ فن را به خوبی بسته بندی کرده و در یک مکان خشک نگهداری کنید.

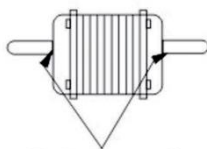

کمی در این قسمت روغن بریزید

نحوه تمیز کردن فن

هشدار: قبل از جدا کردن توری فن، اطمینان حاصل کنید که فن از منبع برق خاموش شده است.

۱. لطفاً قبل از تمیز کردن، دوشاخه فن را از منبع برق جدا کنید.

۲. فقط سطح بدنه فن را با مواد شوینده ملایم و یک پارچه نرم تمیز کنید. پیش از تمیز کردن، توری فن و تیغه ها را از بدنه جدا کنید. پس از خشک شدن، می توانید آن ها را دوباره مونتاژ کنید.

۳. پس از تمیز کردن، چند قطره روغن روان کننده به پایه شفت موتور اضافه کنید تا عمر موتور افزایش یابد.



Dear Customer,

In order to avoid damage due to incorrect use, please read these Instructions for Use through carefully before connecting your device to the mains.

Please pay particular attention to the safety information. If you pass the device on to a third party, these Instructions for Use must also be handed over.


1. A brief introduction: this orbit fan is designed as per international safety standards. These are widely used in houses, factories and restaurants. This circulates the wind in all directions.

2. CIRCUIT DIAGRAM

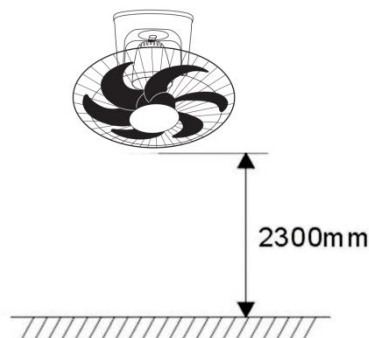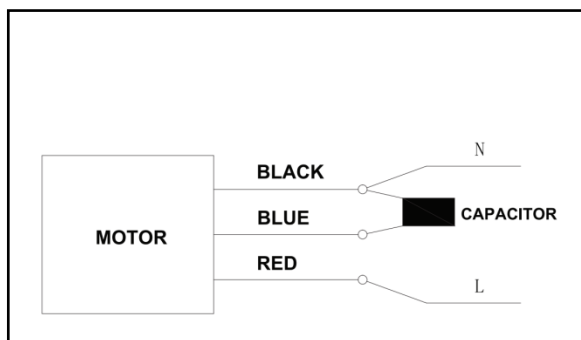


COMPONENTS:

- ① FRONT GUARD
- ② BLADE NUT
- ③ BLADE
- ④ PLASTIC PIPE
- ⑤ REAR GRILL
- ⑥ REAR GRILL LOCKING NUT
- ⑦ MOTOR SET 8
- ⑧ ASSEMBLE SET
- ⑨ BASE
- ⑩ SPEED

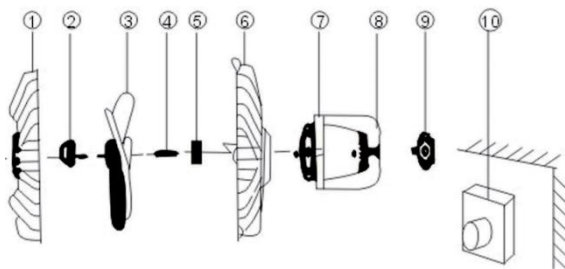

LOCKING NUT

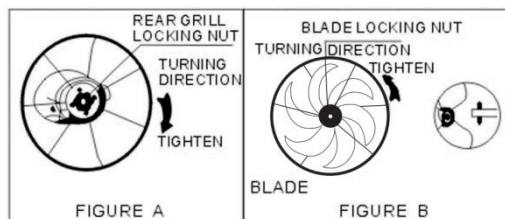

3. HOW TO ASSEMBLE THE FAN

- ① Install the fan guard

First remove blade cap and rear guard locking nut from the motor shaft. I then attach rear guard to motor shaft and tighten the rear guard locking nut like shown in right figurea.

- ② Install the blade

Discard the pvc sleeve on motor shaft. Install fan blade onto motor shaft, making sure the retaining pin snap into the groove on the blade. Turn the blade cap counter clock wise to fix the blade in position like shown in figure b.


Note: do not over tighten the blade locking nut as this may damage the nut.

- ③ Install the front guard

Mount the front guard to rear guard with flexible clip and tighten the screw on firmly like shown in figure c.

- ④ How to fix the fan

The orbit fan is intended to be mounted at a high level, that the fan is to be installed so that the fan blades are more than 2.3m above the floor. Position the accessory metallic supporting tab on the ceiling by using the attached anchor screw. And then install the speed according to the circuit diagram.

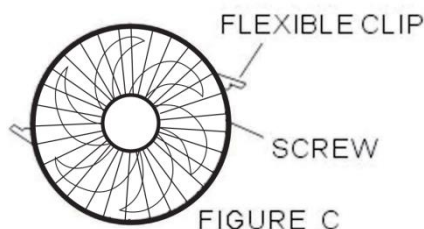


4. How to operate the fan


① How to use the speed

The speed is from low to high, turn the switch clockwise to adjust the desired speed.

② How to use the oscillation function this orbit fan blows in a 360 degree cycle, the range of blowing can be adjusted. Pull the oscillation pull switch for oscillation, the fan will be in stop position when you pull this switch again.

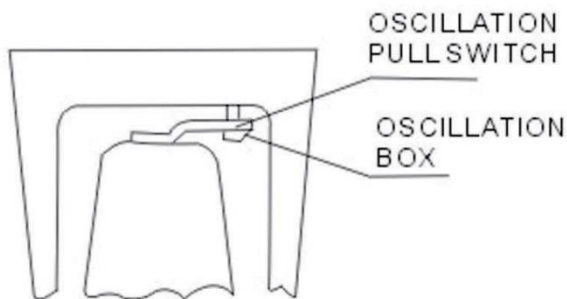


5. Warning

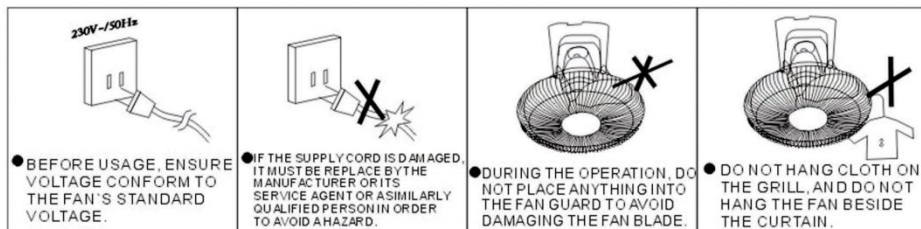

- ① The fan is to be fixed by a qualified person.
- ② Always connect to the power outlet after fixing the fan.
- ③ Before moving the fan ensure that it is powered off.
- ④ Be sure to unplug the fan unit from power supply before cleaning the fan.
- ⑤ Always power off the fan when not in use.
- ⑥ To check the fan hanging system every six months.
- ⑦ As the orbit fan is connected directly to the mains hence this is supplied without a safety plug.

6. HOW TO MAINTAIN THE FAN

- ① Please disconnect the fan unit from power supply before maintenance.
- ② Do not use solvents such as gasoline to clean the unit.
- ③ Please add a few drops of lubricant to the base of the motor shaft after cleaning to extend the motor life.
- ④ To pack the fan unit well and save it in the dry up place.

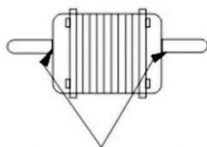

Put some oil
to this place


HOW TO CLEAN

WARNING: Ensure that the fan is switched off from the supply mains before removing the guard.

1. Please disconnect the fan unit from power supply before cleaning it.
2. Only clean the surface of fan body with mild detergent and soft cloth. Please disassemble fan guard and blade from fan body before cleaning them. After drying up, it may be reassembled.
3. Please add a few drops of lubricant to the base of motor shaft after cleaning to extend motor life.



QUALITY EXPERIENCE

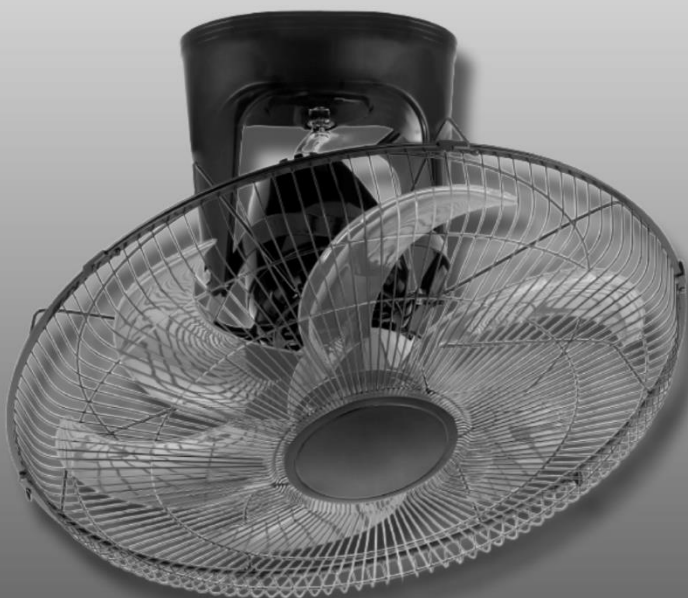

18 Inch Orbit Fan
Model: NL-3134BL

فارسی ☐
English ☐