




## HOW TO USE

- 1** Remove the cap, rinse the inner side spout, cap of the product with warm water.

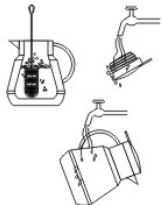

- 3** Pour out the water. Pour your beverage into the product. Fill the product to 2cm from the spout to maintain the temperature for longer time.



- 2** Pre-heat or pre-cool the container with water to ensure efficient use and to reduce the risk of breakage of the glass liner. Never use microwave or conventional ovens for this purpose.

- 4** When making tea, we recommend pouring hot water into the product and using tea bags only. Do not put tea leaves into the product directly.

- 5** Fit the cap onto the products.



- 6** Pour beverage

- Push button type—press the push button while the products is in an upright and level position. Tilt the product while pressing the lever to pour the beverage.



- Screw type—twist the cap until you can pour the beverage out.




- Airpot—press the push button directly to pour the beverage.



## HOW TO CLEAN

- 1** The container should be periodically cleaned. The best result are obtained using a mixture of water and bicarbonate of soda or washing up liquid. Rinse thoroughly afterwards.

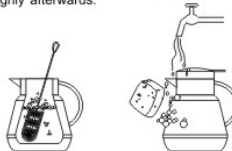

- 2** Do not immerse the whole product into water.



- 3** Never use in a dishwasher, unless stated by the manufacturer.



- 4** Do not use abrasive cleansers, scrubbers or bleach containing chlorine to avoid scratch, or dulling the finish.



## CAUTION

- 1** This product is only designed for keeping hot or cold beverages. Do not use it for any other purposes.

- 2** Do not use for the carrying or storage of ice cubes unless equipped with a plastic insert because the transportation of ice cubes might damage the inner liner. Do not use for store or carry carbonated drinks, unless clearly and positively marked by the manufacturer. In order to minimize bacterial growth, do not use to keep warm milk products or baby food.

✗ ICE DUBES

✗ CABORNATED DRINKS

✗ MILK

✗ BABY FOOD

- 3** Glass liner filter are fragile. If mishandled or dropped the inner filter may break. Do not drink directly from the container as the contents could contain broken glass, especially if there are signs of leakage.

- 4** Keep the product out of reach of children.



- 5** Keep away from any direct heat sources.



- 6** Always place the product in a horizontal and upright position. Avoid careless handling, tilting, or dropping, as damage may result or leakage may occur which could cause burns or personal injury.



## NOTE

Although we manage product quality very carefully, trouble sometimes occurs with this product. When you have this kind of problem, contact the shop where you purchased and provide them with the following information:

- 1.Product name(Model number)
  - 2.Description of the trouble(as more detailed as possible)
  - 3.Taking the product and showing to related people will be preferred
- Feel free to send any questions or comments about this product to the shop where you purchased it. We will appreciate it a lot for all your good suggestions.



۲. محفظه را از پیش گرم یا سرد کنید تا استفاده کارآمد را تضمین کرده و خطر شکستن شیشه داخلی را کاهش دهید. هیچگاه از مایکروویو یا فر معمولی برای این کار استفاده نکنید.

۴. در هنگام درست کردن چای، توصیه می‌کنیم درون محصول آب داغ بریزید و تنها از جای کیسه‌ای استفاده کنید. برگ‌های چای را مستقیماً داخل محصول قرار ندهید.

۵. درب را روی محصول محکم کنید.




۶. ریختن نوشیدنی

• برای مدل با دکمه فشاری در حالیکه محصول در وضعیت قائم و تراز قرار دارد دکمه فشاری را فشار دهید. محصول را در حالیکه شاسی را نگاه داشته‌اید کج کنید تا نوشیدنی خارج شود.



#### نحوه استفاده


۱. درپوش را بردارید، وجه داخلی لوله و درب محصول را با آب گرم شستشو دهید.

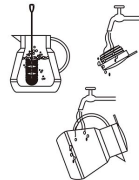

• برای مدل پیچی درب را بچرخانید تا اینکه بتوانید نوشیدنی را بریزید.




• برای مدل فشار هوا، دکمه را مستقیماً فشار دهید تا نوشیدنی را بریزید



#### نحوه تمیز کردن


۱. محفظه باید به شکلی متناوب تمیز شود. بهترین نتیجه با استفاده از ترکیب آب و جوش شیرین یا مایع شستشو حاصل می‌شود. پس از این کار بصورت کامل آب کشی انجام شود.

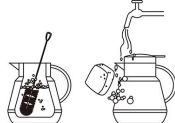

۲. کل محصول را در آب غوطه ور نسازید.



۳. هیچگاه در ماشین ظرفشویی قرار داده نشود، مگر آنکه توسط تولا پدکندۀ اظہار شده باشد.

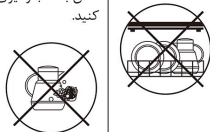

#### ملاحظات

۱. این محصول تنها برای نگاه داشتن نوشیدنی‌های

گرم یا سرد طراحی شده است. آن را برای اهداف دیگر استفاده نکنید.

۲. آن را برای حمل یا ذخیره تکه‌های یخ استفاده نکنید مگر اینکه آن را داخل یک پلاستیک قرار دهید زیرا حمل و نقل تکه‌های یخ ممکن است به فضای داخلی آسیب بزند. برای نگاه داشتن یا حمل نوشیدنی‌های گازدار استفاده نکنید، مگر آنکه بوضوح و به شکل مساعدی از سوی تولید کننده مشخص شده باشد. به منظور به حداقل رساندن رشد باکتری، برای نگاه داشتن محصولات شامل شیر گرم یا غذای نوزاد استفاده نشود.

۳. فیلتر شیشه داخلی شکننده است. در صورت افتادن امکان دارد فیلتر داخلی بشکند. بصورت مستقیم از ظرف نوشیدنی زیرا ممکن است در محتویات شیشه شکسته باشد، بویژه اگر نشانه‌هایی از نشی وجود دارد.

۴. محصول را دور از دسترس کودکان نگاه داشته شود.



۵. دور از هر منبع مستقیم گرمایشی نگاه داشته شود.

۶. همواره محصول را در وضعیت تراز و قائم قرار دهید. از حمل بی احتیاط، کج کردن، یا انداختن اجتناب شود زیرا ممکن است به آسیب منجر شود یا ممکن است دچار نشی شود که می‌تواند منجر به سوختگی یا آسیب فردی شود.



#### تکنه

اگرچه ما کیفیت محصول را بسیار با دقت مدیریت کردیم، گاهی مشکلاتی در مورد محصول اتفاق می‌افتد. هنگامی که از این دست مشکلات داشتید، با فروشگاهی که از آن خرید کرده تماس بگیرید و اطلاعات زیر را در اختیار آنها قرار دهید:

۱. نام محصول (شماره مدل)

۲. توصیف مشکل (تا جای ممکن با جزئیات بیشتر)

۳. بردن محصول و نشان دادن آن به افراد مرتبط ارجحیت دارد

برای هر سال هرگونه سوال یا نظر در مورد این محصول به فروشگاهی که این محصول را از آن خریدید راحت باشید. ما قدرتان تمامی پیشنهادات خوب شما خواهیم بود.