

 **NEW LAND®**





New Generation of Appliance



آسیاب رومیزی
مدل NL-2470S

فارسی ☐
English ☐

توصیف قطعات:

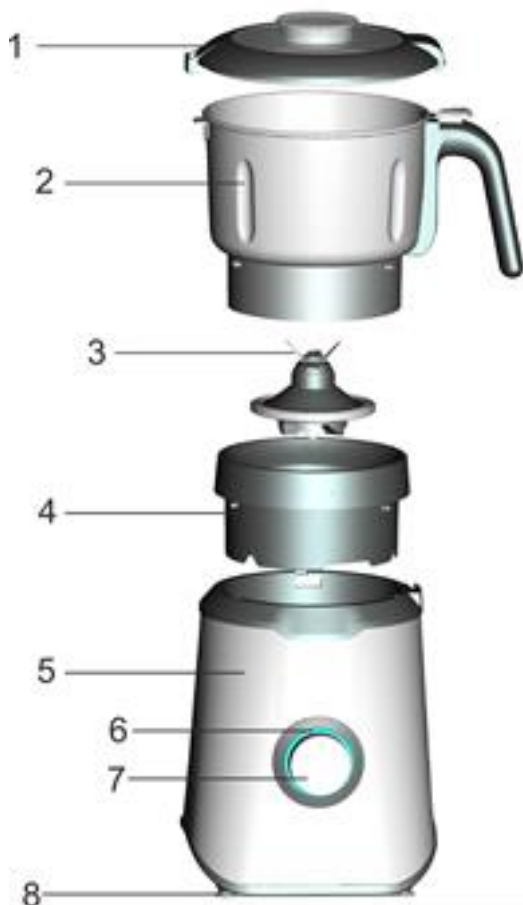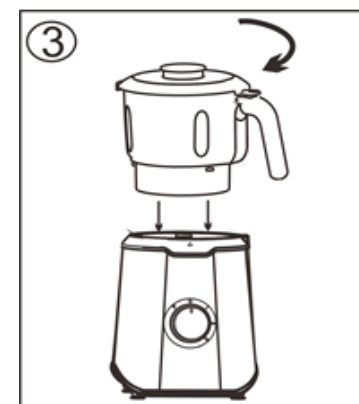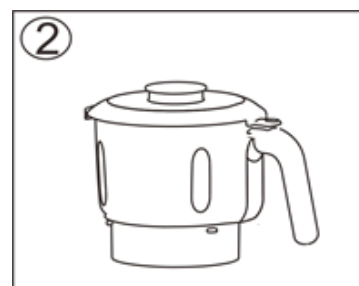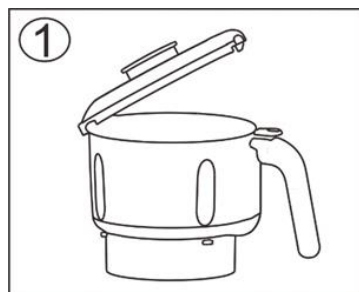

۱-درب
۲-کاسه ضدزنگ
۳-تیغه
۴-پایه کاسه
۵-بدنه
۶-چراغ شاخص LED
۷-دکمه شروع
۸-پایه لاستیکی

توصیه‌های مهم ایمنی



هنگام استفاده از وسایل خانگی برقی، به‌منظور کاهش خطر آتش‌سوزی و شوک الکتریکی و آسیب رسیدن به افراد، هشدارهای اولیه ایمنی باید لحاظ گردد، که به‌صورت زیر است:

باید تمام هشدارهای ایمنی زیر را مدنظر قرار دهید:

هشدار: تیغه‌های چاقو بسیار تیز هستند. در کار کردن با آن‌ها دقت کنید.

- ۱- تمام دستورالعمل‌ها را بخوانید.
- ۲- برای محافظت در برابر شوک الکتریکی، سیم برق، دوشاخه یا خود دستگاه را در آب یا هر مایع دیگری قرار ندهید.
- ۳- هنگام استفاده از این وسیله در مجاورت کودکان نظارت جدی ضروری است.

- ۴- این دستگاه برای استفاده افراد (از جمله کودکان) دارای معلولیت‌های جسمی، حسی یا ذهنی و افراد فاقد تجربه و دانش کافی مناسب نیست، مگر اینکه دستورالعمل‌های مرتبط با استفاده از این دستگاه توسط یک شخص مسئولی ایمنی به آن‌ها ارائه شده باشد.
- ۵- اگر از دستگاه استفاده نمی‌کنید یا پیش از تمیزکاری حتماً آن را از برق بکشید.
- ۶- هیچ دستگاهی را در صورتی که سیم یا دوشاخه آن آسیب دیده استفاده و حتی زمانی که به هر صورتی دستگاه درست کار نمی‌کند استفاده نکنید.
- ۷- استفاده از تجهیزات جانبی توصیه نشده توسط تولیدکننده باعث نقص عملکردی می‌شود.
- ۸- از این دستگاه در فضای باز استفاده نکنید.
- ۹- نگذارید سیم برق از لبه میز یا این آویزان بوده و یا با سطوح داغ تماس داشته باشد.
- ۱۰- این دستگاه را نزدیک وسایل برقی یا گازسوز یا در یک فر حرارتی قرار ندهید.
- ۱۱- این محصول تنها برای مصارف خانگی طراحی شده است. هرگونه استفاده صنعتی، استفاده نامناسب یا عدم سازگاری با این دستورالعمل‌ها باعث می‌شود تا تولیدکننده هیچ‌گونه مسئولیت یا تضمینی در قبال محصول نداشته باشد.
- ۱۲- از غذا ساز خود در صورتی که یکی از قطعات آن شکسته باشد استفاده نکنید.

- ۱۳- این دستگاه، سیم برق یا دوشاخه آن را داخل آب یا هر مایع دیگری قرار ندهید.
 - ۱۴- اطمینان حاصل کنید که درپوش پیش از اجرای دستگاه به درستی قفل شده باشد.
 - ۱۵- هرگز مواد غذایی را هنگام کار کردن دستگاه با دست به داخل ظرف قرار ندهید. همیشه از اهرم تعبیه شده استفاده کنید.
 - ۱۶- تیغه و صفحه‌ها تیز هستند. با دقت از آن‌ها استفاده کنید. خارج از دسترس کودکان نگهداری کنید.
 - ۱۷- اگر سیم برق یا دوشاخه آسیب دیده باشد، از دستگاه خود استفاده نکنید.
 - ۱۸- برای ایمنی بیشتر، لطفاً تنها از تجهیزات جانبی اصلی و قطعات شرکتی که برای دستگاه شما مناسب هستند استفاده کنید.
 - ۱۹- هرگز تا زمانی که چاقو به طور کامل متوقف نشده باشد درب دستگاه را برندارید.
 - ۲۰- این دستگاه برای پردازش مقادیر کم طراحی شده است. از مقادیر بیش از آنچه در دستورالعمل‌های استفاده نشان داده شده استفاده نکنید.
 - ۲۱- از این دست را برای مخلوط کردن مواد غذایی ژلاتینی استفاده نکنید.
 - ۲۲- از این دستگاه بیشتر از کاربرد تعریف شده استفاده نکنید.
 - ۲۳- به منظور ایمنی بیشتر، این دستگاه با استانداردهای لوازم خانگی، مقررات و قوانین مربوط به ولتاژهای کم فشار، سازگاری الکترومغناطیسی، محیط زیست و بسیاری دیگر سازگاری دارد.
- این دستورالعمل‌ها را پیش خود نگه دارید.

استفاده از این وسیله خانگی

قبل از اولین استفاده، قطعات مختلف دستگاه را تمیز کنید.

توجهات:

- دکمه شروع به شما امکان آغاز به کار با ۳ سرعت را می‌دهد:
 - سرعت ۱ (کم): در وضعیت ۱ بچرخانید.
 - سرعت ۲ (متوسط): در وضعیت ۲ بچرخانید.
 - سرعت ۳ (سریع): در وضعیت ۳ بچرخانید.
- عملکرد ضربه‌ای

خرد کردن و مخلوط کردن

- مواد غذایی را داخل محفظه ریخته و قلاب‌های درب و کاسه فلزی ضدزنگ را قفل کنید، و سپس درب را فشار داده تا صدای بسته شدن قفل ایمنی را بشنوید (شکل ۱). برای بررسی کردن قفل بودن درب سعی کنید آن را باز کنید (شکل ۲). کاسه فلزی ضدزنگ را داخل دسته قرار داده و به‌صورت ساعت‌گرد بچرخانید (شکل ۳).
- دستگاه را به برق متصل کرده و دکمه شروع را با سرعت موردنیاز خود بچرخانید.
- در پایان فرایند آماده‌سازی، دکمه را در وضعیت ۰ قرارداد، دستگاه را از برق جدا کنید و تا زمانی که تیغه‌ها به‌صورت کامل متوقف شوند صبر کنید.
- کاسه فلزی ضدزنگ را جدا کرده و درب آن را بردارید، سپس مواد غذایی را خارج کنید.

هشدار: ماکسیمم زمان پردازش مواد غذایی نباید از ۱۰ ثانیه استفاده پیوسته تجاوز کند. برای رسیدن به زمان‌های پردازشی کمتر، از این دستگاه به صورت ضربه‌ای استفاده کنید و هر ۱۰ ثانیه وقفه ایجاد کنید.

هشدار: از دستگاه به صورت خالی استفاده نکنید.

هشدار: قبل از تهیه ماده غذایی از وارد کردن مواد غذایی گرم داخل کاسه خودداری کنید، چند دقیقه صبر کنید تا ماده غذایی سرد شود.

هشدار: قبل از خوردن یا مصرف مواد غذایی مخلوط شده، دقت کنید که تمامی مواد غذایی به خوبی مخلوط شده باشند.

اطلاعات عمومی:

برای گرفتن نتیجه بهتر: اطمینان حاصل کنید که میزان مواد غذایی به صورت کامل هنگام خرد کردن مواد غذایی جامد تیغه‌ها را پوشش داده باشند.

مراقبت و تمیزکاری





- همیشه قبل از هر کاری دستگاه را از برق بکشید.
- تنها از اسفنج مرطوب برای تمیز کردن موتور استفاده کنید. هرگز موتور را داخل آب، یا زیر آب جاری قرار ندهید.
- کاسه، تیغه و درب همگی می‌توانند در ماشین ظرفشویی (سبد بالایی) تمیز شوند.

مشخصات فنی

ولتاژ: 220-240V~50/60Hz

توان برق: 800W

کلاس II

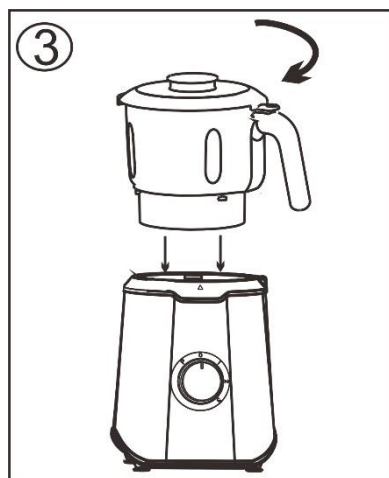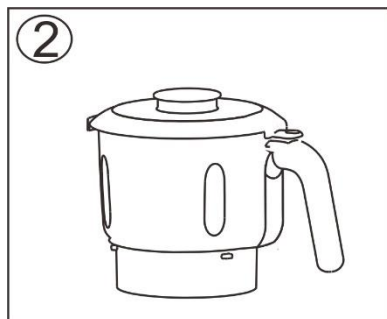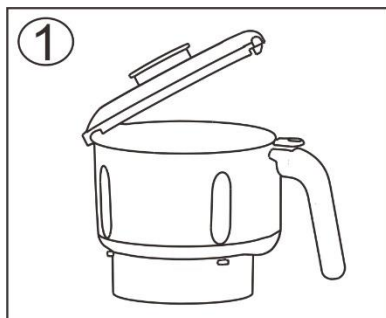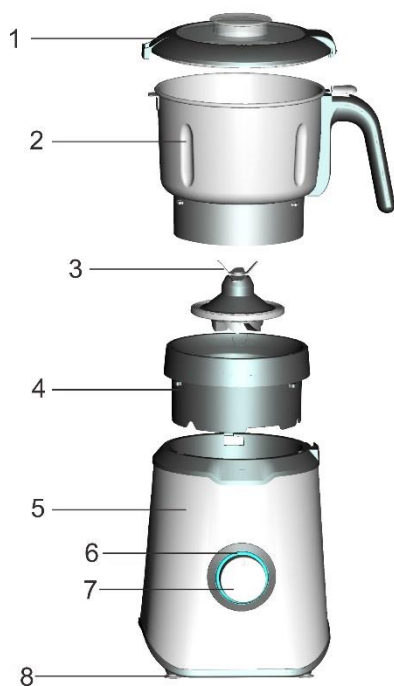DESCRIPTION:

1. Lid
2. Stainless Steel Bowl
3. Blade
4. Bowl Holder
5. Body
6. LED Indicator Light
7. Start Knob
8. Rubber Feet

Important Safeguards



When using electrical appliances, to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including the following:

You should respect the following safety warnings :

WARNING: The blades of the knife are extremely sharp. Handle them with caution.

1. Read all instructions carefully.
2. To protect against electric shock, do not place cord, plug or appliance in water or other liquid.

3. Close supervision is necessary when any appliance is used by or near children.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless instructions concerning use of the appliance by a person responsible for their safety.
5. Unplug from outlet when not in use and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, in case of appliance malfunctions or if the appliance has been damaged in any manner.
7. The use of accessory attachments not recommended by manufacturer may cause malfunctions.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place the appliance on or near hot gas or electric burner, or in a heated oven.
11. This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and guarantee is no more valid.
12. Do not use your food processor if any part is broken.
13. Do not put the appliance, the power cord or the plug into water or any other liquid.
14. Make sure that the cover is securely locked in place before operating the appliance.
15. Never place ingredients in the container by hand and while the appliance is in use. Always use the food pusher.
16. The blade and discs are sharp. Handle carefully. Store out of reach of children.
17. If the power cord or the plug are damaged, do not use your appliance.
18. For your own safety, please use only the original accessories and spare parts which are suitable for your appliance.

19. Never remove the lid until the knife has stopped completely.
20. This appliance is designed to process small quantities. Do not exceed the quantities indicated in these instructions for use.
21. Do not use this appliance to mix glutinous food or substance.
22. Do not use appliance for other than intended use.
23. For your safety, this appliance conforms to the appliance standards, regulations and directives of Low Voltage, Electromagnetic Compatibility, Environment, etc.

SAVE THESE INSTRUCTIONS

Using Your Appliance

Before first use, clean the various parts of the appliance.

Notes:

- The start knob allows you to use 3 speeds:
 - * speed 1 (slow): rotate to position 1
 - * speed 2 (medium): rotate to position 2
 - * speed 3 (fast): rotate to position 3
 - * Pulse function.

Mincing and Blending

- Pour in the ingredients and locking the buckles of the lid and the stainless steel bowl, and then press the lid hear the security locks snap (Fig. 1). Lift the lid to check it is locking whether or not (Fig. 2). Place the stainless steel bowl into the host and turn clockwise (Fig. 3).

- Plug in the appliance and rotate the start knob to which speed you need.
- At the end of preparation, rotate the start knob to position 0, unplug the appliance and wait until the blades come to a complete stop.
- Remove the stainless steel bowl and take off the lid, then pour out the ingredients.



CAUTION: Maximum time of processing should not exceed 10 seconds continuous use. In order to achieve below processing times, use the appliance with pulses and intermediate 10 seconds pauses.



CAUTION: DO NOT OPERATE THE UNIT WHEN EMPTY.



CAUTION: DO NOT PUT HOT INGREDIENTS INTO THE BOWL. BEFORE FOOD PREPARATION, ALLOW FOOD TO COOL DOWN FOR A FEW MINUTES.



CAUTION: Before you eat or serve blended food, please always check for ingredients that might have not been blended adequately.

GENERAL:

For better results: please make sure that the quantity of ingredients fully covers the blade while chopping solid food.

Care and Cleaning

- Always unplug the appliance first.
- Only use a damp sponge to clean the motor unit. Never place it in water, or under running water.
- The bowl, the blade and the lid can all be cleaned in the dishwasher (upper basket).

TECHNICAL SPECIFICATION

Voltage: 220-240V~50/60Hz

Power: 800W

Class II





QUALITY EXPERIENCE



TABLE BLENDER

مدل NL-2470S

فارسی ☐

English ☐