

 **NEW LAND®**


New Generation of Appliance



قهوه خردکن
مدل NL-2491S

فارسی ☐
English ☐

توصیف قطعات:

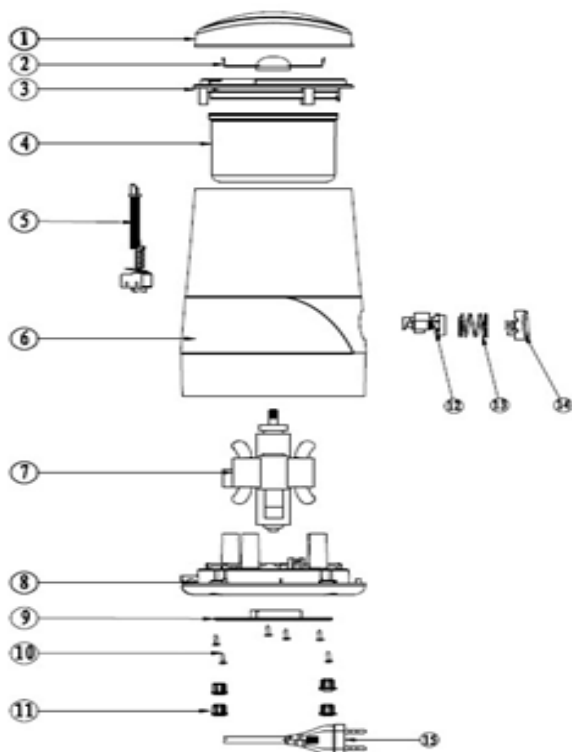

۱-درب	۹- حلقه جمع کننده سیم برق
۲- تیغه	۱۰- پیچ
۳- طوقه ثابت	۱۱- پایه پلاستیکی
۴- کاسه	۱۲- سوئیچ
۵- سویچ ایمنی	۱۳- فنر
۶- بدنه	۱۴- دکمه «خاموش/روشن»

۷- موتور	۱۵- سیم برق
۸- پنل زیرین	

ایمنی

هنگام استفاده از وسایل خانگی برقی، به منظور کاهش خطر آتش سوزی و شوک الکتریکی و آسیب رسیدن به افراد، هشدارهای اولیه ایمنی باید لحاظ گردد. لطفاً قبل از کار کردن با این محصول حتماً این دستورالعمل‌ها را بخوانید، این دستورالعمل‌ها برای این منظور نوشته شده‌اند که بهترین نتیجه را از خرید خود داشته باشید.

- ۱- تمام دستورالعمل‌ها را بخوانید.
- ۲- قبل از اتصال به جریان برق، از سازگاری ولتاژ برق مورد استفاده با آنچه روی برچسب دستگاه نوشته شده اطمینان حاصل کنید.
- ۳- هنگام استفاده از این وسیله در مجاورت کودکان نظارت جدی ضروری است. کودکان نباید از این وسیله خانگی استفاده کنند.
- ۴- تیغه‌ها تیز هستند. احتیاط کنید.
- ۵- هرگز دستگاه را در حالت عملیات رها نکنید.
- ۶- همواره پیش از سرهم‌بندی، جدا کردن یا تمیز کردن دستگاه و زمانی که کسی مراقب دستگاه نیست حتماً آن را از برق بکشید.
- اگر سیم برق آسیب‌دیده است، باید توسط تولیدکننده، سرویس‌کار یا شخص دارای صلاحیت مشابهی برای جلوگیری از هرگونه خطر احتمالی تعویض گردد.

- ۷- پیش از تغییر دادن تجهیزات جانبی و کار کردن با قطعاتی که حین استفاده جابه‌جا می‌شوند حتماً دستگاه را از برق بکشید.
- ۸- استفاده از تجهیزات جانبی توصیه نشده و یا خریداری شده از منبعی جز تولیدکننده ممکن است باعث آتش‌سوزی، شوک الکتریکی یا جراحت فردی گردد.
- ۹- نگذارید سیم برق از لبه میز یا اپن آویزان بوده و یا با سطوح داغی مانند اجاق‌گاز تماس داشته باشد.
- ۱۰- قبل از سر هم کردن کامل دستگاه آن را به برق نزنید و همیشه پیش از جدا کردن قطعات وسیله خانگی و کار کردن با تیغه‌ها آن را از برق بکشید.
- ۱۱- ماکسیم ظرفیت برابر ۶۰ گرم است. عملیات در مدت کوتاهی انجام شود. از این وسیله بیش از یک دقیقه استفاده نکنید و همیشه حداقل ۱۰ دقیقه استراحت بدهید.
- این وسیله نباید توسط کودکان استفاده شود. این دستگاه و سیم برق آن را خارج از دسترس کودکان قرار دهید.
- وسایل خانگی در صورتی توسط افراد دارای معلولیت فیزیکی، حسی و ذهنی و افراد فاقد تجربه و دانش کافی قابل استفاده هستند که نظارت یا دستورالعمل‌های مرتبط با استفاده از وسیله خانگی به روشی ایمن به آن‌ها ارائه شده باشد و نسبت به خطرهای احتمالی آگاه باشند.
- کودکان نباید با این دستگاه بازی کنند.
- ۱۲- بیش از سه نوبت بدون وقفه عملیات پردازش انجام ندهید. بگذارید پیش از ادامه فرآیند پردازش دستگاه تا دمای اتاق خنک شود.

- ۱۳- از این دستگاه در محیط باز استفاده نکنید.
- ۱۴- اگر از دستگاه استفاده نمی کنید پیش از این که قطعات آن را از همدیگر جدا کنید و یا قبل از تمیزکاری، حتماً جریان برق را قطع کنید.
- ۱۵- برای جلوگیری از آتش سوزی، شوک الکتریکی و آسیب های فردی، مخلوط کن، سیم آن و دوشاخه را در آب یا مایع دیگری قرار ندهید.
- ۱۶- این دستگاه فقط برای مصارف خانگی طراحی شده است.
- ۱۷- هشدار: در صورت استفاده نادرست احتمال آسیب های بالقوه وجود دارد.

دستورالعمل ها

بررسی های اولیه:

- ۱- پس از جدا کردن بسته بندی، مطمئن شوید که محصول کامل و بدون ایراد بوده و تمام لوازم جانبی وجود داشته باشد. اگر آسیب ظاهری وجود دارد از دستگاه استفاده نکنید. با مرکز خدمات فنی تماس بگیرید.
 - ۲- متصل کردن دستگاه
- بررسی کنید که ولتاژ تغذیه برق اصلی و مقدار نشان داده شده روی برچسب رتبه بندی مطابقت داشته باشد.
- اگر پریز برق با دوشاخه دستگاه مطابقت ندارد، پریز را با نوع مناسبی جایگزین کنید، یا دوشاخه را توسط یک متخصص دارای صلاحیت تعویض کنید.

استفاده از دستگاه

- ۱- دستگاه را روی یک سطح صاف قرار دهید.
- ۲- درب محفظه را در جهت خلاف عقربه های ساعت چرخانده و آن را بردارید.
- ۳- این میزان مدنظر دانه های قهوه را داخل ظرف بریزید.

- ۴- درب را با چرخاندن در جهت عقربه‌های ساعت به‌طور کامل ببندید. یک وسیله امنیتی وجود دارد که مانع از روشن شدن دستگاه در صورتی که درب دستگاه به‌درستی قرار داده نشده باشد خواهد شد.
- ۵- پیش از قرار دادن درپوش دستگاه را روشن نکنید.
- ۶- میزان موردنیاز از سیم برق را باز کرده و دوشاخه را وارد پریز کنید.
- ۷- برای فعال کردن قهوه ساز دکمه «ON/OFF» را فشار داده و تا زمانی که سطح مطلوبی از آسیاب به دست آید آن را نگه دارید.
- ۸- دستگاه را از برق بکشید، برای گرفتن قهوه آسیاب شده یک ظرف آماده داشته باشید.

توصیه‌هایی برای استفاده

- ۱- همیشه درب محفظه دانه‌ها را به‌صورت پلمپ شده بسته نگه دارید تا طعم و بوی دانه‌های قهوه حفظ شود.
- ۲- تنها میزان موردنیاز قهوه را در یک‌زمان آسیاب کنید.
- ۳- هرگز محفظه مربوط به دانه‌ها را بیش از حد پر نکنید.
- مانند تمام علائم عمومی، یک قاشق غذاخوری دانه قهوه برای هر فنجان در نظر بگیرید (بدین معنا که ۴ قاشق دانه قهوه برای ۴ فنجان). به‌صورت طبیعی، مقادیر مطلوب، آن‌طور که بر مبنای ذائقه فردی تعریف می‌شود، باگذشت زمان قابل‌شناسایی خواهد بود.
- ۴- پودر قهوه باقی‌مانده در دستگاه ممکن است کهنه‌شده و بر طعم و تازگی استفاده‌های بعدی تأثیرگذار باشد. قبل از هر استفاده حتماً کاسه مربوط به آسیاب، تیغه‌ها و درپوش را تمیز کنید.

۵- این دستگاه تنها با مواد غذایی ترد و خشک قابل استفاده است. دانه‌های روغنی (مانند بادام زمینی) یا محصولات سخت (مانند برنج) را با این دستگاه آسیاب نکنید.

تمیزکاری

- ۱- مطمئن شوید پیش از تمیزکاری دستگاه را از پریز کشیده باشید. برای جلوگیری از شوک الکتریکی، سیم برق، دوشاخه یا هر واحد دیگری را در آب یا سایر مایعات قرار ندهید.
- ۲- باقی مانده پودر قهوه را با استفاده از یک قلم‌مو جدا کنید. به تیغه دست نزنید چراکه تیز است.
- ۳- دستگاه را داخل آب قرار ندهید.
- ۴- برای جدا کردن باقی مانده یا بوی دانه‌های استفاده شده، یک قاشق غذاخوری نمک خوراکی را در یک کاسه آسیاب کرده و سپس با پارچه تمیز کنید.
- ۵- تمام قطعات جداشونده برای شست‌وشو در ماشین ظرفشویی در قفسه بالایی ایمن هستند. قطعات را در قفسه‌های پایین قرار ندهید. هرگز واحد اصلی این آسیاب را در آب یا سایر مایعات غوطه‌ور نکنید.
- ۶- سطح خارجی این دستگاه را با استفاده از یک پارچه نرم تمیز کنید.
- ۷- سیم اضافی را با فشردن دکمه به حلقه جمع کننده سیم برگردانید.


مشخصات فنی

ولتاژ: 220~240V

توان برق: 200W

کلاس II

DESCRIPTION :

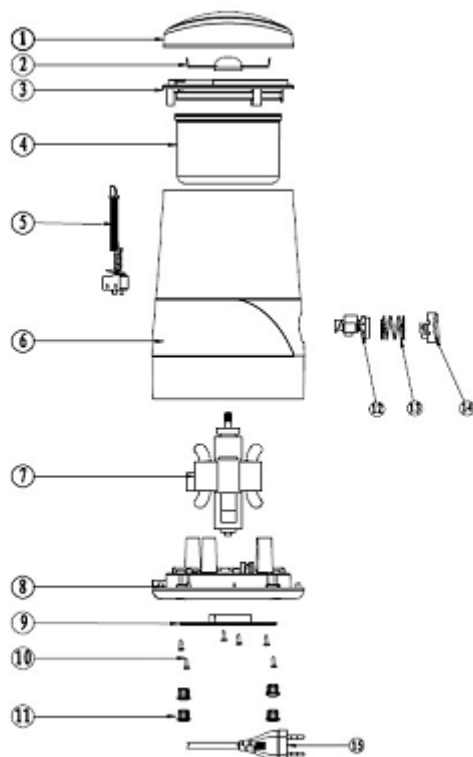

SAFETY

When using this electrical appliances, in order to reduce the risk of fire and electric shock and/or injury to persons, basic safety precautions should be followed. Please ensure you read these instruction before you operate this product, they have been written to ensure you get the very best from your purchase.

You should respect the following safety warnings :

1. Read all instructions.
 2. Before plugging into a socket, check whether your voltage corresponds to the rating label on the appliance.
 3. Close supervision is necessary when any appliance is used near children. Children should not use this appliance.
 4. Blades are sharp. Handle carefully.
 5. Never let the appliance run unattended.
 6. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- ⚠ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
 8. The use of accessory attachments not recommended or sold by the manufacturer may result in fire, electric shock or personal injury.
 9. Do not let cord hang over edge of table or counter, or touch hot surface including the stove.
 10. Don't plug the appliance into the power supply until it is fully assembled and always unplug before disassembling the appliance or handle the blade.

1、 Lid	9、 Cord storage reel
2、 Blade	10、 Screw
3、 Fixed collar	11、 Rubber feet
4、 Bowl	12、 Switch
5、 Safety switch	13、 Spring

11. Max capacity 60g. Short-time operating. Use the appliance for no

6、 Body	14、 “ON/OFF” Button
7、 Motor	15、 Power cord
8、 Bottom panel	

longer than 1minute, then take at least a 10 minutes break.

- ⚠ This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall not play with the appliance.

12. Do not process more than three batches without interruption. Let the appliance cool down to room temperature before you continue to process.

13. Do not use outdoors.

14. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.

15. To protect against fire, electric shock and personal injury, do not immerse blender, its cord or plug in water or other liquid.

16. This appliance is intended for household only.

17. Warn : There exist potential injury from misuse.

INSTRUCTIONS

PRELIMINARY CHECKS :

1. After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact with the technical assistance service.

2. Connecting the appliance

Check that the mains power supply voltage corresponds to the value indicated on the rating label.

If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type, or change the plug by a qualified professional.

USING THE APPLIANCE

1. Place the appliance on a flat surface.

2. Turn the container lid in an anti-clockwise direction and lift it.

3. Pour the desired amount of coffee beans into the container.

4. Tighten the lid by turning it fully home in a clockwise direction. A safety device prevents switch-on if the lid is not well inserted.

5. Do not attempt operation without the cover being in place.

6. Extract the necessary amount of wire and introduce the plug into the socket.

7. Press button ‘ON/OFF’ to active the coffee grinder and hold it down until the desired level of grinding is obtained .

8. Unplug the unit, have a container ready to hold your ground coffee.

RECOMMENDATIONS FOR USE

1. Always keep the lid of bean container closed hermetically in order to preserve the flavor and the aroma of the coffee beans.
2. Only grind the amount of coffee necessary at the time.
3. Never overfill the bean container.

As per general indications, consider one tablespoon of beans per cup (e.g. 4 spoons of coffee beans for 4 cups). Naturally, optimal amounts, defined on the basis of personal taste, will be identified with time.

4. Coffee grounds left in your grinder can become stale and affect the flavor of freshly. Be sure to clean grinding bowl, blades and cover after each use.
5. This grinder can only handle dry, brittle foods. Do not grind oil seeds (e.g. peanuts) or hard products (e.g. rice).

CLEANING

1. Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid.
2. Remove ground coffee residues using the brush. Do not touch the blade because it is sharp.
3. Do not immerse into water.

4. To remove residue or aromas left behind by nuts, grind one tablespoon of baking soda in the bowl then wipe thoroughly.
5. All removable parts are dishwasher-safe on the top rack. Do not put parts on bottom shelf. Never immerse the grinder base unit in water or other liquid.
6. Clean the exterior of the appliance using a soft cloth.
7. Store excess cord by pushing a section at a time into the cord storage area in the base of the unit.

TECHNICAL SPECIFICATION

Voltage: 220~240V 50-60Hz, Power:  200W

Class II



QUALITY EXPERIENCE



COFFEE GRINDER
مدل NL-2491S

فارسی ☐
English ☐