

 **NEW LAND**

New Generation of Appliance



آسیاب قهوه


مدل: NL-2790BS

فارسی ☐

English ☐

لطفاً دستورالعمل زیر را با دقت مطالعه کرده و به خوبی از آن نگهداری کنید.

شرح:

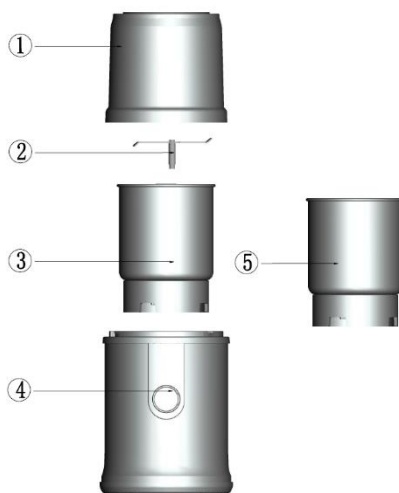

۱ درب	۲ تیغه
۳ کاسه	۴ پایه دستگاه
۵ کاسه	

ایمنی

برای کاهش خطر آتش‌سوزی و برق‌گرفتگی و یا صدمه به افراد، هنگام استفاده از این نوع وسایل برقی باید اقدامات احتیاطی اصلی صورت گیرد. لطفاً قبل از استفاده

از این محصول حتماً دستورالعمل‌هایی که برای اطمینان از دستیابی شما به بهترین نتیجه از خریدتان نوشته شده‌اند را مطالعه کنید.

باید به هشدارهای ایمنی زیر توجه کنید:

۱. تمام دستورالعمل‌ها را بخوانید.

۲. قبل از اتصال دستگاه به پریز، بررسی کنید که آیا ولتاژ شما با ولتاژ برچسب شده روی آن منطبق است یا خیر!

۳. استفاده از هر وسیله‌ای در نزدیکی کودکان باید با نظارت دقیق انجام شود. کودکان نباید از این دستگاه استفاده کنند.

۴. تیغه‌ها تیز هستند. در استفاده از آن‌ها دقت کنید.

۵. هرگز بدون مراقبت، از دستگاه استفاده نکنید.

۶. هنگامی که دستگاه بدون مراقبت رها می‌شود و قبل از مونتاژ، جداسازی یا تمیز کردن، آن را از برق جدا کنید.

در صورت آسیب دیدن سیم برق، باید توسط تولید کننده، نمایندگی خدمات یا افراد واجد شرایط مشابه تعویض شود تا از بروز خطر جلوگیری کند.

۷. قبل از تعویض لوازم جانبی یا تماس با قطعات متحرک دستگاه، آن را خاموش کرده و از برق جدا کنید.

۸. استفاده از لوازم جانبی که توسط تولید کننده توصیه یا فروخته نمی‌شود ممکن است باعث آتش‌سوزی، برق‌گرفتگی یا آسیب دیدگی فرد شود.

۹. هرگز نباید سیم برق دستگاه روی لبه میز یا پیشخوان آویزان باشد یا به سطوح داغ از جمله اجاق گاز برخورد کند.

۱۰. تا زمانی که دستگاه به طور کامل مونتاژ نشده است آن را به برق وصل نکنید و قبل از جدا کردن دستگاه یا دست زدن به تیغه هم آن را از برق بکشید.

۱۱. بیش از حداکثر ظرفیت تعیین شده برای دستگاه، از آن استفاده نکنید. بیش از ۱ دقیقه از دستگاه استفاده نکنید، سپس حداقل ۲ دقیقه به آن استراحت دهید.

این دستگاه نباید توسط کودکان استفاده شود. دستگاه و سیم آن را دور از دسترس کودکان قرار دهید.

در صورتی که بر افراد کم‌توان جسمی، حسی یا ذهنی و یا بدون دانش و تجربه نظارت شده یا دستورات ایمنی استفاده از دستگاه به آن‌ها آموزش داده شده باشد و نسبت به خطرات آن آگاه باشند چنین افرادی می‌تواند از این وسیله استفاده کنند. کودکان نباید با دستگاه بازی کنند.

۱۲. بیش از سه دفعه بدون وقفه از دستگاه استفاده نکنید. قبل از ادامه کار، اجازه دهید که دستگاه تا حد دمای اتاق خنک شود.

۱۳. در فضای باز از این دستگاه استفاده نکنید.

۱۴. هنگامی که از دستگاه استفاده نمی‌شود، قبل از مونتاژ یا جدا کردن قطعات و قبل از تمیز کردن، دستگاه را از برق بکشید.

۱۵. برای پیشگیری از آتش سوزی، برق گرفتگی و آسیب‌های شخصی، هرگز مخلوط‌کن، سیم یا دوشاخه آن را در آب یا مایعات دیگر قرار ندهید.

۱۶. این دستگاه فقط برای مصارف خانگی در نظر گرفته شده است.

۱۷. هشدار: در صورت استفاده نادرست از دستگاه، احتمال آسیب دیدگی وجود دارد.

۱۸. این دستگاه برای استفاده در مصارف خانگی و موارد مشابه زیر در نظر گرفته شده است:

- آشپزخانه کارکنان در مغازه‌ها، ادارات و سایر محیط‌های کاری؛

- خانه باغ‌ها؛

- توسط مشتریان در هتل‌ها، متل‌ها و سایر محیط‌های مسکونی؛

- استراحتگاه‌ها.

دستورالعمل‌ها

بررسی‌های اولیه:

۱. پس از باز کردن بسته‌بندی، مطمئن شوید که محصول کامل و سالم بوده و تمام لوازم جانبی آن موجود است. اگر دستگاه دارای آسیب دیدگی قابل مشاهده است، از آن استفاده نکرده و با خدمات فنی تماس بگیرید.

۲. اتصال دستگاه به برق

بررسی کنید که آیا ولتاژ منبع تغذیه اصلی با ولتاژ مشخص شده روی برچسب دستگاه مطابقت دارد یا خیر.

در صورت عدم انطباق پریز برق با دو شاخه دستگاه، از یک سوکت مناسب استفاده کنید یا اینکه دو شاخه توسط متخصص واجد شرایط تعویض شود.

استفاده از دستگاه

این وسیله برای دانه‌های قهوه، مغزها، گیاهان، دانه‌ها و همچنین برای اجزاء تشکیل دهنده مواد کاملاً مناسب است.

۱. دستگاه را روی یک سطح صاف قرار دهید.

۲. ظرف را مستقیماً روی دستگاه قرار دهید.

۳. مقدار دلخواه از دانه‌های قهوه را در ظرف بریزید.


۴. درب را در خلاف جهت عقربه‌های ساعت چرخانده و آن را سفت کنید. یک وسیله ایمن در صورتی که درب به خوبی جا نیفتاده باشد، روشن نمی‌شود.

۵. بدون قرار دادن پوشش دستگاه در جای خود شروع به کار نکنید.

۶. مقدار لازم از سیم دستگاه را خارج کرده و دو شاخه را به پریز بزنید.

۷. دکمه سوئیچ را فشار دهید تا آسیاب شروع به کار کند و تا زمانیکه به سطح آسیاب مورد نظر برسید دکمه را نگه دارید.

۸. دستگاه را از برق کشیده و یک ظرف آماده برای خالی کردن و نگهداری قهوه آسیاب شده داشته باشید.

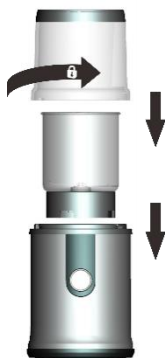

توصیه‌هایی برای استفاده

۱. برای حفظ طعم و عطر دانه‌های قهوه، همیشه درب ظرف دانه‌ها را کاملاً بسته نگه دارید.

۲. هر بار فقط به مقدار لازم در آن زمان، قهوه آسیاب کنید.

۳. هرگز ظرف قهوه‌ساب را بیش از حد پر نکنید.

همان طور که علائم نشان می‌دهند، برای هر فنجان قهوه یک قاشق غذاخوری دانه‌های قهوه در نظر بگیرید (مثلاً ۶ قاشق قهوه برای ۶ فنجان). طبیعتاً مناسب‌ترین میزان که بر اساس سلیقه شخصی تعریف می‌شود، در طی زمان مشخص می‌شود.

۴. تفاله‌های باقی‌مانده از قهوه در آسیاب شما می‌تواند کهنه شده و بر طعم تازه قهوه تأثیر بگذارد. بنابراین پس از هر بار استفاده حتماً کاسه، تیغه‌ها و پوشش آن را تمیز کنید.

۵. این دستگاه فقط می‌تواند غذاهای خشک و شکننده را آسیاب کند. دانه‌های روغنی (مانند بادام‌زمینی) یا محصولات سفت (مانند برنج) را با آن آسیاب نکنید.

تمیز کردن

۱. حتماً قبل از تمیز کردن، دستگاه را از برق بکشید. برای محافظت در برابر برق‌گرفتگی، سیم، دو شاخه یا دستگاه را در آب یا مایعات شناور نکنید.

۲. باقی‌مانده قهوه آسیاب شده را با استفاده از برس تمیز کنید. تیغه‌ها تیز هستند، آن‌ها را لمس نکنید.

۳. دستگاه را در آب شناور نکنید.

۴. برای از بین بردن تفاله یا بوی باقی‌مانده از دانه‌های قهوه، یک قاشق غذاخوری جوش شیرین را در کاسه آسیاب کرده سپس کاملاً آن را تمیز کنید.

۵. قسمت بیرونی دستگاه را با استفاده از یک پارچه نرم تمیز کنید.

۶. با فشار دادن قسمت ذخیره سیم در پایه دستگاه، اضافه سیم را جمع کنید.

مشخصات فنی

ولتاژ: ۲۴۰-۲۲۰ ولت / ۶۰/۵۰ هرتز / قدرت: ۵۰۰ وات / کلاس II

دفع صحیح محصول




این
زباله‌های

علامت نشان می‌دهد که این محصول نباید همراه با سایر
خانگی (در سراسر اتحادیه اروپا) دور ریخته شود. برای
پیشگیری از آسیب‌های احتمالی به محیط‌زیست یا سلامت

انسان به دلیل دفع بی‌رویه زباله، باید این محصولات به طور مسئولانه بازیافت شوند
تا امکان استفاده مجدد پایدار از منابع مادی فراهم شود. برای بازگرداندن دستگاه
مستعمل خود، لطفاً از سیستم‌های ارجاع و جمع‌آوری استفاده کنید یا با فروشگاه‌ای
که دستگاه را خریداری کرده‌اید تماس بگیرید. آنها می‌توانند این محصول را در
راستای بازیافت ایمن زیست‌محیطی به کار گیرند.

Please read carefully and keep the instruction well

DESCRIPTION:

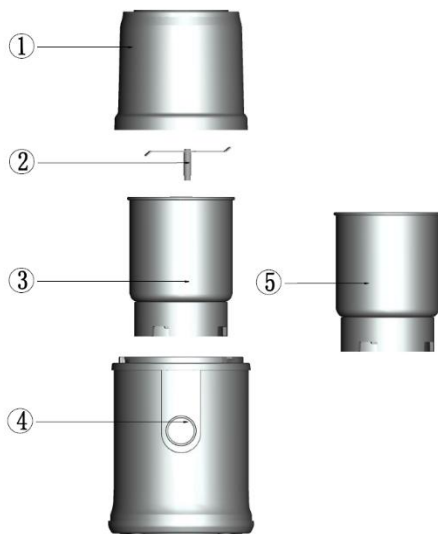

1、Lid	2、Blade
3、Bowl	4、Bottom
5、Bowl	

SAFETY

When using this electrical appliances in order to reduce the risk of fire and electric shock and/or injury to persons basic safety precautions should be followed. Please ensure you read this instruction before you

operate this product, they have been written to ensure you get the very best from your purchase.

You should respect the following safety warnings :

1. Read all instructions.
 2. Before plugging into a socket, check whether your voltage corresponds to the rating label if the appliance
 3. Close supervision is necessary when any appliance is used near children. Children should not use this appliance.
 4. Blades are sharp. Handle carefully.
 5. Never let the appliance run unattended.
 6. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
 - ⚠ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 7. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
 8. The use of accessory attachments not recommended or sold by the manufacturer may result in fire, electric shock or personal injury.
 9. Do not let cord hang over edge of table or counter, or touch hot surface including the stove.
 10. Don't plug the appliance into the power supply until it is fully assembled and always unplug before disassembling the appliance or handle the blade.
 11. The max capacity is no more than the max mark. Short-time operating. Use the appliance for no longer than 1 minute, then take at least a 2 minute break.
- ⚠ This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall not play with the appliance.

12. Do not process more than three batches without interruption. Let the appliance cool down to room temperature before you continue to process.

13. Do not use outdoors.

14. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.

15. To protect against fire, electric shock and personal injury, do not immerse blender, its cord or plug in water or other liquid.

16. This appliance is intended for household only.

17. Warn : There exist potential injury from misuse.

18. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

INSTRUCTIONS

PRELIMINARY CHECKS :

1. After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact with the technical assistance service.

2. Connecting the appliance

Check that the mains power supply voltage corresponds to the value indicated on the rating label.


If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type, or change the plug by a qualified professional.

USING THE APPLIANCE

The appliance is perfectly suited for Coffee beans, nuts, herbs, beans as well as for ingredients.

1. Place the appliance on a flat surface.
2. Place the container directly on the appliance .
3. Pour the desired amount of coffee beans into the container.
4. Tighten the lid by turning it fully home in an anti-clockwise direction. A safety device prevents switch-on if the lid is not well inserted.
5. Do not attempt operation without the cover being in place.

6. Extract the necessary amount of wire and introduce the plug into the socket.
7. Press switch button to active the coffee grinder and hold it down until the desired level of grinding is obtained .
8. Unplug the unit,have a container ready to hold your ground coffee.

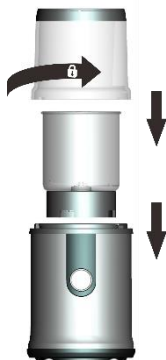

RECOMMENDATIONS FOR USE

1. Always keep the lid of bean container closed hermetically in order to preserve the flavor and the aroma of the coffee beans.
2. Only grind the amount of coffee necessary at the time.
3. Never overfill the bean container.

As per general indications, consider one tablespoon of beans per cup (e.g. 6 spoons of coffee beans for 6 cups). Naturally, optimal amounts, defined on the basis of personal taste, will be identified with time.

4. Coffee grounds left in your grinder can become stale and affect the flavor of freshly. Be sure to clean grinding bowl, blades and cover after each use.

5. This grinder can only handle dry, brittle foods. Do not grind oil seeds (e.g. peanuts) or hard products (e.g. rice).

CLEANING

1. Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid.
2. Remove ground coffee residues using the brush. Do not touch the blade because it is sharp.
3. Do not immerse into water.
4. To remove residue or aromas left behind by nuts, grind one tablespoon of baking soda in the bowl then wipe thoroughly.
5. Clean the exterior of the appliance using a soft cloth.
6. Store excess cord by pushing a section at a time into the cord storage area in the base of the unit.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50/60Hz, Power:  500W Class II

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer

where the product was purchased. They can take this product for environmentally safe recycling.



QUALITY EXPERIENCE



Coffee Grinder
Model: NL-2790BS

فارسی ☐
English ☐