



QUALITY EXPERIENCE



Egg Boiler
Model: NL-2961BS

فارسی ☐
English ☐

IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed, including the following:


1. Read all instruction before using
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or the base in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. The heating element surface is subject to residual heat after use.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.


14. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
15. Children should be supervised to avoid playing with the appliance.
16. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
17. **CAUTION:** Avoid injuries from the egg-pricking device.

Save these instructions.

For household use only

Product introduction

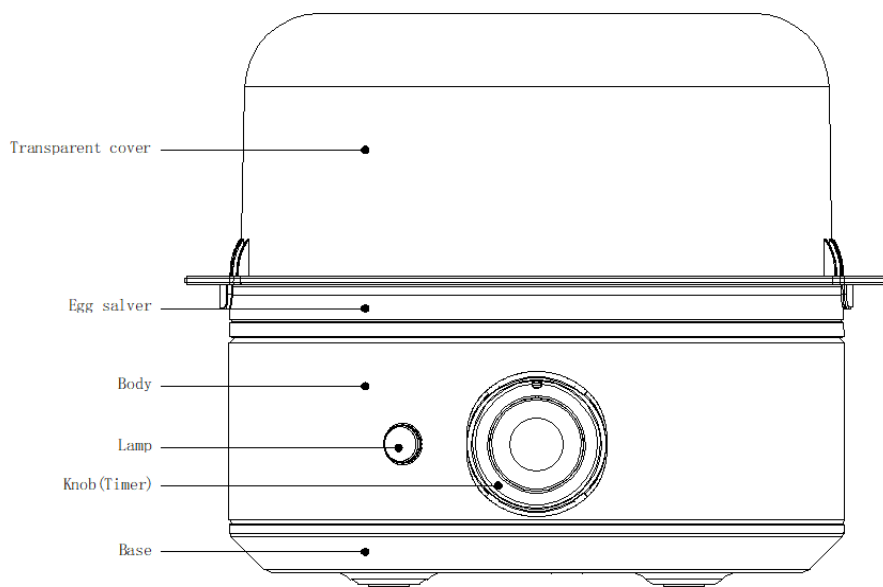

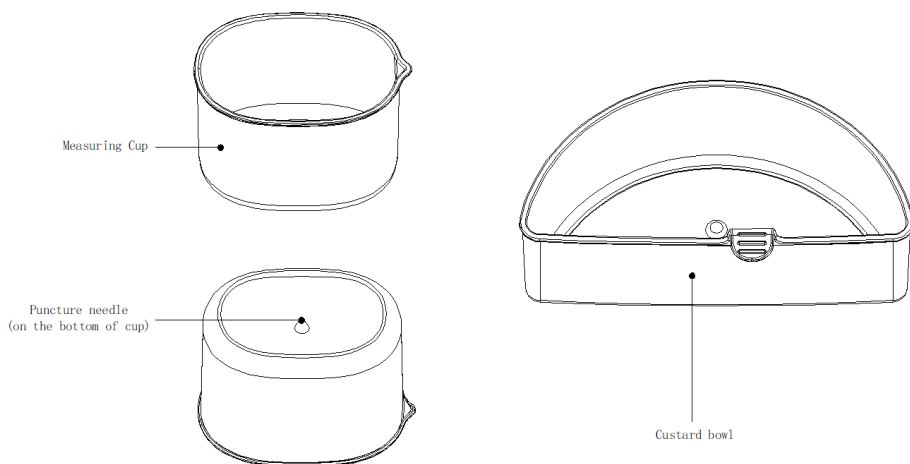

Before the first use

Before using the egg boiler at first, please clean the egg boiler completely, put the attachments such as transparent cover, measuring cup, salvers, etc. into water (also adding the proper cleanser) and clean them. Fill the appliance with a measuring cup water, assemble all parts, but do not have egg and begin to operate, when the water is boiling, discard the water.

Note: Never immerse the base in the water for cleaning. Wipe the appearance of base and the heat tray with a wild and damp cloth or cleaner, never use a poisonous cleaner.

OPERATION

Boiled egg

1. For the first time, wipe the surface of the hot plate clean and add 150ml water to the hot plate.

2. Drilled the big end of the egg with the needle on the bottom of the measuring cup. Then put the egg on the egg salver, make sure the small end of the egg is downwards. As the small end can be inserted into the hole deeper, which may give the egg more balance. Then cover the transparent cover, plug in the power source, turning the switch on"-". The indicator on the switch will be illuminated.

Caution: the eggs must be pierced before boiling otherwise the eggs may explode during cooking.

3. Plug it in and twist the knob so that the knob pointer points to the appropriate scale(rare"", medium"", well done") and the switch indicator lights up.

4. When the egg is cooked, you will hear a “ding” from the timer and the switch indicator light goes off.

Caution: After the eggs are cooked, please unplug the power to avoid safety risks.

5. Put the boiled egg into the cool water rapidly so that peeled easily, egg is at its peak flavor immediately after boiling.

Steaming egg custard

1. Break one eggs into the custard bowl, add 1~2g salt and other ingredient, some oil, mixing smooth.

2. Add 75ml water to the custard bowl and mix well.

3. Fill a hot dish with 150ml water and install an egg poacher.

4. Place the custard bowl with the egg liquid on the egg tray, cover with a clear lid, plug it in and twist the knob so that the knob pointer points to "".

5. When the egg soup is steamed, you will hear the “ding” sound of the timer, and the power indicator is off. Wait 30 seconds before taking it out.

Note : Be careful when removing the lid to prevent steam burns!!

CLEANING AND MAINTENANCE

1. Unplug the power source and allow the appliance to cool down completely before cleaning.
2. Wash the transparent cover, measuring cup, salvers in hot soapy water, rinse and dry completely.
3. Don't clean any part with abrasive cleaners such as metal scouring pads, and scouring powder
4. Wipe the appearance of base and the heat tray with a wild and damp cloth or cleaner, never use a poisonous cleaner.

Warning: Never immerse the base in the water.

5. Store the boiler at the dry location such as a table top or counter top or a cupboard shelf, the power cord may be wound under the bottom of boiler.
6. Any other servicing should be performed by an authorized service representative.

Environment friendly disposal



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center



Product Sepc:

Product name: Egg boiler	Model: NL-2961BS
Rated volts: 220-240V~	Rated frequency: 50-60Hz
Capacity: 7 eggs	Rated power: 400W

مشخصات دستگاه

مدل: NL-2961BS	نام محصول: تخم مرغ پز
فرکانس: ۵۰-۶۰ هرتز	ولتاژ: ۲۲۰-۲۴۰ ولت
توان: ۴۰۰ وات	ظرفیت: ۷ تخم مرغ

۲. روکش شفاف، فنجان اندازه‌گیری و جا تخم‌مرغی را در آب گرم و صابون بشوید و کاملاً خشک کنید.

۳. هیچ قسمتی را با پاک‌کننده‌های ساینده مانند سیم ظرف‌شویی یا پودرهای قوی شوینده نشوید.

۴. پایه زیرین و سینی حرارتی را با یک پارچه مرطوب پاک کنید. هرگز از پاک‌کننده‌های سمی استفاده نکنید.

هشدار: هرگز پایه زیرین را در آب غوطه‌ور نکنید.

۵. تخم‌مرغ پز را در محل خشکی مانند بالای میز یا روی پیشخوان یا قفسه کمد نگهداری کنید. کابل دستگاه را زیر آن بیچانید.

۶. هرگونه تعمیر دستگاه را توسط نمایندگی‌های مجاز انجام دهید.

دفع سازگار با محیط زیست

شما می‌توانید به حفاظت از محیط‌زیست کمک کنید!

لطفاً به قوانین محلی احترام بگذارید: تجهیزات الکتریکی بلااستفاده را به مرکز دفع زباله مناسب تحویل دهید.



اقدامات مهم


هنگام استفاده از وسایل برقی، اقدامات احتیاطی زیر باید رعایت شود:


۱. قبل از استفاده تمام دستورالعمل‌ها را بخوانید.
۲. به سطوح داغ دست نزنید و از دستگیره استفاده کنید.
۳. برای محافظت در برابر برق‌گرفتگی، سیم، دوشاخه یا پایه را در آب یا مایعات دیگر غوطه‌ور نکنید.
۴. اگر کودکان با دستگاه نزدیک هستند یا با آن کار می‌کنند، خیلی مراقب باشید.
۵. زمانی که از دستگاه استفاده نمی‌کنید و یا می‌خواهید آن را تمیز کنید، آن را از برق بکشید. قبل از گذاشتن یا برداشتن قطعات، صبر کنید تا دستگاه خنک شود. المنت ممکن است همچنان مقداری گرم باشد.
۶. هیچ لوازم الکتریکی را کابل یا دوشاخه آسیب‌دیده استفاده نکنید و آن را برای تعمیر نزد یک تکنسین واجد شرایط ببرید.
۷. استفاده از لوازم جانبی که توسط سازنده دستگاه توصیه نشده است ممکن است باعث ایجاد آسیب شود.
۸. از دستگاه در فضای باز استفاده نکنید.
۹. اجازه ندهید که کابل روی لبه میز یا پیشخوان آویزان شود یا با سطح داغ تماس پیدا کند.
۱۰. دستگاه را روی یا نزدیک اجاق گازی یا برقی داغ یا در فر گرم شده قرار ندهید.

۱۱. هنگام جابجایی دستگاه حاوی روغن داغ یا سایر مایعات داغ، احتیاط کنید.
۱۲. قبل از کشیدن دوشاخه از برق، هرگونه کلید خاموش کننده را خاموش کنید.
۱۳. از دستگاه برای استفاده‌ای غیر از استفاده مورد نظر استفاده نکنید.
۱۴. افراد با ناتوانی‌های فیزیکی، حسی یا ذهنی یا فاقد تجربه و دانش در صورت نظارت افراد دیگر می‌توانند از دستگاه استفاده کنند.
۱۵. کودکان نباید با دستگاه بازی کنند.
۱۶. اگر کابل آسیب‌دیده است، باید توسط سازنده یا نمایندگی خدمات آن یا یک فرد واجد شرایط مشابه تعویض شود.
۱۷. احتیاط: هنگام برداشتن تخم‌مرغ‌های آب پز شده احتیاط کنید.

فقط برای مصارف خانگی

معرفی محصول

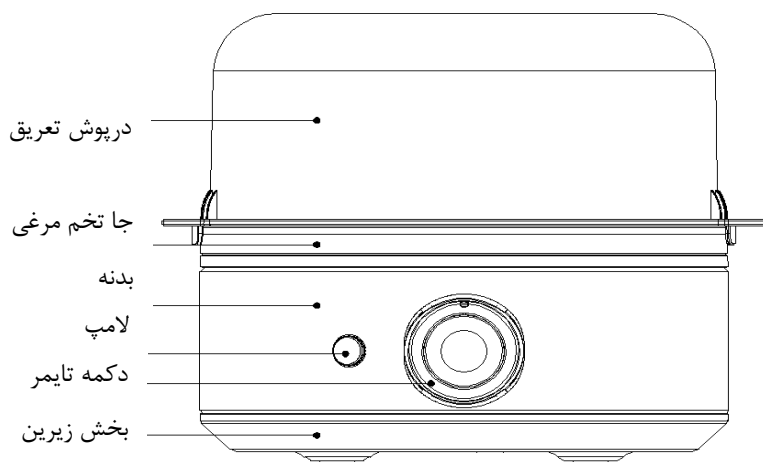

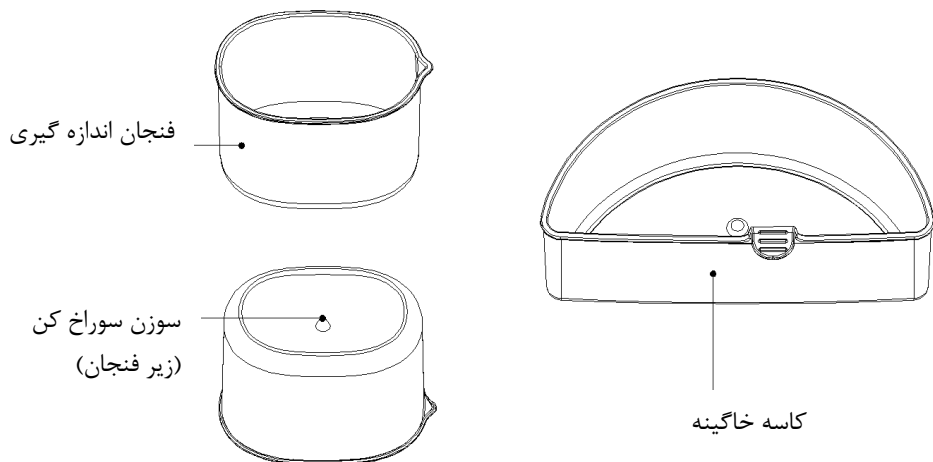

قبل از اولین بار استفاده از دستگاه، موارد زیر را رعایت کنید

قبل از استفاده از تخم‌مرغ‌پز، لطفاً آن را کاملاً تمیز کنید، لوازم جانبی مانند درپوش شفاف، فنجان اندازه‌گیری، جا تخم‌مرغی و غیره را در آب قرار دهید و با یک شوینده مناسب بشویید. دستگاه را با یک پیمانه اندازه‌گیری آب پر کنید، همه قسمت‌ها را سرهم‌بندی کنید. تخم‌مرغ‌ها را فعلاً قرار ندهید. دستگاه را روشن کنید. وقتی آب جوش آمد، آب را دور بریزید.

نکته: هرگز بخش زیرین را در آب فرو نکنید. بخش زیرین و سینی حرارتی را با یک پارچه مرطوب یا پاک‌کننده پاک کنید، هرگز از پاک‌کننده‌های سمی استفاده نکنید.

عملکرد دستگاه

تخم مرغ آب پز

۱. در اولین بار استفاده، سطح صفحه داغ را پاک کنید و ۱۵۰ میلی لیتر آب به صفحه داغ اضافه کنید.

۲. انتهای بزرگ تخم مرغ را با سوزن در کف پیمانه سوراخ کنید. سپس تخم مرغ را روی جا تخم مرغی قرار دهید. اطمینان حاصل کنید که انتهای کوچک تخم مرغ به سمت پایین باشد. از آنجایی که انتهای کوچک را می توان در عمق بیشتری وارد سوراخ کرد، تعادل بیشتری به تخم مرغ می دهد. سپس درپوش شفاف را قرار دهید. دستگاه را به برق بزنید و سوئیچ را روشن کنید " - ". نشانگر روی سوئیچ روشن خواهد شد.

احتیاط: تخم مرغ ها باید قبل از جوشیدن سوراخ شوند، در غیر این صورت ممکن است در حین پخت منفجر شوند.

۳. دستگاه را به برق بزنید و دستگاه را بچرخانید تا نشانگر دستگاه به مقیاس مناسب («عسلی» «نیم پز» «کاملاً پخته») اشاره کند و نشانگر سوئیچ روشن شود.

۴. هنگامی که تخم مرغ پخته شد، صدای «دنگ» را از تایمر می شنوید و چراغ نشانگر سوئیچ خاموش می شود.

احتیاط: پس از پخته شدن تخم مرغ ها، برای جلوگیری از هرگونه خطر، دستگاه را از برق بکشید.

۵. تخم مرغ آب پز شده را به سرعت در آب خنک بریزید تا به راحتی پوست کنده شود و خوش طعم شود.

خاگینه

۱. تخم مرغ ها را در کاسه بشکنید و ۱ تا ۲ گرم نمک، مواد دلخواه و مقداری روغن اضافه کنید و به هم بزنید.

۲. ۷۵ میلی لیتر آب را به کاسه اضافه کنید و خوب مخلوط کنید.

۳. ظرف آب داغ را با ۱۵۰ میلی لیتر آب پر کنید و ظرف خاگینه ساز را روی آن قرار دهید.

۴. ظرف خاگینه ساز را با مایع تخم مرغ روی سینی تخم مرغ قرار دهید. درپوش شفاف را روی آن قرار دهید. دستگاه را به برق بزنید و دستگیره را بچرخانید تا نشانگر دستگیره به سمت «» باشد.

۵. هنگامی که خاگینه بخارپز می شود، صدای «دنگ» تایمر را می شنوید و نشانگر برق خاموش می شود. قبل از بیرون آوردن خاگینه، ۳۰ ثانیه صبر کنید.

توجه: هنگام برداشتن درپوش، مراقب باشید تا بخار دستتان را نسوزاند!

نظافت و نگهداری

۱. دستگاه را از برق بکشید و اجازه دهید دستگاه قبل از تمیز کردن کاملاً خنک شود.

NEW LAND

New Generation of Appliance



تخم مرغ پز

مدل: NL-2961BS

فارسی ☐

English ☐