

NEW LAND

New Generation of Appliance



چای ساز

مدل: NL-2998BS NL-2998WS

فارسی ☐

English ☐

اطلاعات فنی دستگاه



ولتاژ: ۲۲۰-۲۴۰ ولت

فرکانس: ۵۰-۶۰ هرتز


قدرت گرمایش: ۱۸۵۰-
۲۲۰۰ وات

توان گرم نگهداشتن:
۲۸۰-۳۳۵ وات


ظرفیت کتری: ۲ لیتر

ظرفیت قوری: ۰/۸ لیتر

اجزای دستگاه

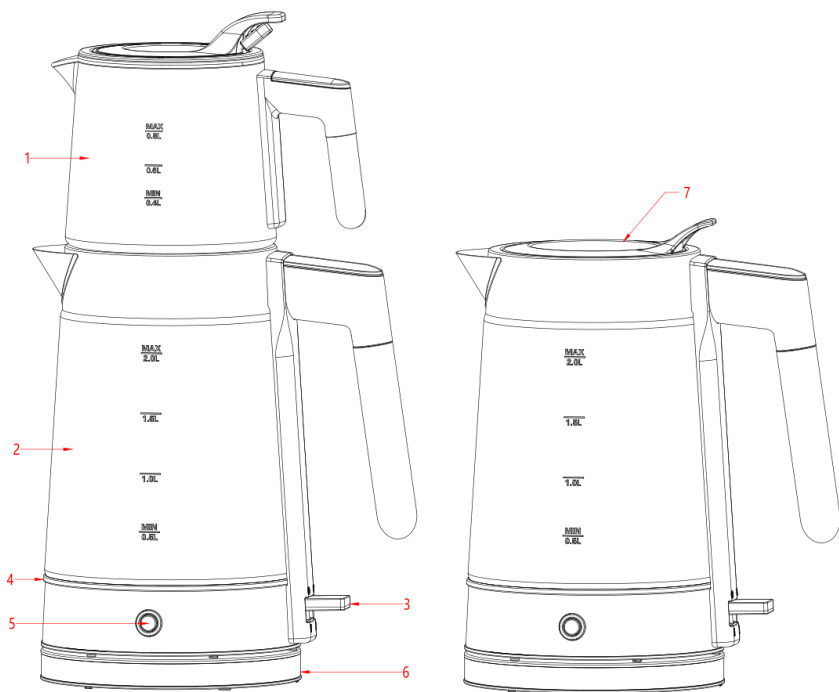

۱. فوری	۲. کتری
۳. کلید خاموش/روشن	۴. لامپ ال ای دی
۵. دکمه برای گرم نگه داشتن در قدرت کم و لامپ LED	
۶. پایه	۷. درپوش

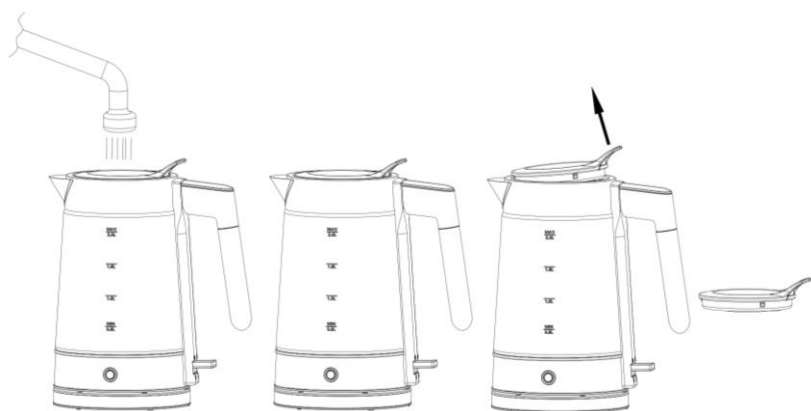

راهنمای استفاده:

جوشاندن آب:

- آب را به طور مستقیم، با درب باز یا بسته، به داخل کتری اضافه کنید.
- میزان آب باید بین علامت حداکثر و حداقل سطح آب باشد.
- کتری را روی پایه قرار دهید، آن را به برق وصل کنید و کلید روشن/خاموش را بزنید.
- چراغ قرمز در حین گرم شدن روشن می‌شود.
- در صورت آسیب دیدن سیم برق، برای جلوگیری از خطر، باید توسط سازنده یا نماینده خدمات آن تعویض شود.

نگهداری گرما:

- درب را برداشته و قوری چای را روی کتری قرار دهید.
- دکمه‌ی «نگهداری گرما» را فشار دهید.
- روشن شدن چراغ LED آبی نشان‌دهنده‌ی فعال بودن حالت نگهداری گرما است.

نکات ایمنی مهم:

- تمامی دستورالعمل‌ها را بخوانید.
- به سطوح داغ دست نزنید. از دسته استفاده کنید.
- برای محافظت در برابر آتش‌سوزی، برق‌گرفتگی و آسیب شخصی، سیم، دوشاخه یا کتری را در آب یا مایع دیگری فرو نکنید.
- نظارت دقیق هنگام استفاده از هر دستگاه برقی توسط یا در نزدیکی کودکان ضروری است.
- هنگامی که از دستگاه استفاده نمی‌شود و قبل از تمیز کردن، آن را از برق جدا کنید. قبل از گذاشتن یا برداشتن قطعات و قبل از تمیز کردن دستگاه، اجازه دهید خنک شود.
- با سیم یا دوشاخه‌ی آسیب‌دیده یا بعد از خرابی یا هرگونه صدمه به دستگاه، کار نکنید.
- در فضای باز استفاده نکنید.
- اجازه ندهید سیم از لبه‌ی میز یا پیشخوان آویزان شود یا به سطوح داغ برخورد کند.
- روی اجاق گاز یا برقی داغ یا در فر داغ قرار ندهید.
- هنگام پر کردن یا ریختن آب، کتری را از برق جدا کنید.

- برای صرفه جویی در مصرف برق، فقط به اندازه‌ی نیاز آب بجوشانید.
 - همیشه قبل از روشن کردن، درب را محکم ببندید، اطمینان حاصل کنید که درب به درستی قفل شده است.
 - در غیر این صورت، کتری به طور خودکار خاموش نمی‌شود و ممکن است آب جوش بیرون بپاشد.
 - هنگام جوشیدن آب یا بلافاصله پس از خاموش شدن، درب را برندارید.
 - همیشه مراقب باشید که آب جوش را به آرامی و با احتیاط بریزید بدون اینکه کتری را خیلی سریع کج کنید.
 - اطمینان حاصل کنید که کتری روی سطحی صاف و محکم استفاده شود.
 - در هنگام جوشیدن آب یا بلافاصله پس از خاموش شدن، از تماس با بخار خروجی از دهانه خودداری کنید.
- راهنمای استفاده و نگهداری کتری برقی:**

ایمنی

- تا بالاتر از نشانگر حداکثر سطح آب روی بدنه، آب نریزید. سرریز شدن کتری داغ خطرناک است.
- از پاک‌کننده‌های سایشی برای بدنه‌ی کتری استفاده نکنید، زیرا ممکن است باعث خراش سطح شود.
- هنگام جابه‌جایی کتری حاوی آب جوش، نهایت دقت را به خرج دهید.
- از کتری فقط برای جوشاندن آب استفاده کنید.

- این دستگاه برای استفاده در محیط‌های خانگی و مشابه طراحی شده است، مانند:

- آبدارخانه‌ی ادارات، مغازه‌ها و سایر محیط‌های کاری

○ مزارع

○ هتل‌ها، هتل‌ها و سایر اماکن اقامتی

○ مهمان‌پذیرها

- کودکان نباید با دستگاه بازی کنند.

- این دستگاه برای استفاده توسط کودکان بالای ۳ سال مناسب است، به شرطی که تحت نظارت یا آموزش در مورد استفاده‌ی ایمن از دستگاه قرار گرفته باشند و خطرات احتمالی را درک کنند. تمیز کردن و نگهداری دستگاه توسط کودکان زیر ۸ سال ممنوع است، مگر اینکه تحت نظارت باشند. سیم و دستگاه را از دسترس کودکان زیر ۳ سال دور نگه دارید.

- افرادی با نقص‌های جسمی، حسی یا ذهنی یا فقدان تجربه و دانش کافی نیز می‌توانند از دستگاه استفاده کنند، به شرطی که تحت نظارت یا آموزش در مورد استفاده‌ی ایمن از دستگاه قرار گرفته باشند و خطرات احتمالی را درک کنند.

محافظت از محیط زیست

- در پایان عمر مفید، محصول را با زباله‌های خانگی دور نریزید. آن را به مراکز جمع‌آوری پسماندهای الکتریکی و الکترونیکی تحویل دهید. نماد روی محصول، دستورالعمل‌ها یا بسته‌بندی، اطلاعات مربوط به روش‌های دفع را در اختیار شما قرار می‌دهد.

- مواد این محصول طبق علامت‌گذاری آن قابل بازیافت هستند. با بازیافت مواد، بازیافت فیزیکی یا سایر اشکال استفاده مجدد از وسایل قدیمی، سهم مهمی در حفاظت از محیط زیست خود خواهید داشت. برای اطلاع از محل دفع مجاز با مراجع ذی‌صلاح محلی تماس بگیرید.



تمیز کردن

- قبل از تمیز کردن، حتماً دوشاخه را از برق بکشید.
- برای تمیز کردن بدنه‌ی کتری، از پارچه‌ی مرطوب استفاده کنید.
- هرگز از مواد شیمیایی یا پاک‌کننده‌های سایشی قوی استفاده نکنید، زیرا این مواد ممکن است پوشش کتری را خراب کنند.
- فیلتر را به آرامی با یک برس نرم کوچک زیر آب شستشو دهید.
- از اشیاء تیز که ممکن است توری فیلتر را پاره کنند، استفاده نکنید.

رسوب‌زدایی

- فاصله‌ی زمانی رسوب‌زدایی به سختی آب و دفعات استفاده بستگی دارد.
- رسوب‌زدایی باید هر ۳ تا ۴ ماه یک‌بار انجام شود.
- اگر دستگاه قبل از جوش آمدن آب خاموش شود، احتمالاً نیاز به رسوب‌زدایی دارد.
- لطفاً از سرکه استفاده نکنید؛ بلکه از رسوب‌زداهای موجود در بازار بر پایه‌ی اسیدسیتریک استفاده کنید.

Technical Data

Voltage:
220-240V~

Frequency:
50-60Hz

Heating

Power:

1850-
2200W

Keep

Warm

Power:

280-335W

Kettle

Capacity:

2.0L


Pot

Capacity:


0.8L



Components

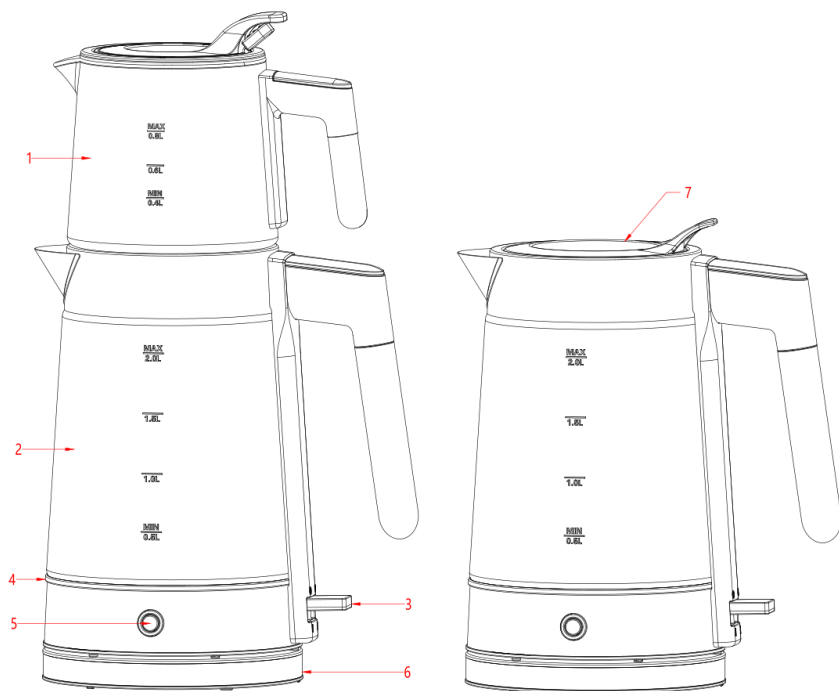

1. tea pot	7. kettle body
2. On/off switch	5. LED light
4. Button for Keep warm at low power and LED lamp	
6. base	7. Lid

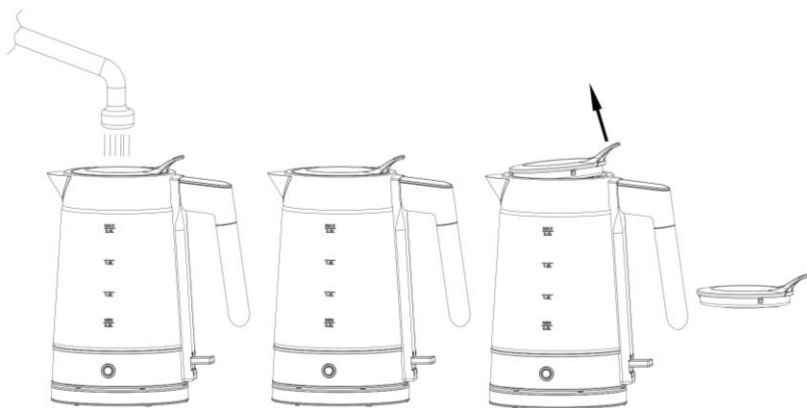

Instructions

Boil water

- Add water to the kettle directly without removing the lid, or removing the lid
- The amount of water needs to be between the maximum water level and the minimum water level
- Put the kettle on the base, plug in the power, and turn on the on/off switch
- The red lamp lights up while heating
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent to avoid a hazard

Keep Warm

- Remove the lid and place the tea pot on the kettle
- Press the keep warm button
- The blue LED light indicates the keep warm mode is working on

Important Safeguards

- Read all instructions
- Do not touch hot surfaces. Use handle
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs or kettle in water or other liquid
- Close supervision is necessary when any appliance is used by or near children
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance
- Do not operate with a damage cord or plug or after the appliance malfunctions or has been damaged in any manner
- Do not use outdoors
- Do not let cord hang over edge of table counter or touch hot surfaces
- Do not place on or near a hot gas or electric burner or in a heated oven
- Disconnect the kettle from the main supply when filling or pouring
- Boil only as much water as you need to save electricity
- Always close the lid securely before switching on, ensure lid is locked correctly
- Otherwise, the kettle will not switch off automatically and it may spit out boiling water
- Do not remove the lid when the water is boiling
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast
- Ensure the kettle is used on a firm, flat surface
- Avoid contact with steam from the spout when the water is boiling or just after it has switched off
- Do not fill above the MAX mark on the internal water level marking

- If the kettle is overfilled, boiling water may be ejected
- Do not use abrasive cleaners on the outside of the kettle-these may scratch the surface
- Extreme caution must be used when moving an appliance containing hot water
- Do not use the kettle for any use other than to boil water
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, and other working environments
 - farm houses
 - by clients in hotels, motels, and other residential type environments
 - bed and breakfast type environments
- Children shall not play with the appliance
- This appliance can be used by children aged from 3 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 3 years
- Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
- Instructions on environment protection
 - Do not dispose of product in the usual household garbage at the end of its life cycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal

- The materials are recyclable as mentioned in its marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment. Please inquire at the community administration for the authorized disposal location



Clean

- Disconnect from the mains supply before cleaning
- Use a damp cloth to clean the exterior of the kettle
- Never use harsh chemicals or abrasive cleaning agents as these may damage the finish of your kettle
- Clean the filter by brushing GENTLY with a small soft brush under water
- Do not use a sharp object which may damage the filter mesh

Decalcification

- The decalcification intervals depend on the hardness of the water and frequency of use
- Decalcification should be carried out every 3 to 4 months
- If the machine switches off before the water boils, it probably needs to be decalcification
- Please do not use vinegar but a commercially available decalcification agent on the basis of citric



QUALITY EXPERIENCE



Tea Set

Model: NL-2998BS NL-2998WS

فارسی ☐

English ☐