


Product list

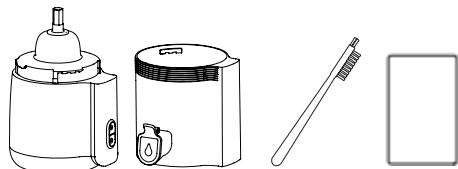

Engine Cup Cleaning Brush Instructions



Warm tip: The configuration of the accessories will vary depending on the combination purchased.

Initial Use and Maintenance

Unpacking & Inspection:

- 1.Open the box and check if all parts are complete, including the main engine, juicing cone, cleaning brush, etc.
- 2.Check if all parts are damaged to ensure safe use.

Cleaning parts:

- 1.Cup, grey cone, black cone, lid, wash with water. The main engine prohibited from washing, just wipe it with a wet towel.
- 2.Rinse it thoroughly with water and dry it.

Assemble the machine:

1. Assemble all parts correctly according to the instructions in the instruction manual.
2. Ensure that all parts are installed in place, especially the main engine to the cup and the cup to the lid connection part.


Check the power supply:

1. Plug in the power supply, make sure the power supply voltage is consistent with the product marked voltage.
2. Power on the machine and test it to make sure that it operates normally without abnormal noise or vibration.

First time juicing:

1. Prepare the fruits to be juiced, wash and cut them into appropriate sizes.
2. Select the appropriate grey cone or black cone according to the type of fruit, start the machine.
3. Observe the operation of the machine, if any abnormality is found, immediately stop using and check.


Installation and Use

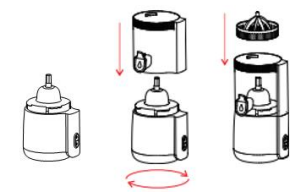

1. Ensure that the main engine is placed smoothly before use.  
**CAUTION:** Thoroughly wash and dry the parts that come into contact with ingredients before using this product for the first time.
2. Install the cup, align the cup triangle label with the main engine triangle label, press the cup down and fasten it clockwise.

3. Put in the corresponding juicing cone or watermelon juice cone.

**NOTE:** When juicing, only one grey cone or black cone is allowed in the cup.

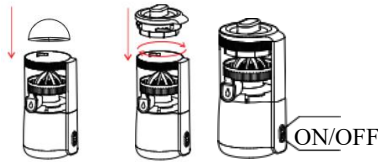

4. Put in the fruit cut in half, and place the center of the cut side on the top of the juicing cone. Close the lid, aligning the triangular logo on the lid with the cup logo, press down on the lid and turn clockwise to fasten. Open the juice outlet and place the juice cup under the juice outlet.

Note: When juicing with the grey cone, if you can't put in larger fruits such as grapefruit by cutting them in half, you can cut them in quarter. When using the black cone to extract watermelon juice, watermelon should be peeled and cut into small pieces, and the fruit should not be too full to avoid the lid cannot be covered. For strawberries, tomatoes, kiwis, raspberries, blueberries and other less juicy berries, do not overfill the black cone with fruit to prevent the lid from closing.

5. Plug in the power plug, long press the main engine ON/OFF button for 2 seconds, the machine enters standby mode, and then click the juicing button, start juicing. When juicing, the juicing cone rises up to the top of the in-situ spinning juice 3-4 seconds, after the juicing, cone stop 1-2 seconds and then move down, so that for a juicing round, the machine will automatically stop working after the completion of a round of juicing (about 20 seconds). After the machine stops working, open the top lid and take out the fruit peel.
6. Put in the pre-prepared fruits again, cover the lid, rotate clockwise and fasten it tightly, and press the juicing button to continue juicing.

Note: For better juice taste, it is recommended that after 2-3 rounds of operation, please remove the juicing cone and clean the residue from the juicing cone before continuing to extract juice. The upper limit of juice is marked on the cup, please do not exceed the upper limit to avoid overflow of juice.

7. After juicing, the machine will automatically shut down after 5 minutes of standing, or long press the main engine “on/off” button for 2 seconds, the indicator light will turn off. machine shutdown. When the machine is turned off, unplug it from the power supply.
8. Remove the lid, take out the juicing cone, remove the cup and other parts of the water flushing. The main engine is prohibited from washing, wipe it with wet rags, and then dry it with dry rags. Place the cleaned machine in a dry, cool and ventilated place for storage.

Note: When removing the lid, press the lid and turn it counterclockwise. To remove the cup , press the cup and rotate it counterclockwise.

Indicator light

| Status        | Indication                                      |
|---------------|-------------------------------------------------|
| Power on      | White light is on continuously                  |
| Motor blocked | White light flashes 11 times and then stays on. |
| Power off     | No light on                                     |
| Pause         | White light flashes continuously                |

Product Parameters

Product Name: Citrus Juicer II

Product capacity: 300ML

Rated voltage: 200V

Rated power: 100W

Product weight: 1600g

Rated frequency: 50Hz

Product size: 158X150X295mm

Execution standards : GB4706.1-2005 GB4706.30-2008

Warm tips:

1. When juicing, the juicing cone stays on the top and rotates in place for 3-4 seconds, it is normal phenomenon, and the juice will be cleaner. After the end of the rotary juicing, the juicing head will stop for 1-2 seconds, “click ” 2 sound and then move down again, is also a normal phenomenon, the machine program response time.
2. During juicing, the machine jammed blocking, it will pause for 2 seconds, the cone will automatically reverse, and the main engine indicator will flash red for 11 seconds and then light up. then the machine will resume juicing work.
3. Fruit selection: Juice cone, suitable for half or quarter of the fruit, such as oranges, lemons, grapefruits, apples, pears and other round fruits. After the end of the rotary juicing, the juicing head will stop for 1-2 seconds, “click ” 2 sound and then move down again, is also a normal phenomenon, the machine program response time.
4. Strawberries, blueberries, mangoes, raisins, raspberries, kiwi, dragon fruit, tomatoes and other soft juiceless or juicy fruits are not recommended to be juiced with a juicer, but can be used to make jam with the watermelon juice cone.
5. Pomegranates and grapes with many seeds are not recommended for juicing. If juicing, it is recommended to use soft-seeded pomegranates or seedless grapes. It is normal for seeded fruits to make a clicking sound when juicing.

Food Contact Materials Information List

| Food Contact Materials |                                                               | Execution standards | Conformity with standards |
|------------------------|---------------------------------------------------------------|---------------------|---------------------------|
| Metals                 | stainless steels: 06Cr19Ni10(SUS304) (Juicing cone top metal) | GB-4806.9-2023      | Yes                       |
| Plastic                | AS (Cup)                                                      | GB-4806.7-2023      | Yes                       |
|                        | ABS: (lid/Juicing cone/ Watermelon Juicing Cone)              | GB-4806.7-2023      | Yes                       |
|                        | silicone (Juice outlet/Sealing Ring)                          | GB-4806.11-2023     | Yes                       |

This series of products include the above food contact materials, some models may not contain individual materials, the actual product shall prevail!

Attention

1. Please do not put the machine in the microwave heating or refrigerator freezing, so as not to cause the machine rupture.
2. Replace the accessories or contact the moving parts before turning off the power switch and disconnecting the power supply.
3. When operating the product, it is strictly prohibited to touch the juicing cone, motor and other removable parts, in order to avoid injury or damage to the product.
4. The main engine is prohibited from washing, other accessories use a maximum of not more than 70 ° C water cleaning.
5. This product is not suitable for the following people: sensory or psychological dysfunction, lack of relevant experience or knowledge

(including children) and other groups of people, unless they are under the supervision and guidance of a professional to use this product, should take care of children to ensure that they do not play with the product.

6. The machine is strictly prohibited to put down or upside down.

7. This product is strictly prohibited to disassemble the product shell, to avoid possible damage or other hazards.

8. It is strictly prohibited to disassemble, squeeze, puncture, short-circuit the product or put it into water, fire, or placed in an environment where the temperature is higher than 60 ° C.

9. Do not use sharp objects to scrape the machine.

10. Overloading is strictly prohibited. It is recommended that the product should not work continuously for more than 3 minutes, after 3 minutes of continuous work, you need to rest for 5 minutes before use, to work for 3 minutes between 5 minutes as a cycle, after 3 cycles of continuous work should be allowed to cool down the product for 30 minutes before work, to ensure product life.

11. Do not use steel wool, abrasive cleaners or corrosive liquids (such as gasoline or acetone) to clean the product.

12. It is strictly prohibited to sterilize the parts of this product at high temperature.

13. The main engine is prohibited to wash and put into the dishwasher.

Fault and Treatment

| If you experience any of the following fault during the use of the machine, please check and deal with them according to the following table. |                                                                   |                                                                                                                                                              |
|-----------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Phenomenon                                                                                                                                    | Reason                                                            | Treatment method                                                                                                                                             |
| Does not work after power start                                                                                                               | The power plug has poor contact with the socket                   | 1.Re-plug the power cord<br>2.Replace the power socket and try again                                                                                         |
| In-use shutdown                                                                                                                               | Too much ingredients/long time of use                             | Disconnect the power to remove extra fruits before trying, or stop using the product, please make the product cool down for 20-30 minutes before using again |
| Abnormal noise                                                                                                                                | Internal motor or reduction gears of the machine are damaged      | Long press the switch button to turn off the machine, and then open the juice outlet to discharge the juice.                                                 |
| Spillage of juice during use                                                                                                                  | Juice exceeds the capacity limit                                  | Contact our after-sales service department                                                                                                                   |
| Juice cone drops before finishing                                                                                                             | Motor blocked                                                     | Remove fruits that are not suitable for the machine / Remove some fruits and try again.                                                                      |
| Main body/but-tons not responding                                                                                                             | 1.Re-plug the power cord 2.Replace the power socket and try again | Replace the main engine                                                                                                                                      |
| Slight vibration/-click sound                                                                                                                 | Fruit seed collision                                              | Clean residue from juicing cone                                                                                                                              |

No washing of the main engine!

Please read the instructions carefully before use.



**نکته مهم:** لوازم جانبی ممکن است بسته به ترکیبی که خریداری می‌کنید، متفاوت باشند.

**استفاده اولیه و نگهداری**

**باز کردن جعبه و بازرسی:**

- جعبه را باز کنید و مطمئن شوید که تمامی قطعات شامل موتور اصلی، مخروط آب‌گیری، برس تمیزکننده و غیره، کامل هستند.
- بررسی کنید که هیچ یک از قطعات آسیب ندیده باشند تا بتوانید با خیال راحت از دستگاه استفاده کنید.

**تمیز کردن قطعات:**

- فنجان، مخروط خاکستری، مخروط سیاه و درپوش را با آب بشویید. شستشوی موتور اصلی ممنوع است، فقط آن را با یک دستمال مرطوب پاک کنید.
- قطعات را به‌طور کامل با آب بشویید و خشک کنید.

**مونتاژ دستگاه:**

- همه قطعات را طبق دستورالعمل‌های موجود در دفترچه راهنما به‌درستی مونتاژ کنید.
- اطمینان حاصل کنید که تمامی قطعات به‌درستی نصب شده‌اند، به‌خصوص اتصال موتور اصلی به فنجان و فنجان به درپوش.

**بررسی منبع تغذیه:**

- دستگاه را به منبع برق وصل کنید و مطمئن شوید ولتاژ برق با ولتاژ مشخص‌شده روی محصول همخوانی دارد.
- دستگاه را روشن کنید و آزمایش کنید تا مطمئن شوید بدون ایجاد صدای غیرعادی یا لرزش به‌درستی کار می‌کند.

**اولین آب‌گیری:**

- میوه‌ها را آماده کنید، آن‌ها را بشویید و به اندازه‌های مناسب خرد کنید.
- مخروط خاکستری یا مخروط سیاه مناسب را بسته به نوع میوه انتخاب کرده و دستگاه را روشن کنید.
- عملیات دستگاه را مشاهده کنید، در صورت مشاهده هرگونه مشکل، فوراً استفاده را متوقف کرده و بررسی کنید.

**نصب و استفاده:**

- قبل از استفاده، مطمئن شوید که موتور اصلی به‌صورت کاملاً صاف قرار گرفته است. **توجه:** قطعاتی که با مواد غذایی در تماس هستند را قبل از استفاده اولیه، کاملاً شسته و خشک کنید.
- فنجان را نصب کنید، برچسب مثلث روی فنجان را با برچسب مثلث روی موتور اصلی هم‌راستا کنید، فنجان را به پایین فشار داده و در جهت عقربه‌های ساعت محکم ببندید.
- مخروط آب‌گیری مناسب یا مخروط آب هندوانه را در جای خود قرار دهید. **توجه:** هنگام آب‌گیری، تنها یک مخروط خاکستری یا سیاه باید داخل فنجان قرار داشته باشد.

#### ۴. میوه نصف شده را قرار دهید

میوه‌ای که به دو نیم تقسیم کرده‌اید را قرار دهید، قسمت بریده‌شده را روی مخروط آب‌گیری بگذارید. درپوش را ببندید، لوگوی مثلی روی درپوش را با لوگوی فنجان هم‌راستا

کنید، درپوش را به پایین فشار داده و در جهت عقربه‌های ساعت بچرخانید تا محکم شود. خروجی آب‌میوه را باز کنید و لیوان آب‌میوه را زیر خروجی قرار دهید. **توجه:** هنگام استفاده از مخروط خاکستری، اگر نمی‌توانید میوه‌های بزرگ‌تری مانند گریپ‌فروت را با نصف کردن در دستگاه قرار دهید، آن‌ها را به چهار قسمت تقسیم کنید. هنگام استفاده از مخروط سیاه برای گرفتن آب هندوانه، باید هندوانه را پوست کنده و به تکه‌های کوچک برش دهید و میوه نباید بیش از حد پر شود تا درپوش به‌خوبی بسته شود. برای میوه‌های کمتری مثل توت‌فرنگی، گوجه‌فرنگی، کیوی، تمشک و بلوبری، نباید مخروط سیاه را بیش از حد پر کنید تا درپوش بتواند بسته شود.

**۵. وصل کردن به برق و شروع آب‌گیری**

پلاگین برق را وصل کنید، دکمه روشن/خاموش موتور اصلی را برای ۲ ثانیه نگه دارید تا دستگاه وارد حالت آماده‌باش شود، سپس دکمه آب‌گیری را فشار دهید تا دستگاه شروع به کار کند. هنگام آب‌گیری، مخروط آب‌گیری به بالا حرکت کرده و ۳-۴ ثانیه در محل خود به چرخش درمی‌آید، پس از آب‌گیری، مخروط ۱-۲ ثانیه متوقف شده و سپس به پایین حرکت می‌کند، که این یک چرخه آب‌گیری را تشکیل می‌دهد. پس از اتمام یک چرخه آب‌گیری (حدود ۲۰ ثانیه)، دستگاه به‌طور خودکار متوقف می‌شود. پس از توقف دستگاه، درپوش را باز کرده و پوست میوه را خارج کنید.

**۶. ادامه آب‌گیری**

دوباره میوه‌های آماده‌شده را قرار دهید، درپوش را ببندید، در جهت عقربه‌های ساعت بچرخانید و محکم ببندید، سپس دکمه آب‌گیری را فشار دهید تا آب‌گیری ادامه یابد. **توجه:** برای طعم بهتر آب‌میوه، پیشنهاد می‌شود بعد از ۲-۳ دور عملیات، مخروط آب‌گیری را بردارید و بقیای موجود در آن را تمیز کنید، سپس ادامه به آب‌گیری بپردازید. حد بالایی آب‌میوه روی فنجان مشخص شده است، لطفاً از حد بالا فراتر نروید تا از ریزش آب‌میوه جلوگیری شود.

**۷. خاموش کردن دستگاه**

بعد از آب‌گیری، دستگاه به‌طور خودکار پس از ۵ دقیقه ایستادن خاموش می‌شود، یا می‌توانید دکمه روشن/خاموش موتور اصلی را برای ۲ ثانیه نگه دارید تا چراغ نشانگر خاموش شود و دستگاه خاموش شود. پس از خاموش شدن دستگاه، آن را از برق جدا کنید.

**۸. تمیز کردن دستگاه**

درپوش را بردارید، مخروط آب‌گیری را خارج کنید، فنجان و دیگر قطعات را برای شستشو بردارید. شستشوی موتور اصلی ممنوع است، آن را با دستمال مرطوب پاک کنید و سپس با دستمال خشک کنید. دستگاه تمیز شده را در مکانی خشک، خنک و دارای تهویه مناسب قرار دهید. **توجه:** برای برداشتن درپوش، آن را فشار داده و در جهت خلاف عقربه‌های ساعت بچرخانید. برای جدا کردن فنجان، آن را فشار داده و در جهت خلاف عقربه‌های ساعت بچرخانید.

| وضعیت        | نشانگر                                           |
|--------------|--------------------------------------------------|
| روشن         | چراغ سفید به‌صورت مداوم روشن است.                |
| انسداد موتور | چراغ سفید ۱۱ بار چشمک می‌زند و سپس روشن می‌ماند. |
| خاموش        | چراغ خاموش است.                                  |
| مکث          | چراغ سفید به‌صورت مداوم چشمک می‌زند.             |

**پارامترهای محصول**

نام محصول: Citrus Juicer II

ظرفیت محصول: ۳۰۰ میلی لیتر

ولتاژ: ۲۲۰ ولت

توان نامی: ۱۰۰ وات، مدل محصول: NL-3100BG

وزن محصول: ۱۶۰۰ گرم، فرکانس نامی: ۵۰ هرتز

اندازه محصول: X150X295۱۵۸ میلی‌متر

استانداردهای اجرایی: GB4706.1-2005، GB4706.30-2008

**نکات مهم:**

- هنگام آب‌گیری، مخروط آب‌گیری در بالای دستگاه قرار می‌گیرد و به مدت ۳-۴ ثانیه در محل می‌چرخد، این یک پدیده طبیعی است و آب‌میوه به‌صورت تمیزتری استخراج می‌شود. بعد از اتمام چرخش، سر آب‌گیری برای ۱-۲ ثانیه متوقف می‌شود، دو صدای «کلیک» شنیده می‌شود و سپس دوباره به پایین حرکت می‌کند، که این هم یک پدیده طبیعی و زمان پاسخگویی برنامه دستگاه است.
- در حین آب‌گیری، اگر دستگاه گیر کرد یا متوقف شد، به مدت ۲ ثانیه متوقف می‌شود، سپس مخروط آب‌گیری به طور خودکار در جهت معکوس می‌چرخد و نشانگر موتور به مدت ۱۱ ثانیه به رنگ قرمز چشمک می‌زند و سپس روشن می‌شود. پس از آن، دستگاه به کار آب‌گیری خود ادامه می‌دهد.
- انتخاب میوه:** مخروط آب‌گیری مناسب برای نصف یا یک چهارم میوه‌هایی مانند پرتقال، لیمو، گریپ فروت، سیب، گلابی و دیگر میوه‌های گرد است. بعد از اتمام چرخش آب‌گیری، سر آب‌گیری برای ۱-۲ ثانیه متوقف می‌شود، دو صدای «کلیک» شنیده می‌شود و سپس دوباره به پایین حرکت می‌کند، که این هم یک پدیده طبیعی و زمان پاسخگویی برنامه دستگاه است.
- میوه‌های نرم و کمتر آبدار مانند توت‌فرنگی، بلوبری، انبه، کشمش، تمشک، کیوی، دراگون فروت و گوجه‌فرنگی برای آب‌گیری با آب‌مرکبات‌گیر توصیه نمی‌شوند. اما می‌توان از آنها با مخروط آب‌گیری هندوانه برای تهیه مربا استفاده کرد.
- انار و انگورهایی که دارای تعداد زیادی هسته هستند برای آب‌گیری توصیه نمی‌شوند. در صورت تمایل به آب‌گیری، بهتر است از انار یا هسته نرم یا انگور بدون هسته استفاده کنید. ایجاد صدای کلیک در حین آب‌گیری از میوه‌های دارای هسته طبیعی است.

**فهرست اطلاعات مواد در تماس با غذا**

| مواد در تماس با غذا |                                                            | استانداردهای اجرایی | تطابق |
|---------------------|------------------------------------------------------------|---------------------|-------|
| مواد                | استیل ضدزنگ: (SUS304) 06Cr19Ni10 (فلز آب‌گیری بالا)        | GB-4806.9-2023      | بله   |
| پلاستیک             | AS (فنجان)                                                 | GB-4806.7-2023      | بله   |
|                     | ABS (درپوش/مخروط آب‌میوه‌گیری/ مخروط آب‌میوه‌گیری هندوانه) | GB-4806.7-2023      | بله   |
|                     | سیلیکون: (خروجی آب میوه/حلقه آب بندی)                      | GB-4806.11-2023     | بله   |

سری محصولات شامل مواد ذکر شده در تماس با غذا می‌باشد. برخی مدل‌ها ممکن است دارای مواد خاصی نباشند، محصول واقعی ملاک قرار می‌گیرد!

**توجه:** لطفاً دستگاه را در مایکروویو یا فریزر قرار ندهید، زیرا ممکن است باعث ترکیدگی دستگاه شود.

- قبل از تعویض لوازم جانبی یا تماس با قطعات متحرک، حتماً سوئیچ برق را خاموش کرده و برق را قطع کنید.
- هنگام استفاده از محصول، به هیچ وجه به مخروط آب‌گیری، موتور و دیگر قطعات متحرک دست نزدیک تا از صدمات و آسیب‌های احتمالی جلوگیری شود.
- موتور دستگاه قابل شستشو نیست، برای شستشوی سایر قطعات حداکثر از آب با دمای کمتر از ۷۰ درجه سانتیگراد استفاده کنید.
- این محصول مناسب افراد با نقص‌های حسی یا روانی، کمبود تجربه یا دانش (از جمله کودکان) نمی‌باشد، مگر آنکه تحت نظارت و راهنمایی یک فرد حرفه‌ای از آن استفاده کنند. باید از کودکان مراقبت شود تا با این محصول بازی نکنند.
- قرار دادن دستگاه به‌صورت خوابیده یا وارونه به‌طور کامل ممنوع است.
- باز کردن پوسته دستگاه به شدت ممنوع است تا از خطرات یا آسیب‌های احتمالی جلوگیری شود.

۷. باز کردن، فشار دادن، سوراخ کردن، اتصال کوتاه، یا قرار دادن محصول در آب، آتش، یا محیط با دمای

۸. بالاتر از ۶۰ درجه سانتیگراد به‌شدت ممنوع است.

۹. از اجسام تیز برای خراشیدن دستگاه استفاده نکنید.

۱۰. بارگذاری بیش‌ازحد به‌شدت ممنوع است. توصیه می‌شود محصول به مدت بیش از ۳ دقیقه به‌صورت پیوسته کار نکند، پس از ۳ دقیقه کار مداوم، باید ۵ دقیقه استراحت داده شود. در هر ۳ دوره ۵ دقیقه‌ای کار، دستگاه باید به مدت ۳۰ دقیقه خنک شود تا عمر محصول حفظ شود.

۱۱. از سیم فنجان‌شویی، تمیزکننده‌های سایشی یا مایعات خورنده (مانند بنزین یا استون) برای تمیزکردن محصول استفاده نکنید.

۱۲. استریل کردن قطعات این محصول در دمای بالا به‌شدت ممنوع است.

۱۳. شستن موتور اصلی یا قرار دادن آن در ماشین فنجان‌شویی ممنوع است.

#### مشکلات و راهکارها

در صورت مشاهده هر یک از عیب‌های زیر در حین استفاده از دستگاه، لطفاً مطابق جدول زیر آنها را بررسی کرده و با آنها برخورد کنید.

| روش درمانی                                                                                                                                                    | دلیل                                                                             | پدیده                                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|--------------------------------------|
| ۱. دوشاخه برق را دوباره وارد کنید ۲. سوکت برق را تعویض کرده و دوباره امتحان کنید                                                                              | دوشاخه برق به خوبی با سوکت متصل نیست                                             | عدم کارکرد پس از شروع برق            |
| برق را قطع کرده و میوه‌های اضافی را بردارید یا استفاده از محصول را متوقف کنید، لطفاً بگذارید محصول به مدت ۲۰-۳۰ دقیقه خنک شود قبل از اینکه دوباره استفاده شود | مقدار زیاد مواد/ استفاده طولانی مدت                                              | خاموش شدن در حین استفاده             |
| دکمه سوئیچ را به مدت طولانی فشار داده و دستگاه را خاموش کنید، سپس خروجی آب‌میوه را باز کرده و آب‌میوه را تخلیه کنید                                           | موتور داخلی یا گیربکس‌های دستگاه خراب شده‌اند                                    | صدای غیرطبیعی                        |
| با بخش خدمات پس از فروش ما تماس بگیرید                                                                                                                        | مقدار آب‌میوه از حد مجاز بیشتر است                                               | ریختن آب‌میوه در حین استفاده         |
| میوه‌هایی که برای دستگاه مناسب نیستند را بردارید/ برخی از میوه‌ها را برداشته و دوباره امتحان کنید                                                             | مسدود شدن موتور                                                                  | مخروط آب‌میوه قبل از پایان کار افتاد |
| موتور اصلی را تعویض کنید                                                                                                                                      | ۱. دوشاخه برق را دوباره وارد کنید ۲. سوکت برق را تعویض کرده و دوباره امتحان کنید | بدنه اصلی/دکمه‌ها پاسخ نمی‌دهند      |
| باقیمانده‌ها را از مخروط آب‌گیری پاک کنید                                                                                                                     | برخورد با دانه‌های میوه                                                          | لرزش جزئی/ صدای کلیک                 |



## آبمیوه گیری مرکبات

## دفترچه راهنما

### مدل: NL-3100BG



### موتور اصلی را نشویید! لطفاً قبل از استفاده،

### دستورالعمل‌ها را به دقت بخوانید.