

Electric Food Slicer

Instruction manual

Model: NL-3101BG




Do not put the main body in water to clean.
Please read the instructions carefully before use.

Product Features

1. One key electric cutting vegetables, save time and effort
2. large-diameter feeding port, without picking ingredients
3. Deluxe five blades, multi-functional use
4. Thin / Thick / Cheese shred, thin / flower slices, grated.

Product list

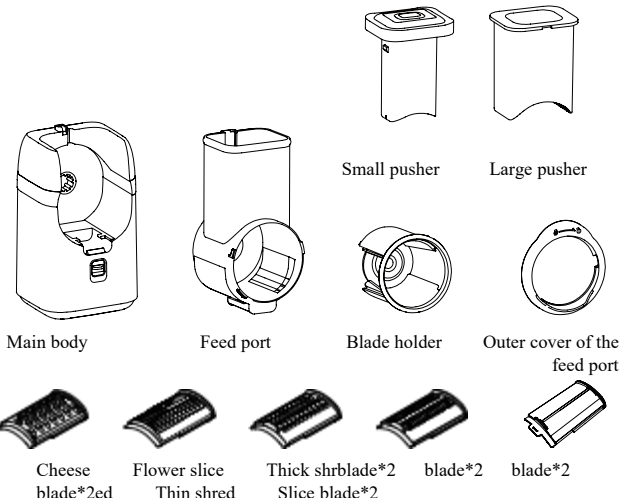

Initial Use and Maintenance


1. Please read the manual carefully for the first time, install the machine, turn on the machine first to check whether the working status of the machine is normal.
2. Every time to use the machine, it is suggested to start the machine first, and then put the ingredients;
3. Please unplug the machine from the power socket in time after use.
4. After using the machine, it should be cleaned in time, the main body is prohibited to wash, and the rest of the components can be rinsed directly with water;
5. Cleaning, use mild water effect is better, prohibit directly contact the blade on the blade holder to avoid injury;
6. Do not use the research or corrosive cleaning agents to clean;
7. Forbidden to disinfect the machine parts at high temperature;
8. When the machine is working, do not press the ingredients heavily, it may lead to machine blocking or blade deformation;
9. It is suggested that each replacement of ingredients, the rotating blade holder and blade cleaning, otherwise it will lead to unsatisfactory cutting effect.

Installation for Use



1. Vertically forward, insert into feed port.
2. Insert the rotary blade vertically forward and rotate clockwise or counterclockwise to fix; please confirm whether the blade is installed correctly and in place before installation.

3. Insert vertically forward at an angle of 15° and rotate counterclockwise to tighten.

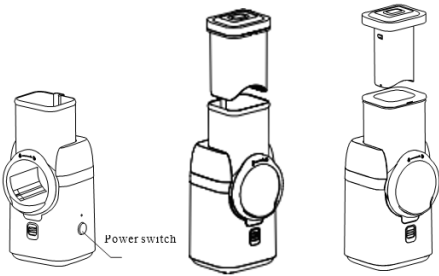

4. Press the power switch to process the ingredients.
5. Put in the ingredients, insert the pusher, starting to process the ingredients.
6. If the ingredients are smaller or longer, you can release the small pusher to process the ingredients.

Blade removal and installation




When removing, press the blade holder on the desktop and take out the blade upwards.

Installation: push the blade to the end along the slot.


Note: 1. Hands do not touch the blade edge to avoid injury.

2. When replacing the blade, must be replaced into the same group of blades.

Disassembly method

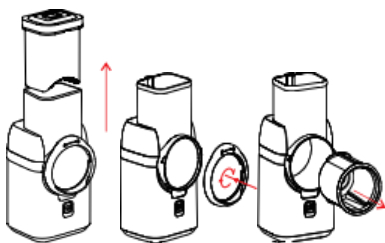

1. Remove the pusher vertically upward.
2. Turn clockwise and remove feed port outer cover vertically forward.
3. Grab the inside edge of the blade holder and pull out the blade holder vertically.

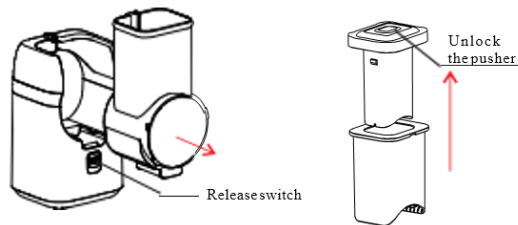

4. Press down on the main body release switch. Take out the feed port vertically.

5. Press the pusher release key and remove the smaller pusher vertically upward.

Materials of food contact accessory

Accessory		Material
Metal	Shred blades、Flower slice blades	Stainless steel 06Cr19Ni10(SUS304)
	Slice blades	Stainless steel 420j2(SUS420)
	Cheese blades	Stainless steel 10Cr17(SUS430)
Plastic	Chute	AS
	Pusher、Small pusher、Bladeholder	ABS
	Bladeholder	PP

This series of products contain or above food contact materials, some models may not contain individual materials, the actual products shall prevail!

Warm tips

1. When the machine is turned on, the power indicator light is blue.
2. When using large diameters feed port, do not put in too much food ingredient, so that the pusher cannot be inserted.
3. When replacing the blade, hand should avoid the edge of the blade to replace, because the blade is sharp and may cause injury.
4. Make sure all accessories are in place before you start processing the food ingredient.
5. After use, please unplug from the power socket in time
6. If the machine is not used for a long time, please clean and dry it and put it away

Attentions

1. Do not place the product in microwave oven, dishwasher or refrigerator to avoid product damage.
2. Do not touch the rotating parts or disassemble when machine when it is in working.
3. After 30 minutes of continuous work, it is recommended to rest for an hour before use.
4. This machine cannot be used to process hard ingredients, such as frozen ingredients and similar ingredients.
5. The blade is very sharp. Do not touch the blade directly to avoid injury.
6. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with appliance.
7. The machine should be placed on a flat countertop, not close to the heat source, not placed on other electrical appliances, and should be guarded during use to avoid accidents.
8. Before the machine is finished or cleaned, the plug should be unplugged from the power socket in time to avoid electric shock.
9. If the power cord is damaged, in order to avoid danger, it must be replaced by manufacturing or other maintenance departments or similar professionals, do not disassemble and repair, so as to avoid danger.

10. When replacing the blade, hand should avoid the edge of the blade to replace, because the blade is sharp and may cause injury.
11. This product is intended to household and indoor use only.
12. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
13. They shall state that care shall be taken when handling the sharp cutting blades and during cleaning.
14. Always disconnect the appliances from the supply if it is left unattended and before assembling, disassembling or cleaning.

Product parameter

Product model: NL-3101BG

Fault and Treatment

If you experience any of the following fault during the use of the machine, please check and deal with them according to the following table.		
Phenomenon	Reason	Treatment method
Not working	1. The equipment is not assembled 2. The power supply is not connected	1. Assemble the equipment according to the manual 2. Connect to the 220V power supply
Suddenly stopped in operation	1. Taking too long to process ingredients 2. Check whether the power cable is loose 3. The food ingredients are too hard	1. Clean food residue in time 2. Reinsert the power cable 3. Remove harder food
Abnormal noise	1. Accessories are not properly installed 2. The machine is placed in an inclined position for use 3. loud noises when cutting food ingredients	1. Stop the machine and check whether the accessories are installed correctly and in place 2. Please put the machine on a horizontal surface 3. Confirm whether the machine is properly assembled. If the assembly problem is eliminated stop using it

The time of food processing

Blade type	Types of ingredients	Quantity of ingredients handled per session	Single handling time of ingredients
Cheese blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min
Flower slice blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min
Thick shred blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min
Thin shred blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min
Slice blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min

ویژگی‌های محصول


۱. خرد کردن سبزیجات با فشار یک دکمه، صرفه‌جویی در زمان و انرژی

۲. ورودی بزرگ برای مواد غذایی، بدون نیاز به انتخاب مواد اولیه خاص

۳. پنج تیغه لوکس و چند منظوره برای استفاده

۴. خرد کردن نازک/ضخیم، رنده کردن پنیر، برش‌های نازک و گل‌مانند، رنده کردن مواد

فهرست محصول

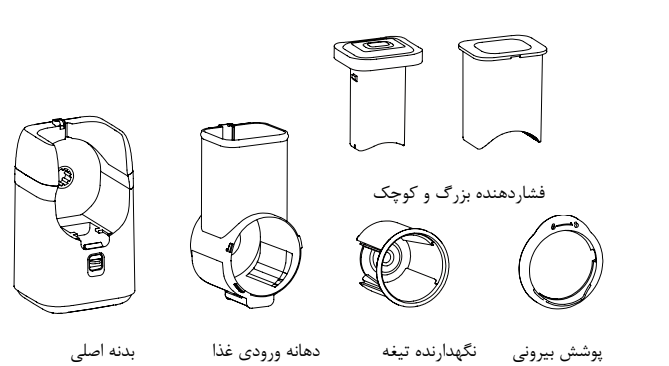

استفاده اولیه و نگهداری

۱. لطفاً برای اولین بار دفترچه راهنما را با دقت بخوانید، دستگاه را نصب کنید. ابتدا دستگاه را روشن کنید تا بررسی کنید که آیا وضعیت کار دستگاه عادی است یا خیر.

۲. هر بار که از دستگاه استفاده می کنید، پیشنهاد می شود ابتدا دستگاه را روشن کنید و سپس مواد را قرار دهید.

۳. لطفاً پس از استفاده، دستگاه را از پریز برق جدا کنید.


۴. پس از استفاده از دستگاه، باید بلافاصله آن را تمیز کنید. شستشوی بدنه اصلی دستگاه ممنوع است، اما سایر قطعات را می‌توان مستقیماً با آب شست. ۵. استفاده از آب ولرم برای تمیز کردن توصیه می‌شود. مستقیماً به تیغه روی نگهدارنده تیغه دست نزنید تا از بروز آسیب جلوگیری شود.

۶. از مواد شوینده خشن یا خورنده برای تمیز کردن دستگاه استفاده نکنید. ۷. شستشو یا ضدعفونی قطعات دستگاه با دمای بالا ممنوع است.

۸. هنگامی که دستگاه در حال کار است، مواد را به‌شدت فشار ندهید، زیرا ممکن است باعث گرفتگی دستگاه یا تغییر شکل تیغه‌ها شود.


۹. پیشنهاد می‌شود بعد از هر بار تعویض مواد، نگهدارنده تیغه و تیغه‌ها تمیز شوند، در غیر این صورت ممکن است نتیجه برش مطلوب نباشد.

نصب برای استفاده

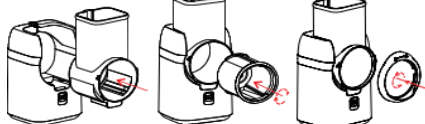

۱. به‌صورت عمودی رو به جلو، تیغه را وارد دهانه ورودی مواد کنید. ۲. تیغه چرخشی را به‌صورت عمودی رو به جلو وارد کنید و سپس در جهت عقربه‌های ساعت یا پادساعتگرد بچرخانید تا در جای خود ثابت شود. لطفاً قبل از نصب، مطمئن شوید که تیغه به درستی و در محل خود قرار گرفته است.

۳. به‌صورت عمودی و با زاویه ۱۵ درجه به جلو وارد کرده و در جهت پادساعتگرد بچرخانید تا محکم شود.

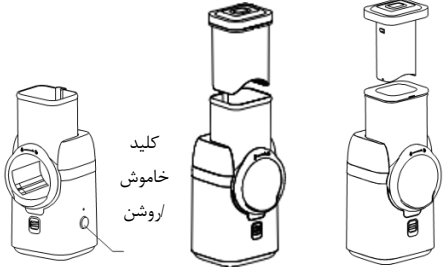

۴. دکمه خاموش/روشن را فشار دهید تا مواد غذایی پردازش شوند.

۵. مواد غذایی را وارد کنید، پشر (فشاردهنده) را وارد کرده و پردازش مواد را شروع کنید.

۶. اگر مواد کوچکتر یا بلندتر هستند، می‌توانید پشر کوچک را آزاد کنید تا مواد پردازش شوند.

برداشتن و نصب تیغه




هنگام جدا کردن تیغه، نگهدارنده تیغه را روی سطح میز فشار دهید و تیغه را به سمت بالا بیرون بکشید. نصب: تیغه را تا انتها در امتداد شیار فشار دهید.

توجه: ۱. دست‌ها به لبه تیغه برخورد نکنند تا از آسیب جلوگیری شود.

۲. هنگام تعویض تیغه، باید همان گروه تیغه‌ها جایگزین شوند.


روش جداسازی

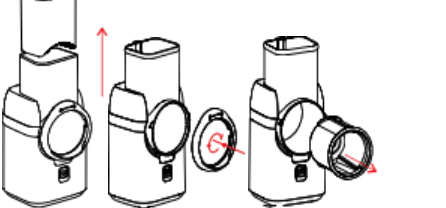

۱. فشار دهنده (پوشر) را به صورت عمودی به سمت بالا خارج کنید.

۲. درپوش خروجی مواد را به صورت عمودی به جلو بکشید و در جهت عقربه‌های ساعت بچرخانید تا جدا شود.

۳. لبه داخلی نگهدارنده تیغه را بگیرید و نگهدارنده تیغه را به صورت عمودی بیرون بکشید.

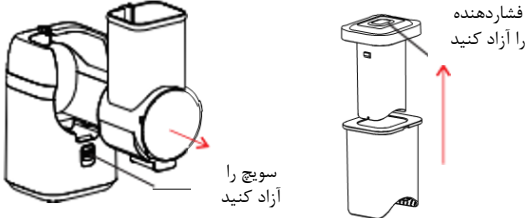

۴. کلید آزادسازی بدنه اصلی را فشار دهید. دهانه ورودی مواد را به صورت عمودی خارج کنید.

۵. کلید آزادسازی فشار دهنده را فشار دهید و فشار دهنده کوچکتر را به صورت عمودی به بالا بیرون بیاورید.

مواد مورد استفاده در لوازم در تماس با مواد غذایی

فلز	لوازم	مواد
	تیغه خردکن و برش گل	استیل ضدزنگ 06Cr19Ni10(SUS304)
	تیغه اسلایدر	استیل ضدزنگ 420j2(SUS420)
	تیغه برش پنیر	استیل ضدزنگ 0Cr17(SUS430)
پلاستیک		پخش هدایت کننده مواد به سمت تیغه AS
		فشار دهنده، فشار دهنده کوچک، نگهدارنده تیغه ABS
		نگهدارنده تیغه PP

این سری محصولات شامل مواد تماس با مواد غذایی می‌باشند، برخی از مدل‌ها ممکن است شامل مواد خاصی نشوند، بنابراین محصول واقعی را ملاک قرار دهید!

نکات مهم

۱. زمانی که دستگاه روشن می‌شود، چراغ نشانگر برق به رنگ آبی در می‌آید.

۲. هنگام استفاده از دهانه ورودی مواد با قطر بزرگ، نباید مقدار زیادی ماده غذایی را وارد کنید، تا جایی که فشار دهنده قابل وارد کردن نباشد.

۳. هنگام تعویض تیغه، دست‌ها باید از لبه تیغه دور باشند، زیرا تیغه تیز است و ممکن است باعث آسیب شود.

۴. اطمینان حاصل کنید که تمام لوازم جانبی قبل از شروع پردازش مواد غذایی در جای خود قرار دارند.

۵. بعد از استفاده، لطفاً به موقع دوشاخه را از پریز برق بکشید.

۶. اگر دستگاه برای مدت طولانی استفاده نمی‌شود، لطفاً آن را تمیز و خشک کرده و در جای مناسبی نگهداری کنید.

توجهات:

۱. محصول را در مایکروویو، ماشین ظرفشویی یا یخچال قرار ندهید تا از آسیب به محصول جلوگیری شود.

۲. هنگام کارکرد دستگاه، به قسمت‌های چرخنده دست نزنید و دستگاه را باز نکنید.

۳. پس از ۳۰ دقیقه کار مداوم، پیشنهاد می‌شود دستگاه را به مدت یک ساعت استراحت دهید و سپس مجدداً استفاده کنید.

۴. این دستگاه نمی‌تواند برای پردازش مواد سخت مانند مواد منجمد و مواد مشابه استفاده شود.

۵. تیغه بسیار تیز است. برای جلوگیری از آسیب‌دیدگی، مستقیماً به تیغه دست نزنید.

۶. این دستگاه نباید توسط کودکان استفاده شود. دستگاه و سیم آن را دور از دسترس کودکان نگه دارید. این دستگاه را می‌توان توسط افرادی با توانایی‌های جسمی، حسی یا ذهنی محدود یا با کمبود تجربه و دانش استفاده کرد، اگر تحت نظارت یا راهنمایی در خصوص استفاده ایمن از دستگاه باشند و خطرات مربوطه را درک کنند. کودکان نباید با دستگاه بازی کنند.

۷. دستگاه باید روی سطح صاف و پایدار قرار گیرد، نباید در نزدیکی منابع حرارتی باشد یا روی سایر لوازم برقی قرار داده شود. همچنین در طول استفاده، نظارت شود تا از وقوع حوادث جلوگیری شود.

۸. قبل از تمام شدن کار دستگاه یا تمیز کردن آن، باید دوشاخه را از پریز برق جدا کنید تا از برق‌گرفتگی جلوگیری شود.

۹. اگر سیم برق آسیب دیده است، برای جلوگیری از خطر، باید توسط کارخانه تولیدی یا بخش‌های تعمیراتی معتبر یا متخصصین مشابه جایگزین شود. از باز کردن و تعمیر خودسرانه دستگاه به شدت پرهیز کنید.

۱۰. هنگام تعویض تیغه، دست خود را از لبه تیغه دور نگه دارید، زیرا تیغه بسیار تیز است و ممکن است باعث آسیب‌دیدگی شود.

۱۱. این محصول فقط برای استفاده خانگی و داخل منزل طراحی شده است.

۱۲. قبل از تعویض قطعات یا نزدیک شدن به بخش‌هایی که در حال کار هستند، دستگاه را خاموش و از برق جدا کنید.

۱۳. هنگام جابجایی تیغه‌های تیز و در حین تمیز کردن، باید با دقت عمل شود.

۱۴. همیشه هنگامی که دستگاه بدون نظارت مانده یا قصد سرهم بندی، جداسازی یا تمیز کردن آن را دارید، دوشاخه را از پریز برق جدا کنید.

مشخصات محصول: مدل محصول: NL-3101BG

خطاها و روش‌های برطرف کردن آنها

اگر در حین استفاده از دستگاه با هر یک از ایرادهای زیر مواجه شدید، لطفاً مطابق جدول زیر آنها را بررسی کرده و با آنها برخورد کنید.

پدیده	دلیل	روش درمان
عدم کارکرد	۱. تجهیزات به‌درستی سرهم نشده‌اند ۲. اتصال به منبع تغذیه برقرار نیست	۱. تجهیزات را طبق دستورالعمل مونتاژ کنید. ۲. به منبع تغذیه ۲۲۰ ولت متصل شوید.
توقف ناگهانی در حین کار	۱. زمان پردازش مواد غذایی بیش از حد طولانی است	۱. باقی‌مانده‌های مواد غذایی را به‌موقع تمیز کنید.
	۲. کابل برق شل شده است	۲. کابل برق را مجدداً وارد کنید.
	۳. مواد غذایی بسیار سخت هستند	۳. مواد غذایی سخت‌تر را بردارید.
نویز غیرعادی	۱. لوازم جانبی به‌درستی نصب نشده‌اند ۲. دستگاه در موقعیت مایل قرار گرفته	۱. دستگاه را متوقف کرده و بررسی کنید که لوازم جانبی به‌درستی نصب شده‌اند یا خیر. ۲. لطفاً دستگاه را بر روی سطح افقی قرار دهید.
	۳. صدای زیاد هنگام برش مواد غذایی	۳. بررسی کنید که آیا دستگاه به‌درستی مونتاژ شده است یا خیر. در صورت رفع مشکل مونتاژ، از استفاده بیشتر خودداری کنید.

زمان مورد نیاز برای برش مواد

نوع تیغه	انواع مواد غذایی	مقدار مواد غذایی در هر بار استفاده	زمان پردازش مواد غذایی در هر بار استفاده
تیغه پنیر	سیب زمینی، هویج، تربچه، خیار، سیب‌زمینی شیرین	کیلوگرم 1 ≤	دقیقه 2 ≤
تیغه برش گل	سیب زمینی، هویج، تربچه، خیار، سیب‌زمینی شیرین	کیلوگرم 1 ≤	دقیقه 2 ≤
تیغه خرد ضخیم	سیب زمینی، هویج، تربچه، خیار، سیب‌زمینی شیرین	کیلوگرم 1 ≤	دقیقه 2 ≤
تیغه خرد نازک	سیب زمینی، هویج، تربچه، خیار، سیب‌زمینی شیرین	کیلوگرم 1 ≤	دقیقه 2 ≤
تیغه برش	سیب زمینی، هویج، تربچه، خیار، سیب‌زمینی شیرین	کیلوگرم 1 ≤	دقیقه 2 ≤



اسلایسر غذای برقی

دفترچه راهنما

مدل: NL-3101BG



برای تمیز کردن دستگاه، آن را در برق قرار

ندهید. لطفاً قبل از استفاده، دستورالعمل‌ها را

به دقت بخوانید.