




New Land Safe Slicer

- Multifunction
- Effortless
- Portable

Model: NL-3102BG



Product Structure

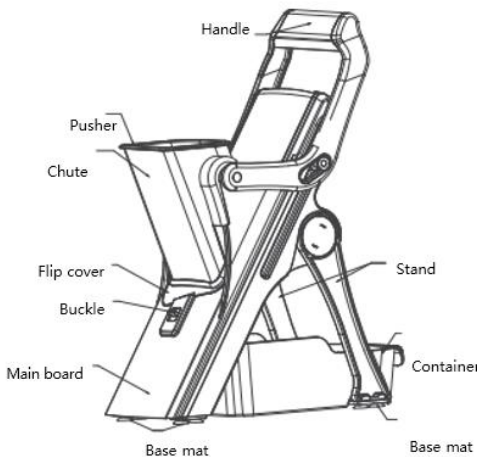


Features:

1. Designed to keep hands and fingers away from blades, for an easier, safer way to slice.
2. Simple operation, multiple blade combinations, easy to switch.
3. Lever hand press design, more effortless.
4. Detachable parts, easy to clean.

MADE IN CHINA



Step Diagram

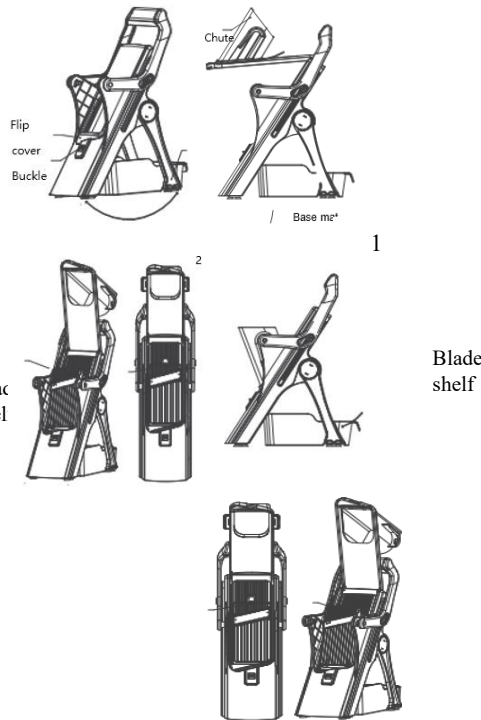

Instructions

1. Install the product
Take out the product, open and set up the product stand (Picture 1). Press the spring latch at the bottom of the main board, open the flip cover of the main board at the same time, and slide the food chute into the slot (Picture 2). After being installed, insert the blade into the main board (Picture 3). Put down the flip cover of the main board and ensure that the spring latch is locked, put the food container under the main board, and fix the stand. (Picture 4).
2. Food processing
Put the ingredients into the chute. If the ingredients are large, please cut

them into suitable sizes first. Then press the handle of the product, and at the same time use the pusher to gently push the ingredients down to make the ingredients touch blade. Then cut the ingredients by pressing down on the handle, just repeat the operation. (Picture 5).

3. Blade replacement

Press the buckle of main board and open the flip cover at the same time, then take out the previous shred/slice blade, align the new blade with the buckle and install it in place (Picture 6). Close the flip cover to complete the blade switch.

Attentions:

1. Make sure that all the access 2 installed properly and run normally before using.
2. Do not use the product violently.
3. Do not put your fingers into the cutting mouth or touch the blades.
4. Please don't be washed by dishwasher or boiled water.
5. Keep the product away from open fires and heat sources.
6. Keep the product out of reach of children. People who are lack of relevant experience and knowledge cannot use the product.

Cleaning And Storage

1. After the product is used, it can be cleaned with water or a soft damp cloth. The flip cover can be opened when cleaning. Remove the chute, blade, and container for cleaning, or use a brush to clean corners and other areas where are not easy to clean.
2. Do not use excessive force when you clean the product, which avoids product damage.
3. Do not clean the product with steel wool, abrasive cleaning agents or corrosive liquids. (strong acids, strong alkalis or organic solvents, etc.)
4. After cleaning the product, please wipe or dry the accessories, then reinstall them and put them away.
5. When the product is not used for a long time, please pack the product well and place it in a dry and ventilated place, avoid direct sunlight.

After-sales Service

If you are using this product when the failure or cannot work properly, please contact the after-sales service personnel of this product to replace the qualified product, Because of the different failure circumstances,

sometimes it is not the product quality problem, please read this instruction manual carefully before returning that product. This instruction manual will not be reissued, Please keep it properly to avoid loss.

Product Quality Assurance After-sale Certificate

Name :	Phone :	Address :
The product has passed the inspection and the product instruction manual is attached. If you operate this product normally according to this manual, and the product itself fails, you can contact our customer service staff. Please confirm that the user information (name, address, etc.) on the product quality assurance certificate and repair certificate is accurate, because these information may be used in the after-sales service center, please understand. In addition, For consumer privacy, we will not publish, rent or display your information to any third party, except in special circumstances, However, unless required by the court or for the purpose of guaranteeing the interests of the Company, etc	If this product breaks down during the warranty period, please bring the product manual and product together to the after-sales service personnel for maintenance. But if any of the following situations occurs, even within the warranty period, we cannot offer free charge service. 1. The purchase time may exceed one year when this product breaks down. 2. Cannot provide instructions, sales seals or proof of purchase to prove the purchase time. 3. Deliberately tampering with the date and other relevant information on the quality assurance certificate. 4. Failures caused by natural disasters such as wars, earthquakes, typhoons, fires, floods and uncontrollable circumstances. 5. The product is scratched, stained or damaged in appearance during use. 6. Failures caused by unauthorized disassembly, assembly, and maintenance. 7. Failures caused by falling, being placed in water, improper operation, violation of regulations or violation of the precautions mentioned in the situation (see precautions page).	

اسلایسر ایمن نیولند

- چندکاره
- آسان در استفاده
- قابل حمل

مدل: NL-3102BG



ارائه دهید. اما در صورت بروز هر یک از شرایط زیر، حتی در دوره گارانتی، خدمات رایگان ارائه نخواهیم داد:

۱. مدت زمان خرید محصول بیشتر از یک سال گذشته باشد.
۲. نتوانید دفترچه راهنما، مهر فروش یا مدرک خرید جهت اثبات زمان خرید ارائه کنید.
۳. عمداً تاریخ یا اطلاعات مرتبط را در گواهی تضمین کیفیت تغییر داده باشید.
۴. خرابی ناشی از بلایای طبیعی مانند جنگ، زلزله، طوفان، آتش‌سوزی، سیل و شرایط غیر قابل کنترل باشد.
۵. محصول در طی استفاده خراشیده، لکه‌دار یا ظاهر آن آسیب دیده باشد.
۶. خرابی‌های ناشی از جداسازی، سرهم بندی یا تعمیرات غیرمجاز باشد.
۷. خرابی‌های ناشی از افتادن، قرار گرفتن در آب، کاربری نامناسب، تخلف از مقررات یا عدم رعایت نکات احتیاطی ذکر شده در دفترچه راهنما.

محصول ارائه می‌شود. اگر این محصول را طبق دستورالعمل‌های این دفترچه به‌طور عادی استفاده کنید و مشکلی از سمت خود محصول پیش بیاید، می‌توانید با بخش خدمات مشتریان ما تماس بگیرید.

لطفاً مطمئن شوید که اطلاعات کاربر (مانند نام و آدرس) در گواهی تضمین کیفیت محصول و گواهی تعمیر به‌درستی ثبت شده است، زیرا این اطلاعات ممکن است در مرکز خدمات پس از فروش مورد استفاده قرار گیرد. برای حفظ حریم خصوصی مصرف‌کننده، ما اطلاعات شما را به هیچ شخص ثالثی منتشر، اجاره یا نمایش نخواهیم داد، مگر در شرایط خاص. البته، این کار تنها در صورتی انجام می‌شود که دادگاه درخواست کند یا برای حفظ منافع شرکت لازم باشد.

توجه

۱. قبل از استفاده مطمئن شوید که تمام قطعات به درستی نصب شده و به‌طور عادی کار می‌کنند.
۲. با محصول به آرامی کار کنید.
۳. انگشتان خود را وارد دهانه برش نکنید و به تیغه‌ها دست نزنید.
۴. محصول را با ماشین ظرفشویی یا آب جوش نشویید؛ این کار باعث تغییر شکل آن می‌شود.
۵. محصول را از منابع حرارتی و آتش باز دور نگه دارید.
۶. محصول را از دسترس کودکان دور نگه دارید. افراد بدون تجربه و دانش مرتبط نباید از محصول استفاده کنند.


تمیز کردن و نگهداری:

۱. بعد از استفاده از محصول، می‌توان آن را با آب یا یک پارچه مرطوب نرم تمیز کرد. درب تاشو هنگام تمیز کردن قابل باز شدن است. هدایتگر غذا، تیغه و ظرف را برای تمیز کردن جدا کنید، یا از برس برای تمیز کردن گوشه‌ها و مناطق دیگری که به راحتی قابل تمیز کردن نیستند استفاده کنید.
۲. هنگام تمیز کردن محصول از نیروی زیاد استفاده نکنید تا از آسیب دیدن محصول جلوگیری شود. محصول را با سیم ظرفشویی، مواد شوینده ساینده یا مایعات خورنده (اسیدهای قوی، قلیایی‌های قوی یا حلال‌های آلی و غیره) تمیز نکنید.
۳. بعد از تمیز کردن محصول، لطفاً قطعات را خشک یا با پارچه پاک کنید، سپس آنها را مجدداً نصب کرده و کنار بگذارید.
۴. وقتی محصول برای مدت طولانی استفاده نمی‌شود، لطفاً آن را به خوبی بسته‌بندی کرده و در مکانی خشک و تهویه شده قرار دهید و از تابش مستقیم آفتاب خودداری کنید.

خدمات پس از فروش

اگر در حین استفاده از این محصول با خرابی یا عدم عملکرد صحیح مواجه شدید، لطفاً با کارکنان خدمات پس از فروش این محصول تماس بگیرید تا اقدامات لازم صورت گیرد. به دلیل شرایط مختلف خرابی، گاهی اوقات مشکل از کیفیت محصول نیست، لطفاً قبل از بازگرداندن محصول، این دفترچه راهنما را به دقت مطالعه کنید. این دفترچه راهنما مجدداً صادر نخواهد شد، لطفاً آن را به خوبی نگهداری کنید تا از گم شدن جلوگیری شود.

گواهی تضمین کیفیت محصول پس از فروش		
نام:	تلفن:	آدرس:
محصول پس از بازرسی تأیید شده و دفترچه راهنمای آن نیز همراه		
در صورت خرابی محصول در دوره گارانتی، لطفاً دفترچه راهنما و خود محصول را به همراه داشته باشید و به خدمات پس از فروش		

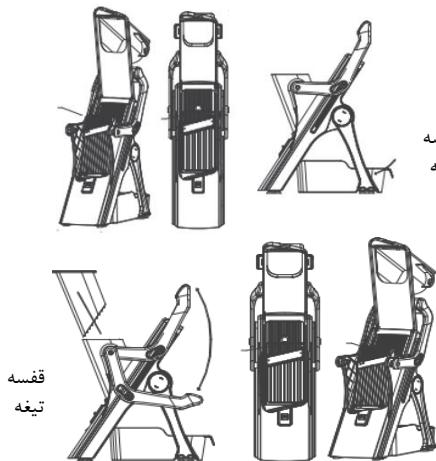

قفسه
تیغه

قفسه
تیغه

دستورالعمل‌ها:

۱. نصب محصول

محصول را خارج کنید، پایه محصول را باز کرده و تنظیم کنید (تصویر ۱).

قفل فنری در پایین صفحه اصلی را فشار دهید، همزمان درب تاشوی صفحه اصلی را باز کنید و هدایتگر غذا را به داخل شکاف بکشید (تصویر ۲). پس از نصب، تیغه را به داخل صفحه اصلی وارد کنید (تصویر ۳). درب تاشوی صفحه اصلی را پایین بگذارید و مطمئن شوید که قفل فنری قفل شده است، ظرف غذا را زیر صفحه اصلی قرار دهید و پایه را ثابت کنید (تصویر ۴).


۲. پردازش مواد غذایی

مواد را به داخل مجرای غذا بیندازید. اگر حجم مواد بزرگ هستند، لطفاً ابتدا آنها را به اندازه‌های مناسب برش دهید. سپس دسته محصول را فشار دهید و همزمان از فشاردهنده برای به آرامی فشار دادن مواد به پایین استفاده کنید تا مواد با تیغه تماس پیدا کنند. سپس با فشار دادن دسته، مواد را برش دهید و این عملیات را تکرار کنید (تصویر ۵).

۳. تعویض تیغه

قفل صفحه اصلی را فشار دهید و همزمان درب تاشوی صفحه اصلی را باز کنید، سپس تیغه برش قبلی را بردارید، تیغه جدید را با قفل تنظیم کرده و در جای خود نصب کنید (تصویر ۶). درب تاشو را ببندید تا تعویض تیغه تکمیل شود.

ساختار محصول

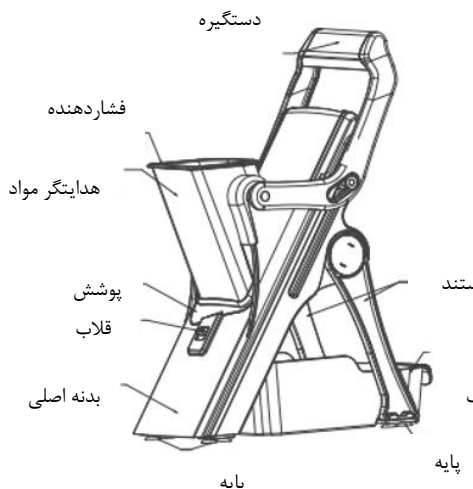


ویژگی‌ها:

۱. این دستگاه طوری طراحی شده است که دست‌ها و انگشتان برای برش آسان‌تر و ایمن‌تر از تیغه‌ها دور نگه‌داشته شده‌اند.
۲. عملکرد ساده دارد، ترکیب تیغه‌های متعدد است و تعویض آسان است.
۳. طراحی با دسته فشار اهرمی انجام شده که کار با دستگاه را آسان می‌کند.
۴. قطعات جداشدنی بوده و به راحتی تمیز می‌شوند.



نمایش محصول

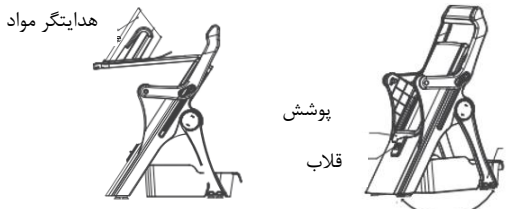

پایه

پوشش

قلاب