

NEW LAND

New Generation of Appliance



اسپیگر مخصوص جشن

مدل: NL-3104BL

فارسی ☐
English ☐

مشخصات فنی اسپیکر:

توان خروجی: ۸۰ وات

امپدانس: ۴ اهم

حساسیت ورودی: 3 ± 94 دسی بل

پاسخ فرکانسی: ۵۰-۱۸ کیلوهرتز

نسبت سیگنال به نویز ≥ 70 (S/N): دسی بل

اندازه درایو: "۱+۱۰x۲" اینچ

نام بلوتوث: NL-3104BL

فرکانس FM: ۸۷.۵۰-۱۰۸.۰۰ مگاهرتز

آداپتور برق: ۱۵DC ولت/۳ آمپر

دستورالعمل‌ها:

۱. شارژ اولیه: باتری قبل از استفاده اول باید به مدت ۸ ساعت شارژ شود.
۲. تعویض باتری: در صورت نیاز به تعویض باتری، حتماً از باتری‌هایی با مشخصات مشابه استفاده کنید، در غیر این صورت ممکن است دستگاه به درستی کار نکند یا آسیب ببیند.
۳. افزایش طول عمر باتری: برای افزایش طول عمر باتری، پس از هر بار استفاده، حتی اگر باتری به نظر خالی نباشد، باید آن را شارژ کنید.
۴. زمان شارژ: زمان شارژ بستگی به مشخصات باتری دارد. در حالت کلی، زمان شارژ (یا اگر ولتاژ منبع تغذیه ناپایدار باشد) معمولاً بین ۸ تا ۱۶ ساعت است.

۵. فاصله از نمایشگر: لطفاً اسپیکر را بیش از ۲ متر از نمایشگرهای CRT یا تلویزیون‌ها دور نگه دارید، زیرا میدان مغناطیسی اسپیکر می‌تواند باعث ایجاد تداخل مغناطیسی و مشکلاتی مانند مغناطیسی شدن یا تغییر رنگ در نمایشگر شود.

عملکرد بلوتوث

اتصال اولیه بلوتوث به موبایل

۱. اسپیکر را روشن کنید. سپس دکمه "MODE" یا "INPUT" روی پنل یا کنترل از راه دور را فشار دهید تا اسپیکر به حالت بلوتوث منتقل شود. بعد از آن، بلوتوث موبایل خود را روشن کنید.
۲. در لیست دستگاه‌های بلوتوث موبایل، نام "NL-3104BL" را جستجو کنید و انتخاب کنید. زمانی که اتصال برقرار شود، اسپیکر صدای اطلاع‌رسانی پخش می‌کند.
۳. حالا موبایل خود را به اسپیکر وصل کنید و یک آهنگ از پلیئر موبایل پخش کنید. موسیقی از طریق بلوتوث به اسپیکر منتقل شده و صدا از آن پخش می‌شود.

اتصال خودکار به موبایلی که قبلاً وصل شده

- وقتی بلوتوث موبایل روشن باشد، کافی است دکمه "MODE" را فشار دهید و حالت بلوتوث را انتخاب کنید. اسپیکر به طور خودکار به آخرین موبایلی که به آن وصل شده، متصل می‌شود.
- همچنین می‌توانید فهرست دستگاه‌های بلوتوث در موبایل خود را باز کنید و وقتی "NL-3104BL" را پیدا کردید، آن را انتخاب کنید تا به اسپیکر متصل شود.

ویژگی TWS (True Wireless Stereo)

تکنولوژی استریو بی سیم واقعی (TWS)

تکنولوژی TWS به شما این امکان را می دهد که دو اسپیکر مشابه و سازگار با TWS را به صورت بی سیم به هم متصل کنید. در این حالت، دو اسپیکر به طور خودکار به یک سیستم استریو تبدیل می شوند که صداها را کانال چپ و راست را به طور جداگانه پخش می کند.

چگونه اتصال TWS برقرار کنیم؟

توجه: برای استفاده از این ویژگی، هر دو اسپیکر باید مدل یکسانی داشته باشند و با TWS سازگار باشند.

۱. هر دو اسپیکر را روشن کرده و حالت "Bluetooth" را انتخاب کنید.
۲. دکمه TWS را روی یکی از اسپیکرها فشار داده و نگه دارید تا صدای هشدار بشنوید. این اسپیکر به اسپیکر اصلی (کانال چپ) تبدیل می شود و به طور خودکار به جستجوی اسپیکر دیگر (کانال راست) می پردازد. بعد از اتصال، صدای هشدار دیگری خواهید شنید.
۳. حالا موبایل یا پخش کننده بلوتوث خود را به اسپیکر متصل کنید. پس از اتصال، می توانید از سیستم استریو بی سیم TWS موسیقی پخش کنید.

عملکرد در حالت TWS

در حالت TWS، هر تغییری که روی اسپیکر اصلی اعمال شود، به طور خودکار روی اسپیکر دیگر هم اعمال می شود. برای مثال، اگر حجم صدا را کم یا زیاد کنید، آهنگ قبلی یا بعدی

را انتخاب کنید، پخش را متوقف یا شروع کنید، یا اسپیکر را روشن و خاموش کنید، همه این تغییرات به صورت همزمان در هر دو اسپیکر اعمال می شود.

قطع اتصال TWS

وقتی دو اسپیکر از طریق TWS به هم وصل می شوند، زمانی که هر دو اسپیکر روشن باشند و در حالت بلوتوث قرار گیرند، به طور خودکار دوباره به هم متصل می شوند. برای قطع اتصال دو اسپیکر، کافی است دکمه TWS را به مدت طولانی فشار دهید.

عملکرد میکروفن بی سیم

این محصول دارای باتری داخلی است که برای استفاده در کنسرت های فضای باز، تبلیغات، سرگرمی و سایر فعالیت ها بسیار مناسب است. لطفاً قبل از استفاده در محیط های بیرون، باتری را به طور کامل شارژ کنید تا اسپیکر بتواند برای مدت طولانی در فعالیت های بیرونی مورد استفاده قرار گیرد.

برای تنظیم حجم صدای میکروفن، از ولوم آن به میزان دلخواه استفاده کنید. لطفاً پس از استفاده، میکروفن را خاموش کنید.

محدوده مؤثر میکروفن بی سیم

محدوده عملکرد مؤثر میکروفن بی سیم حدود ۱۰ متر است. برای حفظ کیفیت صدا و جلوگیری از تداخل، از فاصله بیشتر از این محدوده استفاده نکنید. اگر باتری میکروفن کم شود یا سیگنال های رادیویی در محیط خیلی قوی باشند، ممکن است محدوده عملکرد آن کاهش یابد.

نکات برای استفاده بهتر از میکروفن



- برای بهترین کیفیت صدا هنگام خواندن، فاصله دهان از میکروفن باید بین ۵ تا ۱۵ سانتی‌متر باشد و بهترین زاویه برای صحبت یا خواندن، ۴۵ درجه است.
- از دو میکروفن با فرکانس یکسان در فاصله نزدیک به هم استفاده نکنید، زیرا باعث تداخل یا سکوت در صدا می‌شود.

استفاده از چند اسپیکر و میکروفن بی‌سیم همزمان

اگر بیش از یک دستگاه اسپیکر فعال با میکروفن‌های بی‌سیم خریداری کرده‌اید و می‌خواهید آن‌ها را همزمان استفاده کنید، لطفاً هر اسپیکر را به فرکانس‌های متفاوت تنظیم کنید. اگر این کار را نکنید، باید حداقل ۱۰ متر فاصله بین دو اسپیکر با فرکانس یکسان باشد تا از تداخل جلوگیری شود.



همچنین توصیه می‌شود اسپیکرها را نزدیک به دستگاه‌های VCD/CD/DVD قرار ندهید، زیرا این دستگاه‌ها فرکانس‌های تداخلی قوی دارند و می‌توانند عملکرد صحیح میکروفن بی‌سیم را مختل کنند.

احتیاطات ایمنی

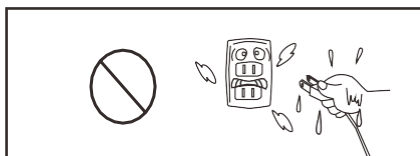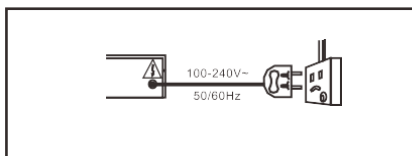



۱. برق هنگام استفاده یا شارژ دستگاه با برق AC، فقط از منبع برقی که در دفترچه راهنما ذکر شده استفاده کنید.

۲. احتیاط از شوک الکتریکی هرگز دستگاه را با دستان مرطوب وصل یا جدا نکنید، زیرا ممکن است باعث شوک الکتریکی شود. دستگاه را روی سطح مرطوب، زیر باران یا در جایی که ممکن است مایعات روی آن بریزد قرار ندهید. از قرار دادن هرگونه ظرف حاوی مایع روی دستگاه خودداری کنید.

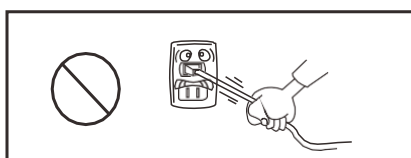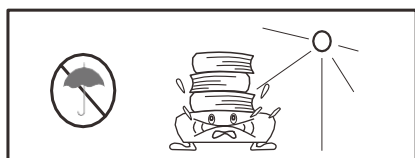


۳. از قرار دادن اشیای سنگین روی دستگاه خودداری کنید هیچ چیزی را روی دستگاه قرار ندهید. دستگاه قادر به تحمل بار اضافی نیست. از تابش مستقیم نور خورشید و قرار گرفتن در کنار منابع گرمایی مانند اجاق یا رادیاتور خودداری کنید. همچنین دستگاه را در محیط‌هایی که گرد و غبار، دمای بالا، نور زیاد یا میدان‌های مغناطیسی دارند، قرار ندهید.

۴. محافظت از سیم برق از کشیدن سیم برق خودداری کنید. برای قطع برق، فقط پلاگ را بکشید. سیم برق را از مکان‌هایی که ممکن است زیر پا برود یا پیچیده شود دور نگه دارید. از قرار دادن اشیای سنگین روی سیم برق نیز خودداری کنید.

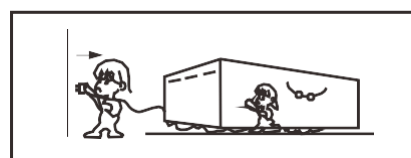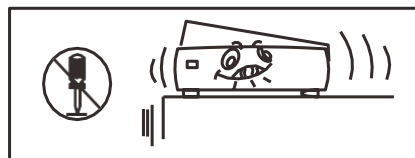

۵. از باز کردن دستگاه خودداری کنید باز کردن دستگاه ممکن است منجر به شوک الکتریکی شدید شود. از افتادن قطعات فلزی یا مایعات به داخل دستگاه جلوگیری کنید.
۶. قطع برق وقتی دستگاه کاملاً خاموش شد، سیم برق را از پریز جدا کنید. پلاگ باید در دسترس باشد تا بتوانید به راحتی برق را قطع کنید.


دستورالعمل‌های عملکرد پنل بالایی

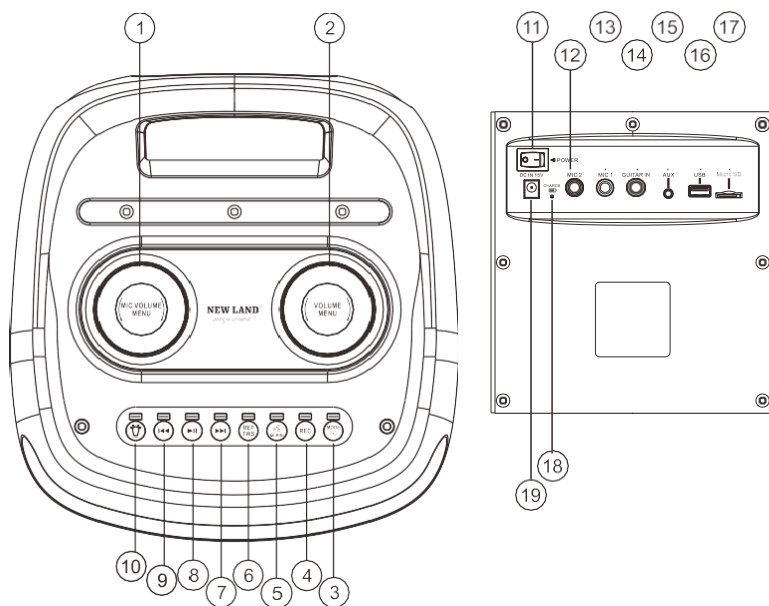

۱. کنترل ولوم میکروفون / کنترل ولوم گیتار / کنترل ولوم تریبل میکروفون / کنترل ولوم
باس میکروفون / کنترل ولوم اکو
۲. کنترل ولوم موسیقی / کنترل ولوم تریبل / کنترل ولوم باس

۳. فشردن کوتاه کلید "مود" / قطع بلوتوث: برای ۳ ثانیه فشار دهید
۴. کلید ضبط (REC)
۵. کلید اولویت میکروفون
۶. کلید تکرار / TWS: برای ۳ ثانیه فشار دهید
۷. کلید بعدی و افزایش کانال FM
۸. کلید پخش/مکث و اسکن کانال FM
۹. کلید قبلی و کاهش کانال FM
۱۰. کلید حالت نمایش LED: فشردن کوتاه برای تغییر حالت‌های مختلف نمایش
۱۱. کلید روشن/خاموش
۱۲. ورودی میکروفون ۲ (MIC2)
۱۳. ورودی میکروفون ۱ (MIC1)
۱۴. ورودی گیتار
۱۵. ورودی AUX
۱۶. پورت USB
۱۷. پورت Micro SD
۱۸. شاخص شارژ
۱۹. ورودی آداپتور DC 15V

دستورالعمل‌های عملکرد ریموت کنترل

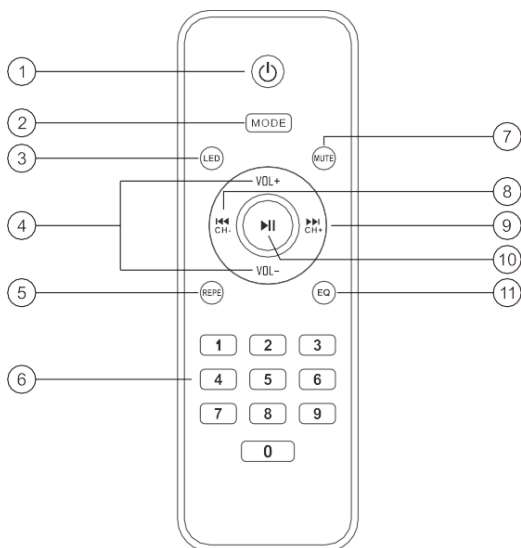

۱. کلید استندبای
۲. کلید مود: برای انتخاب منبع سیگنال ورودی
۳. کلید LED
۴. کلید ولوم + / -
۵. کلید تکرار
۶. کلید انتخاب ترک
۷. کلید بی صدا (Mute)
۸. کلید قبلی و کاهش کانال FM
۹. کلید بعدی و افزایش کانال FM
۱۰. کلید پخش/مکث
۱۱. کلید تغییر تنظیمات اکولایزر EQ

Technical Specifications

Power: 80W

Impedance: 4Ω

Input Sensitivity: 94±3dB

Frequency Response: 50-18K Hz

S/N Ratio: ≥70dB

Drive Unit: 1"+2x10"

Bluetooth Name: NL-3104BL

FM Frequency: 87.50-108.00 MHz

Power Adapter: DC 15V/3A

Instructions

- The battery charges for 8hours before the first use of this product.
- It must be replaced with batteries of the same specifications when needed, otherwise, the product may not work properly or be damaged.
- To extend battery life, it needs to be charged regardless of the lack of power after each use.
- The charging time depends on the battery specifications. The charging scheme (or the power supply voltage is unstable) is generally 8-16hours.
- Please keep away from the product more than 2meters from CRT display or television, because of the speaker magnet field is strong, magnetic interference causes display magnetization or discoloration phenomenon.

Bluetooth Operation

First connection of bluetooth with cellphone

1. Turn the power on, press the "MODE" key or ⏮ INPUT" key on the panel or remote control, and switch the speaker to Bluetooth channel. Then turn on the mobile phone Bluetooth function.
2. Search the Bluetooth device list and select the Bluetooth name "NL-3104BL".The speaker will make a notification tone when the connection is successful.
3. Select the Bluetooth which is on Bluetooth device list.

Open the mobile phone music player and play a song. The music is transferred via

Bluetooth and sound comes out through the Bluetooth speaker.

Connect to the mobile phone which already been connected before.

When the mobile phone Bluetooth is turned on, press the ⏮ MODE ⏮ and select to Bluetooth mode, the Bluetooth speaker will automatically connect to the mobile phone which is connected last time. Another way is that you can search the Bluetooth list on your mobile phone, when you find the "NL-3104BL", select it and connect your mobile phone to the Bluetooth speaker.

TWS function Operation

TRUE WIRELESS STEREO (TWS) TECHNOLOGY

TWS technology enables user to make wireless connection between two speakers which are same model and compatible with TWS. In TWS connection, two speakers will be automatically grouped to be a Stereo-speaker System which outputs the left and right channel.

HOW TO ESTABLISH

TWS CONNECTION? Reminding: Two speakers must be same model and both compatible with TWS.

1. Please switch on both speakers and select "Bluetooth" Mode;
2. Press the TWS button on the control panel of one of the speakers until you hear a Prompt sound. It becomes the main speaker (left channel) and automatically searches for and connects with the other speaker (right channel). After connection, you will hear a Prompt sound
3. Connect your mobile phone or Bluetooth player to the speaker by Bluetooth. After connection, you can play music with the TWS Stereo-speaker System.

TWS MODE MANIPULATIONS

In TWS mode, manipulations to the main speaker will be simultaneously effected in the other speaker, for example, volume up and down, previous and next song selection, play and pause, power on and off.

DISCONNECT TWS

Two speakers connected by TWS will be automatically reconnected when they are power on and both in Bluetooth mode. Long press TWS button to disconnect two speakers by TWS.

Operation wireless microphone

This product built-in battery, especially suitable for outdoor concert, advertising, entertainment and other activities. Please charge the battery full first before using in outdoor environment. To ensure that the speaker can be used for a long time for outdoor activities.

To adjust the microphone volume knob to you like when you are demo.

Please turn off the microphone after using

Wireless microphone effective distance within 10 meters. In order to not affecting the effect, please do not use over than the valid range. When the battery decreased or the environment radio interference source signal is too strong, it will shorten the using distance.



To achieve the best effect of singing, the distance of mouth and microphone should be keep in 5-15 cm, and the best angle is 45 degrees.

Please don't use the same frequency of microphone to sing at the same time in a short distance. It will lead to silence or interference.

If you buy more than two sets of active speaker with wireless microphones and want to use together at the same time, please select standard frequency of different varieties. If not, there must be 10 meters distance at lease between two sets speaker in same frequency.

So as not to cause interference and other unnecessary trouble. At the same time, don't put speakers too close to VCD/CD/DVD during using. They are strong interference frequency equipments. In order to avoid mutual interference between the same frequency and directly affects the normal work of the wireless microphone signal receiving.

Safety Precautions

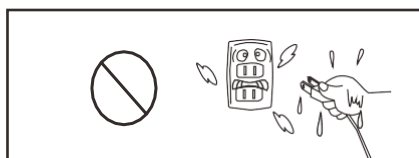
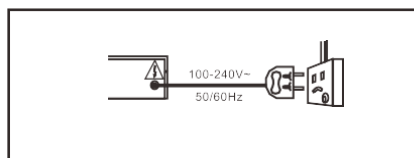


1. Power

When working/recharging under AC power, please operate only under the power indicated on the instructions marked on the device.

2. Caution to avoid Electrical Shocks

NEVER plug or unplug the device with wet hands to avoid electrical shock. Do not place the device on a wet area or under the rain or in a place where it can collect any liquid on its surface. Do not place any container with water or any other liquid on top of the device.

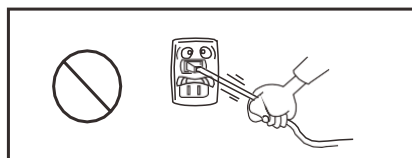
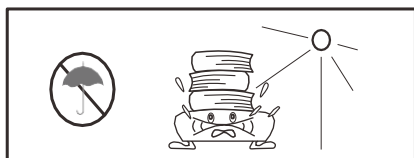


3. Do not ballast heavy objects

Do not place any items on top of the device. This machine cannot bear any load. Avoid direct sunlight and keep it away from any heating source as stoves, radiators, etc. Do not install in environments with dust, high temperatures, strong lights or magnetic fields, etc.

4. Power line protection

Do not pull the cord; to disconnect from the electrical outlet pull the plug. Keep the power cord away from places where it could be stepped on, pinched, or tripped over. Do not place any heavy objects over the cord.

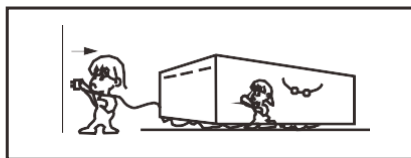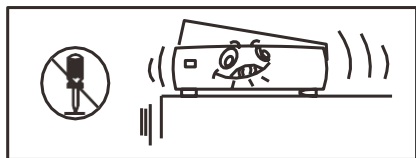


5. Do not dismantle the case. Serious

electric shock may occur if you touch internal parts of the device. Prevent any metal pieces and liquids from dropping inside the device openings.

6. Power line protection


When the unit is completely powered off, please disconnect the power cord, the plug is used for the power cut-off device and must be kept easy to operate.

Top Panels operating instructions

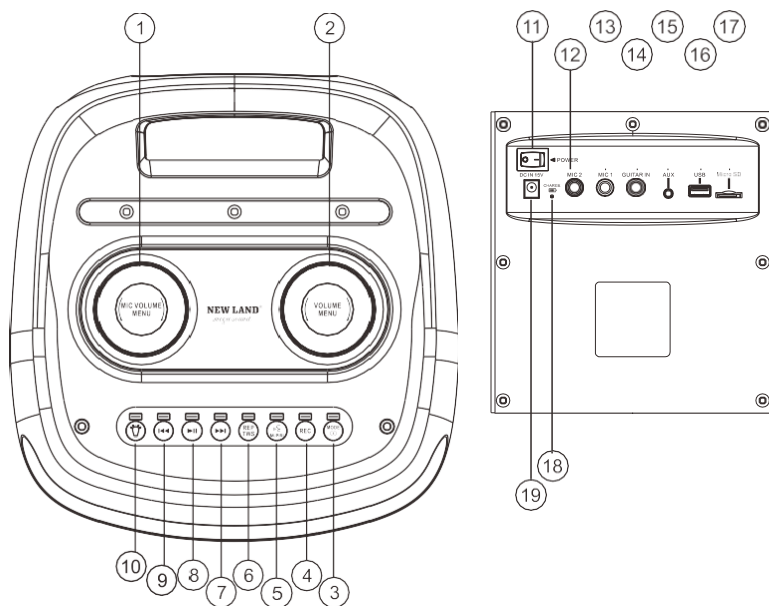

1.MIC Volume control/ Guitar Volume control/ MIC Treble Volume control/ MIC BASS Volume control/ Echo Volume control		
2.Music Volume control/ Treble Volume control/ BASS Volume control		
3.Short press mode Key/ Bluetooth cut off press it for 3 seconds		
4.REC key		5.Microphone Priority key
6.Repeat key / TWS-press it for 3 seconds		7.Next & FM channel + key
8.Play/Pause & FM scan key		9.Previous & FM channel - key
10.LED display mode button/ Short press in various display mode conversion		
11.Power ON/OFF	12.MIC2 input	13.MIC1 input
14.Guitar input	15.AUX input	16.USB jack
17.Micro SD jack	18.Recharging indicator	19.DC15V Adapter input

Operating instructions for Remote controllers

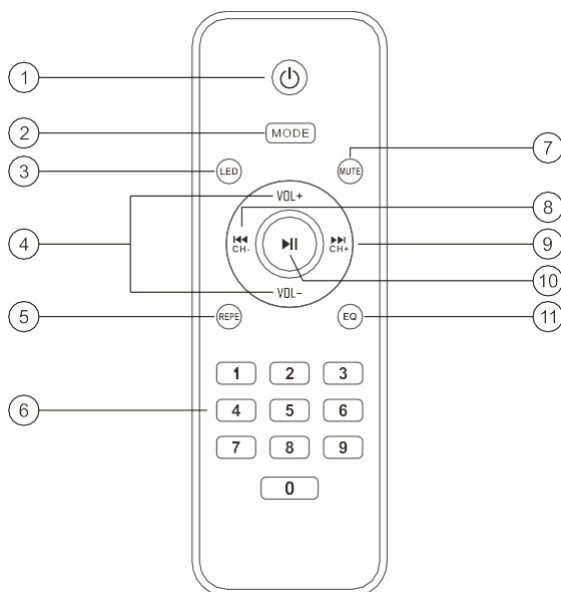

1.Standby Key	2.Mode Key- to Select	Input Singal Source
3.LED Switch	4.Volume +/- Key	5.Repeat Key
6.Track selection key	7.Mute Key	8.Previous /FM ch-Key
9.Next /FM ch+ Key	10.Play/ Pause	11.EQ Mode Key



QUALITY EXPERIENCE



Party Speaker
Model: NL-3104BL

فارسی ☐
English ☐