

# NEW LAND

New Generation of Appliance



اتو بخار ایستاده


مدل: NL-3177GR و NL-3178BL

فارسی ☐

English ☐

لطفاً قبل از استفاده، دستورالعمل‌ها را به دقت مطالعه کنید!  
تصاویر فقط برای ارجاع هستند.

مش فیلتر (لطفاً به طور منظم آن را تمیز کنید)

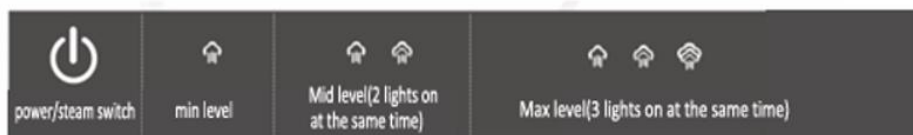

دکمه روشن/بخار

حداقل سطح

سطح میانه (زمانی که ۲ چراغ به طور همزمان روشن هستند)

حداکثر سطح (زمانی که ۳ چراغ به طور همزمان روشن هستند)

|                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                                                |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
|  |  |  |  | Long press 3s to shut down motor, short press to switch min speed, middle speed, max speed and pause the motor |
| suction switch                                                                    | min speed                                                                         | mid speed (2 lights on at the same time)                                          | max speed(3 lights on at the same time)                                           |                                                                                                                |

## دکمه مکش

### حداقل سرعت

سرعت میانه (زمانی که ۲ چراغ به طور همزمان روشن هستند)

حداکثر سرعت (زمانی که ۳ چراغ به طور همزمان روشن هستند)

- برای خاموش کردن موتور، دکمه را به مدت ۳ ثانیه نگه دارید. برای تغییر سرعت از حداقل، میانه و حداکثر یا توقف موتور، دکمه را به طور کوتاه فشار دهید.

|                                                                                   |                                                                                   |                                                                                   |                                                                                                                                                             |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  |  | self-cleaning: Press and hold the power button for 10 seconds to start up when the device is turned off. Do not stop halfway. Be aware of the risk of burns |
| Dry ironing                                                                       | water shortage alarm                                                              | self-cleaning                                                                     |                                                                                                                                                             |

Automatic power off: The device will automatically power off after 10 minutes of not using the steam, with the dry ironing indicator and steam indicators flashing alternately

## اتو کردن خشک

### هشدار کمبود آب

### خودتمیزکن

-- خودتمیزکن: برای شروع خودتمیزکن، دکمه روشن را به مدت ۱۰ ثانیه نگه دارید وقتی دستگاه خاموش است. از توقف در میانه راه خودداری کنید. به خطر سوختگی توجه داشته باشید.

خاموش شدن خودکار: دستگاه بعد از ۱۰ دقیقه عدم استفاده از بخار به طور خودکار خاموش می شود و چراغ های اتو خشک و بخار به طور متناوب چشمک می زنند.

## احتیاط

قبل از استفاده از این محصول، لطفاً دستورالعمل‌های استفاده را با دقت مطالعه کرده و برای مرجع‌های آینده نگه دارید.

## خطر

۱. این محصول را در آب یا مایعات دیگر غوطه‌ور نکنید و زیر شیر آب شستشو ندهید.
۲. مراقب بخار داغ تولید شده توسط اتو بخار ایستاده باشید. بخار ممکن است باعث سوختگی شود.

## هشدار

- قبل از اتصال محصول به برق، بررسی کنید که ولتاژ درج شده روی محصول با ولتاژ شبکه برق محلی مطابقت داشته باشد.
- اگر پلاگین، کابل برق یا خود محصول آسیب دیده باشد، یا محصول افتاده یا نشتی داشته باشد، از استفاده آن خودداری کنید.
- این محصول فقط باید به مرکز تعمیرات مجاز ارسال شود. از تعمیر محصول خودداری کنید، در غیر این صورت گارانتی باطل خواهد شد.
- اگر کابل برق آسیب دیده است، باید توسط شخص حرفه‌ای در بخش تعمیرات تولیدکننده یا بخش مشابه تعویض شود تا از بروز خطر جلوگیری شود.
- کاربر نباید هنگام برقرار بودن محصول از آن دور شود.
- این محصول برای کودکان بالای ۸ سال یا افرادی که معلولیت یا اختلالات ذهنی دارند یا آن‌هایی که دچار اختلالات شناختی یا کمبود تجربه و دانش مرتبط هستند مناسب نیست، مگر اینکه تحت نظارت یا هدایت شخصی دیگر برای استفاده ایمن و آگاهی از خطرات مربوطه قرار گیرند.
- هیچ‌گاه اجازه ندهید کودکان با این محصول بازی کنند.

- هنگامی که محصول برقدار یا در حال خنک شدن است، لطفاً آن را و کابل برق را از دسترس کودکان زیر ۸ سال دور نگه دارید. کودکان بالای ۸ سال فقط می‌توانند محصول را تمیز کنند و این کار باید تحت نظارت انجام شود.
- هنگام استفاده، از لمس سر اتو بخار ایستاده و سطوح داغ خودداری کنید. این محصول در طول استفاده بخار داغ تولید می‌کند، بنابراین از هدف قرار دادن بخار به سمت افراد و حیوانات خودداری کرده و لباس‌های پوشیده را اتو نکنید تا از خطر سوختگی جلوگیری کنید.
- قبل از نصب محصول تمیز شده یا جداسازی لوازم جانبی برس یا پر کردن مخزن با آب، حتماً کابل برق را از پریز جدا کنید.

### توجه

- این محصول فقط باید با پریز برق دارای اتصال به زمین استفاده شود.
- اگر محصول داغ یا به برق متصل است، هنگام قرار دادن محصول، از تماس نازل بخار با هر سطحی خودداری کنید.
- به‌طور منظم بررسی کنید که آیا کابل برق آسیب دیده است.
- در حین کار با اتو بخار ایستاده، هرگز اجازه ندهید کابل برق با بخار داغ تماس پیدا کند.
- لطفاً زمانی که مخزن آب محصول خالی است، از آن استفاده نکنید.
- زمانی که قصد ترک محصول برای مدت کوتاه را دارید، لطفاً برق دستگاه را خاموش کرده و پلاگ برق را از پریز خارج کنید.
- پس از اتو کردن، حتماً برق دستگاه را خاموش کرده و پلاگ برق را از پریز بیرون آورده و اجازه دهید دستگاه به مدت ۶۰ دقیقه خنک شود قبل از اینکه آن را تمیز کرده، لوازم جانبی را نصب یا جداسازی کرده، مخزن آب را خالی کرده یا ذخیره کنید.

- این محصول فقط برای استفاده خانگی است. لطفاً از آن در حمام یا فضای باز استفاده نکنید.
- لطفاً از کشیدن این محصول روی زمین خودداری کنید.
- بخار ممکن است برخی از دیوارها یا درها را آسیب رسانده یا باعث رنگ‌پریدگی آن‌ها شود.
- طبق طراحی، محصول شما برای آب لوله‌کشی مناسب است. اگر کیفیت آب در منطقه شما بسیار سخت است، رسوب‌گذاری سریع‌تر خواهد بود. بنابراین پیشنهاد می‌شود که از آب مقطر برای پر کردن مخزن آب استفاده کنید تا عمر مفید محصول افزایش یابد.
- هیچ‌گاه عطر، سرکه، جرم‌زدا، ماده اتو یا سایر مواد شیمیایی را در مخزن آب نریزید، زیرا این مواد شیمیایی برای این محصول مناسب نیستند.

### نصب و استفاده

۱. مخزن آب را بیرون بیاورید، مقدار مناسب آب را در آن بریزید، مخزن آب را به دستگاه متصل کرده و آن را بچرخانید تا در جای خود قرار گیرد.
۲. دستگاه را به پریز برق متصل کنید، دستگاه را روشن کرده و دکمه سوئیچ را کوتاه فشار دهید تا دستگاه شروع به پیش‌گرم شدن کند و چراغ قرمز چشمک بزند. اگر چراغ قرمز روشن ماند، دستگاه آماده استفاده به عنوان اتو خشک است.
۳. دوباره دکمه روشن/بخار را فشار دهید و چراغ آبی روشن خواهد شد (۳ حالت بخار قابل انتخاب است). وقتی بخار خارج شد، دستگاه آماده برای اتو بخار است.
۴. دکمه مکش را فشار دهید تا موتور فعال شود (۳ حالت قدرت مکش قابل انتخاب است) و وارد حالت اتو بخار با مکش شوید.
۵. برای خاموش کردن دستگاه، دکمه روشن/بخار را به مدت ۳ ثانیه نگه دارید.

۶. در حالت اتو بخار، اگر مخزن آب کم باشد یا مسیر آب مسدود شود، چراغ هشدار کمبود آب چشمک خواهد زد و شما را برای اضافه کردن آب راهنمایی خواهد کرد.
۷. دستگاه به طور خودکار پس از ۱۰ دقیقه عدم استفاده از بخار خاموش می‌شود.

## اتو کردن

اتو بخار ایستاده بسیار آسان برای استفاده است و مناسب برای اتو کردن لباس‌های چروک یا تا خورده، پرده‌ها و تجدید طراوت پارچه‌های تزئینی است. این محصول برای اکثر پارچه‌ها قابل استفاده است.

**توجه:** اتو بخار ایستاده برای لباس‌های آویزان عمودی طراحی شده است و نباید از آن زمانی که لباس‌ها به حالت افقی هستند استفاده کرد.

۱. بررسی کنید که آیا پارچه در پشت آن قابل عبور است تا بخار روی لباس جمع نشود و آن را مرطوب نکند.

۲. جیب‌های لباس را بررسی کنید تا اطمینان حاصل شود که هیچ شی‌ای در جیب‌ها نیست.

۳. بررسی کنید که هیچ شی‌ای که بخار ممکن است به آن آسیب برساند در پشت لباس قرار نداشته باشد.

۴. پیشنهاد می‌شود که از اتو بخار ایستاده در اطراف اتصالات فلزی لباس‌ها استفاده نکنید. بخار داغ ممکن است باعث رنگ‌پریدگی لوازم فلزی شود.

۵. هنگام فشار دادن دکمه بخار، شما ارتعاشی احساس خواهید کرد و صدای زنگ‌زنگ ظریفی خواهید شنید. این امر طبیعی است.

۶. هنگام اتو کردن، پنل‌های بخار روی چین‌های پارچه قرار می‌گیرند و بالا و پایین می‌روند تا چین‌ها اتو شوند.

۷. اگر صدای اتو بخار ایستاده بلندتر شود و بخار از آن خارج نشود، به این معنی است که مخزن آب خالی است. لطفاً سطح آب مخزن را بررسی کرده و آب را به مخزن اضافه کنید.

۸. اگر دکمه بخار را رها کنید، بخار متوقف خواهد شد.

### پس از هر استفاده

۱. هنگام توقف استفاده از دستگاه، دکمه روشن را فشار دهید یا کابل برق را از پریز بیرون بکشید.

۲. مخزن آب را جدا کرده و آب باقی مانده در مخزن را خالی کنید.

۳. آن را به صورت عمودی روی یک سطح صاف قرار دهید و منتظر بمانید تا دستگاه خنک شود.

### تمیزکاری و نگهداری

۱. ابتدا برس بخار را از سر اتو بخار ایستاده جدا کرده و سپس با پارچه مرطوب آن را تمیز کنید.

۲. لطفاً از استفاده از مواد تمیزکننده خشن یا مواد خورنده جادویی یا حلال‌ها خودداری کنید.

۳. اتو بخار ایستاده را در آب یا مایعات دیگر غوطه‌ور نکنید.

۴. از افتادن، پرتاب یا تلاش برای خم کردن آن خودداری کنید. همچنین از تلاش برای جداسازی یا تجزیه دستگاه برقی خودداری کنید.

۵. پس از هر استفاده، مخزن آب را خالی کنید.

۶. از نگهداری دستگاه برقی در مکان‌های مرطوب خودداری کنید.


۷. از نزدیک کردن دستگاه برقی به منابع گرما یا قرار دادن آن در معرض نور مستقیم خورشید خودداری کنید.

۸. همیشه اطمینان حاصل کنید که خروجی‌های بخار تمیز و بدون رسوب هستند و مسدود نشده‌اند.

۹. پیشنهاد می‌شود که اتو بخار ایستاده به صورت عمودی در مکان‌های مسطح مانند کمد ذخیره شود.

۱۰. از دور انداختن دستگاه‌های برقی به عنوان زباله شهری غیر تفکیک شده خودداری کنید، باید آن‌ها را به یک مرکز بازیافت رسمی تحویل دهید.

### Circuit diagram

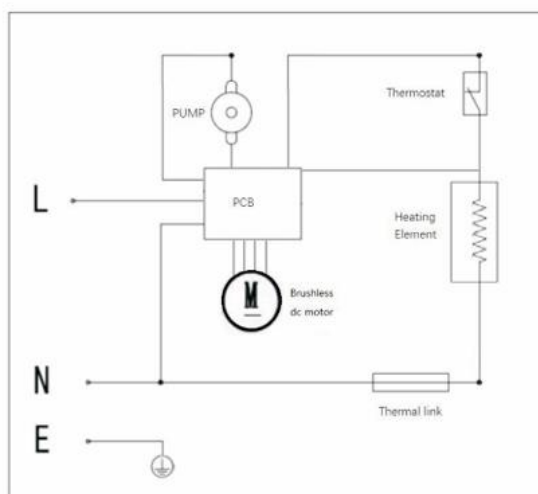

### مشخصات

|                                     |              |
|-------------------------------------|--------------|
| نام محصول: اتو بخار ایستاده و کیومی | مدل: SG5655X |
| ولتاژ: ۲۲۰-۲۴۰ ولت                  | توان: W۲۱۰۰  |
| فرکانس: ۵۰-۶۰ هرتز                  |              |

## توجه:

از دور انداختن دستگاه‌های برقی به‌عنوان زباله شهری غیرتفکیک‌شده خودداری کنید. این دستگاه‌ها باید به مرکز بازیافت رسمی تحویل داده شوند. این کار برای حفاظت از محیط زیست مفید است.



## راهنمای رفع اشکال

| مشکل                              | دلایل                                                                                   | روش درمان                                                              |
|-----------------------------------|-----------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| دستگاه پس از روشن شدن کار نمی‌کند | سر سوکت برق قطع شده است                                                                 | سوکت برق را وصل کنید                                                   |
|                                   | خرابی مدار خانگی یا سوخته شدن فیوز                                                      | لطفاً دستگاه را توسط یک تکنسین حرفه‌ای بررسی و تعمیر کنید              |
|                                   | خرابی مدار محصول                                                                        | لطفاً دستگاه را توسط یک تکنسین حرفه‌ای بررسی و تعمیر کنید              |
| هیچ بخاری تولید نمی‌شود           | پیش گرم شدن کامل نشده است                                                               | پس از اتمام پیش گرم شدن و ثابت شدن چراغ قرمز، دستگاه آماده استفاده است |
|                                   | دکمه بخار به طور کامل فشار داده نشده است                                                | دکمه بخار را به طور کامل فشار دهید، چراغ آبی ثابت روشن خواهد شد        |
|                                   | سطح آب در مخزن خیلی پایین است یا پمپ آب به دلیل مسدود بودن مسیر صدای بلندی تولید می‌کند | دستگاه را به طور کامل تمیز کرده و سپس مخزن آب را پر کنید               |

|                                                                      |                                                           |                           |
|----------------------------------------------------------------------|-----------------------------------------------------------|---------------------------|
| مخزن آب به درستی قرار نگرفته و باعث ایجاد صدای بلند از پمپ آب می شود | لطفاً مخزن آب را به درستی قرار دهید                       |                           |
| دستگاه برعکس قرار گرفته و مانع کشیدن آب از مخزن شده است              | دستگاه را به صورت افقی قرار دهید                          |                           |
| مسیر داخلی بخار خم یا قطع شده است                                    | لطفاً دستگاه را توسط یک تکنسین حرفه ای بررسی و تعمیر کنید |                           |
| المنت آسیب دیده است                                                  | لطفاً دستگاه را توسط یک تکنسین حرفه ای بررسی و تعمیر کنید |                           |
| تراکم بخار یک پدیده طبیعی است                                        | این مشکل پس از چند ثانیه به طور خودکار رفع خواهد شد       | آب از سر اتو چکه می کند   |
| المنت آسیب دیده است                                                  | لطفاً دستگاه را توسط یک تکنسین حرفه ای بررسی و تعمیر کنید |                           |
| المنت داخلی رسوب زیادی دارد                                          | دستگاه را خاموش کرده و رسوبات داخل المنت را تمیز کنید     |                           |
| حفاظت در برابر ولتاژ بالا یا گرمای بیش از حد                         | گرمایش به طور خودکار پس از بازگشت ولتاژ به                | چراغ بخار پس از روشن کردن |

|                           |                                                          |
|---------------------------|----------------------------------------------------------|
| دستگاه چشمک می زند        | حالت طبیعی از سر گرفته می شود                            |
| چراغ سرعت مکش چشمک می زند | دستگاه بیش از حد داغ شده است یا ولتاژ غیرعادی است        |
| موتور کار نمی کند         | دستگاه بیش از حد داغ شده است یا ولتاژ غیرعادی است        |
|                           | پس از خنک شدن دستگاه، می توان دوباره از آن استفاده کرد   |
|                           | لطفأ دستگاه را توسط یک تکنسین حرفه ای بررسی و تعمیر کنید |
| قدرت مکش ضعیف شده است     | مش فیلتر مسدود شده است                                   |
|                           | لطفأ مش فیلتر را تمیز کنید                               |

### کارت گارانتی

این محصول به طور دقیق بازرسی شده و از کارخانه ارسال شده است. مدت گارانتی از تاریخ فروش به مدت ۱ سال بوده و تنها تحت شرایط استفاده صحیح و نگهداری مطابق با دستورالعمل استفاده، معتبر است. در طول مدت گارانتی، اگر خرابی ناشی از مشکلات کیفیتی شناسایی شود، گارانتی توسط شرکت یا نمایندگی ما تضمین می شود. اما برای آسیب های ناشی از استفاده نادرست، مونتاژ خودسرانه و نیروهای غیرقابل اجتناب، گارانتی اعمال نمی شود. برای تعمیر اینگونه موارد، هزینه مناسب تعمیر دریافت خواهد شد.

| نام کاربر             | تاریخ خرید             |
|-----------------------|------------------------|
| تلفن کاربر            | مدل محصول              |
| آدرس کاربر            | تاریخ ارسال برای تعمیر |
| گزارش خرابی و تعمیرات | تاریخ تعمیر            |
| امضا تعمیرکار         |                        |

Please read the use instruction for detaild before use!  
Products in kind prevail, pictures for reference only.



|                                                                                                                                                                                 |                                                                                     |                                                                                     |                                                                                                                                                            |                                                                                                               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
|                                                                                               |  |  |                                                                         |                                                                                                               |
| power/steam switch                                                                                                                                                              | min level                                                                           | Mid level(2 lights on at the same time)                                             | Max level(3 lights on at the same time)                                                                                                                    |                                                                                                               |
|                                                                                              |  |  |                                                                         | Long press 3s to shut down motor, short press to switch min speed, middle speed,max speed and pause the motor |
| suction switch                                                                                                                                                                  | min speed                                                                           | mid speed (2 lights on at the same time)                                            | max speed(3 lights on at the same time)                                                                                                                    |                                                                                                               |
|                                                                                              |  |  | self-cleaning:Press and hold the power button for 10 seconds to start up when the device is turned off. Do not stop halfway. Be aware of the risk of burns |                                                                                                               |
| Dry ironing                                                                                                                                                                     | water shortage alarm                                                                | self-cleaning                                                                       |                                                                                                                                                            |                                                                                                               |
| Automatic power off: The device will automatically power off after 10 minutes of not using the steam , with the dry ironing indicator and steam indicators flashing alternately |                                                                                     |                                                                                     |                                                                                                                                                            |                                                                                                               |

ironing panel  
 suction hole  
 filter mesh (Please clean it regularly)  
 Main body  
 Built-in sealing gasket  
 To connect standard water bottles  
 Water tank  
 Water inlet( bottom)

power/steam switch  
 min level  
 Mid level(2 lights on at the same time)  
 Max level(3 lights on at the same time)

suction switch  
 min speed  
 mid speed (2 lights on at the same time)  
 max speed(3 lights on at the same time)

-Long press 3s to shut down motor, short press to switch min speed, mid speed,max speed and pause the motor

Dry ironing  
 water shortage alarm  
 self-cleaning

--self-cleaning:Press and hold the power button for 10 seconds to start up when the device is turned off. Do not stop halfway. Be aware of the risk of burns

Automatic power off: The device will automatically power off after 10 minutes of not using the steam , with the dry ironing indicator and steam indicators flashing alternately

## Cautions

Before using this product, please read the user manual carefully and keep it for future reference.

## **DANGER**

1. Do not immerse this product in water or other liquids and do not rinse under the tap.
2. Be careful of the hot steam generated by the garment steamer. The steam may cause burns.

## **Warning**

\*Check if the voltage indicated on the product corresponds to the local mains voltage before you connect the product to the power.

\* Do not use the product if the plug, power cord or product itself has been damaged noticeably, or if the product has fallen or leaked.

\*The product can only be sent to the authorized maintenance center for overhaul. Do not repair the product by yourself, otherwise the warranty will be invalid.

\* If the power cord is damaged, it must be replaced by professional person in the manufacturer's maintenance department or similar department to avoid danger.

\* The user shall not leave when the product is electrified.

\* This product is not suitable for the children who are 8 years or older, and the people who are disabled, or mentally handicapped or those who have cognitive disorder or lack relevant experience and knowledge unless they use this product under guidance or supervision by someone to ensure them to use safely and to make them aware of the relevant hazards.

\*Never allow children to play with this product.

\*When the product is electrified or cooling, Please keep the product and its power cord out of reach of children under the age of 8.

Children who are 8 years or older can clean the product only when they are under supervision.

\* When using, do not touch the head of the garment steamer and hot surfaces. This product will produce high-temperature steam in the course

of use, please do not aim it at people and animals, and do not iron the clothes worn on the body to avoid the risk of scalding.

\* Be sure to unplug the power plug before installing cleaned product or disassembling the brush accessories or filling the tank with water.

### **Attention**

\* This product can only be used with grounded electrical outlet.

\* If the product is hot/connected to the power supply, do not let the steam nozzle contact any surface when placing the product.

\* Check whether the power cord is damaged regularly.

\* During the operation of the garment steamer, never let the power cord contact with high temperature steam.

\*Please do not use this product when the water tank is running out of water.

\* When you leave the product for only a short amount of time, please turn off the power supply of the product and unplug the power plug.

\* After ironing, be sure to turn off the power supply of the product and unplug the power plug, and let it cool for 60 minutes before cleaning the product, installing or disassembling accessories, emptying the water tank or storing it.

\* This product is for house use only. Please do not use this product in the bathroom or outdoor.\*Please do not drag this product on the floor.

\* The steam may damage some walls or doors or cause them to fade.

\*According to the design, your product is suitable for running water. If the water quality in the area you live in is very hard, the scaling may be very fast. Therefore, it is suggested that distilled water should be filled into the water tank to extend the service life of the product.

\* Never pour perfume, vinegar, scale remover, ironing agent or other chemicals into the water tank, because these chemicals are not suitable for this product.

### **Installation and usage**

1.Take out the water tank, add an appropriate amount of water to it, install the water tank into the machine and rotate it in place.

2. Connect the device to the power socket, connect the power, short press the switch button and the machine will start preheating with a flashing red light. If the red light remains on, the machine can be used as dry ironing.
3. Press the power/steam switch again and the blue light will light up (3 steam modes can be selected). Once the steam out, it is ready for steam ironing.
4. Press the suction switch to activate the motor, (3 suction power modes can be selected), and enter the steam ironing with suction mode.
5. Long press the power/steam switch for 3 seconds to turn off
6. In steam ironing mode, if the water tank is short of water or the water passage is blocked, the water shortage alarm indicator will flash and remind you to add water.
7. The device will automatically power off after 10 minutes of not using the steam

## Ironing

Garment steamer is very easy to use, it is suitable for ironing wrinkled / creased clothing, curtains and refreshing decorative fabrics, it can be used on most of fabrics .

Note: Garment steamer is designed for vertical hanging clothes to avoid using garment steamer when the clothes are in a horizontal position.

1. Check whether it is permeable on the back of the cloth so that the steam is not to be gathered on the cloth to wet it.
2. Check the pockets of the clothing to make sure there are no items in the pockets.
3. Check whether there is any object that is easily damaged by steam on the back of the clothing.
4. It is suggested that the garment steamer should not be used around the metal fittings of the clothing. The high-temperature steam will cause the metal accessories to fade.
5. When you press the steam button, you will feel the vibration and hear the subtle buzzing sound. This is normal.

6. While ironing, the steam panels are pasted on the creases of the fabric to move up and down, so that the creases can be ironed.
7. If the sound of the garment steamer becomes louder and there is no steam coming out, it means that there is a shortage of water in the water tank. Please check the water level of the water tank and refill water to the water tank.
8. If the steam button is released, the steam will be stopped.


### **After each use**

1. When you stop using it, press the power switch or pull the power cord out of the outlet.
2. Remove the water tank and empty the remaining water from the water tank.
3. Place it on the flat desktop vertically and wait for the product to cool down.

### **Cleaning and maintenance**

1. Remove steam brush on the head of the garment steamer at first and then use wet cloth to clean.
2. Please do not use rough or magic corrosion cleaners or solvents.
3. Do not immerse the garment steamer into water or other liquids.
4. Don't fall, throw or try to bend it. Don't try to disassemble or decompose electrical appliance,
5. Empty the water tank after each use.
6. Avoid storing electrical appliances in damp places.
7. Do not approach the heat source or exposure the electrical apparatus to direct sunlight.
8. Always ensure that the steam outlets are clean and free from scaling and are not clogged.
9. It is suggested that the garment steamer should be stored vertically in flat places such as cabinet.
10. Do not treat discarded electrical appliances as unclassified municipal waste, you should hand over them to an officially designated recycling center.

## Circuit diagram

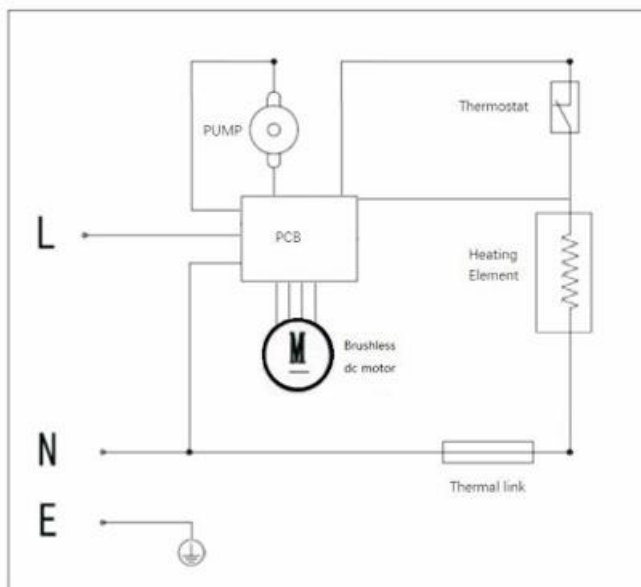

## Specification

|              |                        |
|--------------|------------------------|
| Product name | Vacuum garment steamer |
| Model        | SG5655X                |
| Voltage      | 220-240V               |
| Power        | 2100W                  |
| Frequency    | 50-60Hz                |



Do not treat discarded electrical appliances as unclassified urban waste, they should be handed over to an official designated recycling center. It is beneficial for environmental protection.

## Troubleshooting Guide

| Issues                                          | Reasons                                                                                               | Treatment method                                                                        |
|-------------------------------------------------|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| The product does not work after being turned on | Unplugged power head                                                                                  | Plug in the power head                                                                  |
|                                                 | Household circuit failure or blown fuse                                                               | Please have it inspected and repaired by professionals                                  |
|                                                 | Product circuit failure                                                                               | Please have it inspected and repaired by professionals                                  |
| No steam generated                              | Preheating not complete                                                                               | Once the preheating is complete and the red light is constantly on, it is ready for use |
|                                                 | The steam switch hasn't been fully pressed                                                            | Press the steam switch fully, and the blue light will be constantly on                  |
|                                                 | The water level in the tank is too low, or the water pump is working loudly due to a blocked waterway | Clean it thoroughly, and then fill the water tank with water                            |
|                                                 | The water tank is not properly placed, causing the water pump to operate with a loud noise            | Please place the water tank correctly                                                   |

|                                             |                                                                          |                                                                                       |
|---------------------------------------------|--------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|                                             | The machine inverted, which prevents it from drawing water from the tank | Please place the machine horizontally.                                                |
|                                             | The internal steam passage is bent or disconnected                       | Please have it inspected and repaired by professionals                                |
|                                             | Heater damaged                                                           | Please have it inspected and repaired by professionals                                |
| Water dripping from Ironing head            | Steam condensation is a normal phenomenon                                | It will disappear automatically after a few seconds                                   |
|                                             | Heater damaged                                                           | Please have it inspected and repaired by professionals                                |
|                                             | The heater inside has a lot of scale                                     | Stop the machine and clean the scale inside the heater                                |
| The steam indicator flashes after switch on | Overvoltage or overheat protection                                       | The heating will automatically resume once the power supply voltage returns to normal |
| Suction speed indicator flashes             | The machine is overheated or the voltage is abnormal                     | It can be used again after the machine cools down                                     |

|                        |                                                      |                                                        |
|------------------------|------------------------------------------------------|--------------------------------------------------------|
| The motor doesn't work | The machine is overheated or the voltage is abnormal | It can be used again after the machine cools down      |
|                        | The motor or PCBA damaged                            | Please have it inspected and repaired by professionals |
| Suction weakened       | The filter mesh blocked                              | Please clean the filter mesh                           |

### Warranty card

This product has been strictly inspected and delivered from the factory. The warranty period is 1 years from the date of sale under the conditions of using the correct usage method and storage conditions of this instruction. During the warranty period, if it is found that the failure caused by quality problems, the warranty is guaranteed by our company or dealer. However, for the damage caused by improper use, self-assembly and irresistible force and it is not in the scope of the warranty. The maintenance fee shall be charged appropriately for the maintenance.

|                      |                              |                 |                              |
|----------------------|------------------------------|-----------------|------------------------------|
| User name            |                              | purchasing date |                              |
| User phone           |                              | product model   |                              |
| User address         |                              |                 |                              |
| sent date for repair | fault and maintenance record | repair date     | Signature of maintenance man |
|                      |                              |                 |                              |
|                      |                              |                 |                              |
|                      |                              |                 |                              |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |



QUALITY EXPERIENCE



**Garment Steamer**

**Model: NL-3177GR and NL-3178BL**

فارسی ☐  
English ☐