



New Generation of Appliance



سرخ کن بدون روغن

مدل: NL-2977BS

فارسی ☐

English ☐

کاربر محترم:

با تشکر از خرید دستگاه سرخ کن بدون روغن، جهت استفاده و نگهداری صحیح دستگاه، لطفاً این دفترچه راهنما را قبل از استفاده به دقت بخوانید و نزد خود نگه دارید.

کلیه محتوای این دفترچه تنها برای استفاده و نگهداری بوده و کلیه عکس ها صرفاً برای ارجاع می باشد. اگر همچنان در استفاده از دستگاه مشکل دارید، با مراکز مجاز تماس بگیرید.

اقدامات احتیاطی

- لطفاً این دفترچه راهنما را قبل از استفاده به دقت بخوانید و نزد خود نگه دارید.
- این محصول فقط برای استفاده خانگی طراحی شده است و برای مکان دیگر مناسب نیست.
- باید از پریز نزدیک به زمین با جریان بیشتر از ۱۰ آمپر استفاده شود و دوشاخه محکم وارد پریز شود. از سه راهی و دستگاه های دیگر همزمان استفاده نکنید.
- وقتی دو شاخه را به برق زدید، باید کامل وارد پریز شود، وگرنه اجزای آن ممکن است بیش از حد داغ شود و به دلیل تماس ضعیف بسوزد.
- دوشاخه را با دست خیس به برق نزنید یا نکنید زیرا خطر برق گرفتگی دارد. دوشاخه را زمانی که دستگاه کار نمی کند از برق بکشید.
- دستگاه را در دسترس کودکان قرار ندهید یا اجازه ندهید به تنهایی با دستگاه کار کنند زیرا خطر برق گرفتگی دارد.


- هرگز اشیاء دیگر مثل قطعات فلزی، سیم آهنی، سوزن و غیره را درون دستگاه یا در شیر آن قرار دهید زیرا باعث عملکرد غیرعادی یا ایجاد خطر برق گرفتگی می‌شود.
- هنگام استفاده از دستگاه، آن را روی یک میز صاف قرار دهید. دستگاه را در محیط با حرارت و رطوبت بالا قرار دهید و آن را از نواذ اشتعال‌زا دور کنید.
- این دستگاه برای اشخاص زیر مناسب نیست: افراد مبتلا به اختلال عملکرد حسی یا روانی، فقدان تجربه یا دانش مرتبط (از جمله کودکان) و افراد دیگر، مگر اینکه تحت نظر متخصص از این محصول استفاده کنند. کودکان باید تحت نظر باشند تا اطمینان حاصل شود که با این محصول بازی نمی‌کنند.
- اطمینان حاصل کنید که سیم برق با لبه‌های تیز، سوراخ‌ها، سایر اجسام نوک تیز بیرون زده یا اشیاء با سطوح داغ تماس نداشته باشد که ممکن است باعث نشت برق و در نتیجه برق گرفتگی یا آتش سوزی شود.
- ممکن است در هنگام استفاده برای اولین بار چند دقیقه بوی عجیب استشمام شود که یک پدیده طبیعی است.
- هنگام تمیز کردن این محصول، آن را در آب غوطه‌ور نکنید و زیر شیر آب نشوید.
- اگر مشخص شد سیم برق یا دوشاخه آسیب دیده یا شکسته است، باید با یک سیم قابل انعطاف خاص یا یک قطعه خاص که از سازنده آن یا بخش تعمیر و نگهداری معین خریداری شده است، جایگزین شود.
- در صورت خرابی محصول، لطفاً ابتدا دستگاه را خاموش کرده، دوشاخه را از پریز بیرون بیاورید. از دستگاه استفاده نکنید و با پرسنل خدمات پس از

فروش شرکت تماس بگیرید. قطعات غیر اصلی را تعویض یا خودتان آن را جدا و تعمیر نکنید.

مشخصات محصول

NL-2977BS	مدل
۲۳۰ ولت - ۵۰ الی ۶۰ هرتز	برق مورد نیاز
۱۳۰۰ وات	قدرت
۳ QT	ظرفیت

عملکرد محصول

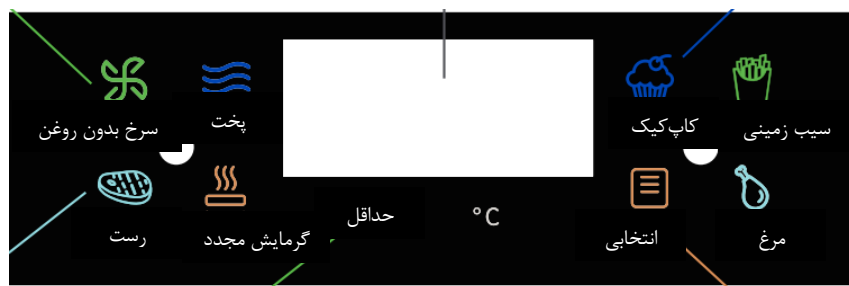

شرح عملکرد کلیدها

	کلید Function کلید «Function» را فشار دهید تا گزینه های Bake, Air Fry, Chicken, Custom, Reheat, Roast, Fries, Cupcake انتخاب شود. شاخص مربوطه روشن می شود و سپس کلید start را فشار دهید. اکنون، سرخ کن بدون روغن به طور خودکار شروع به پخت می کند.
	کلید Open پس از اینکه دستگاه را روشن کردید، این دکمه را بفرشارید تا بتوانید عملکرد مورد نظرتان را انتخاب کنید. با تماس کوتاه این دکمه هنگامی که دستگاه در حال کار است، آن را به حالت آماده باش در بیاورید.
	کلید Time/Temperature Switch از این کلید می توانید برای تنظیم دما و زمان چه دستگاه در حال کار باشد چه نباشد، استفاده کنید.
	کلید Press the Left and Right وقتی عملکرد خود را تنظیم کردید، از این کلید برای تنظیم زمان و دما استفاده کنید.
	کلید Start/Pause پس از تنظیم پارامترهای عملکردی مورد نظر، این دکمه را بزنید تا دستگاه شروع به کار کند. فشار دادن این کلید در حین کار، دستگاه را متوقف می کند.

قواعد نمایشگر

حالت آماده باش:

دستگاه را روشن کنید. صدای بوق شنیده می‌شود. نمایشگر و چراغ‌ها برای ۱ ثانیه روشن می‌شوند و به حالت پاور سیوینگ در می‌آید.

کلید switch را فشار دهید تا همه چراغ‌ها و نمایشگر روشن شوند. اگر تا ۲ دقیقه از دستگاه استفاده نشود، دستگاه مجدد به حالت پاور سیوینگ در می‌آید.

حالت انتخاب عملکرد:

- دکمه عملکرد را در حالت آماده به کار فشار دهید، تمام چراغ‌های دکمه عملکرد مربوطه روشن می‌شود، دکمه start/pause را برای شروع کار فشار دهید.
- اگر تا ۲ دقیقه از دستگاه استفاده نشود، دستگاه مجدد به حالت پاور سیوینگ در می‌آید.
- با فشار دکمه سوئیچ به مدت ۱ ثانیه، حالت تنظیم عملکرد صفحه نمایش دیجیتال دما/زمان صفحه نمایش نشان داده می‌شود.
- ابتدا زمان را با دکمه دما/زمان تنظیم کنید و پس از آن دما را تنظیم کنید.
- اگر تا ۲ دقیقه از دستگاه استفاده نشود، دستگاه مجدد به حالت آماده باش در می‌آید.

• حالت کاری هر عملکرد:

- همه برنامه‌هایی که در حال حاضر در حال تنظیم یا کار هستند روشن هستند و عملکرد انتخاب شده در صفحه نمایش روشن است. زمان و دما به صورت دوره‌ای، هر ۳ ثانیه یک بار تغییر می‌کنند.
- در حالت انتخاب، چراغ نشانگر منوی عملکرد باید بلافاصله پس از توقف انتخاب پارامتر روشن شود و سپس با فرکانس اصلی چشمک بزند.

- اگر تا ۱۰ دقیقه از دستگاه استفاده نشود، دستگاه مجدد به حالت پاور سیوینگ در می آید.
- پس از تکمیل عملکرد، End در نمایشگر دیده می شود و پس از ۳۰ ثانیه به حالت پاور سیوینگ یا آماده به کار در می آید.
- دستگاه می تواند پس از تکمیل عملکرد به کار خود ادامه دهد.
- دمای عملکرد را بیشتر از ۸۰ درجه سانتی گراد تنظیم کنید، گرمایش را ۴۵ ثانیه قبل از پایان عملکرد متوقف کنید. فن در پایان کارکرد متوقف می شود.
- لوله برقی و فن پس از تکمیل عملکرد کار نمی کنند.
- با فشار دکمه pause، صفحه نمایش دیجیتالی چشمک زن می شود و شمارش زمان متوقف می گردد.
- نمایش حداکثر زمان ۶۰ دقیقه در ۶۰:۰۰ است.

نمایشگر ال ای دی

عملکرد	جزئیات عملکرد	تنظیم زمان	نمونه
	دکمه عملکرد را فشار دهید تا عملکرد مورد نظر را انتخاب کنید، زمان پخت به طور پیش فرض ۱۸ دقیقه و دما به طور پیش فرض ۲۰۰ درجه سانتی گراد است. دکمه تنظیم زمان و دکمه تنظیم دما را برای تنظیم زمان یا دما فشار دهید. پس از اتمام تنظیمات، دکمه start/pause را فشار دهید تا شمارش معکوس و زمان پخت شروع شود. پس از پایان، وارد حالت پاور سیوینگ می شوید (پس از ۳۰ ثانیه در حالت آماده به کار نمایش داده می شود)	زمان قابل تنظیم: ۱ دقیقه - ۱ ساعت، گام ۱ دقیقه ای، دمای قابل تنظیم ۷۵- ۲۰۰ درجه، گام ۵ درجه ای	
	دکمه عملکرد را فشار دهید تا عملکرد پخت مورد نظرتان را انتخاب کنید. زمان پخت به طور پیش فرض ۲۰ دقیقه و درجه حرارت به طور پیش فرض ۱۹۰ درجه سانتی گراد است. دکمه تنظیم زمان و دکمه تنظیم دما را برای تنظیم زمان یا دما فشار دهید. پس از اتمام تنظیمات، دکمه start/pause را فشار دهید تا شمارش معکوس و زمان پخت شروع شود. پس از End، وارد حالت پاورسیوینگ در مصرف انرژی شوید	زمان قابل تنظیم: ۱ دقیقه - ۱ ساعت، گام ۱ دقیقه ای، دمای قابل تنظیم ۷۵- ۲۰۰ درجه، گام ۵ درجه ای	

		End) به مدت ۳۰ ثانیه و سپس به مدت ۳۰ ثانیه در حالت آماده به کار نمایش داده می‌شود)	
	زمان قابل تنظیم: ۱ دقیقه - ۱ ساعت، گام ۱ دقیقه‌ای، دمای قابل تنظیم ۷۵- ۲۰۰ درجه، گام ۵ درجه‌ای	برای انتخاب عملکرد از پیش تنظیم شده کیک کوچک، دکمه عملکرد را فشار دهید. زمان پخت به طور پیش فرض ۱۰ دقیقه و درجه حرارت به طور پیش فرض ۱۷۰ درجه سانتی گراد است. دکمه تنظیم زمان و دکمه تنظیم دما را برای تنظیم زمان یا دما فشار دهید. پس از اتمام تنظیمات، دکمه start/pause را فشار دهید تا شمارش معکوس و زمان پخت شروع شود. پس از اتمام زمان، وارد حالت صرفه جویی در مصرف انرژی یا پاورسیوینگ می‌شود (End) به مدت ۳۰ ثانیه نمایش داده می‌شود و سپس به مدت ۳۰ ثانیه در حالت آماده به کار نمایش داده می‌شود)	
	زمان قابل تنظیم: ۱ دقیقه - ۱ ساعت، گام ۱ دقیقه‌ای، دمای قابل تنظیم ۷۵- ۲۰۰ درجه، گام ۵ درجه‌ای	دکمه عملکرد را فشار دهید تا عملکرد از پیش تنظیم شده سیب زمینی سرخ شده را انتخاب کنید. زمان پخت به طور پیش فرض ۱۸ دقیقه و دما به طور پیش فرض ۱۸۰ درجه سانتی گراد است. دکمه تنظیم زمان و دکمه تنظیم دما را برای تنظیم زمان یا دما فشار دهید. پس از اتمام تنظیمات، دکمه start/pause را فشار دهید تا شمارش معکوس و زمان پخت شروع شود. پس از اتمام زمان، وارد حالت پاورسیوینگ در مصرف انرژی می‌شود (End) به مدت	

		۳۰ ثانیه و سپس به مدت ۳۰ ثانیه در حالت آماده به کار نمایش داده می‌شود)	
	زمان قابل تنظیم: ۱ دقیقه - ۱ ساعت، گام ۱ دقیقه‌ای، دمای قابل تنظیم ۱۷۵-۲۰۰ درجه، گام ۵ درجه‌ای	برای انتخاب عملکرد رست کردن، دکمه عملکرد را فشار دهید. زمان پخت به طور پیش‌فرض ۱۲ دقیقه و درجه حرارت به طور پیش‌فرض ۲۰۰ درجه سانتی‌گراد است. دکمه تنظیم زمان و دکمه تنظیم دما را برای تنظیم زمان یا دما فشار دهید. پس از تکمیل تنظیمات، دکمه start/ pause را فشار دهید تا شمارش معکوس شروع شود و زمان پخت به پایان برسد. پس از آن، وارد حالت صرفه‌جویی در مصرف انرژی یا پاورسیونگ می‌شود (End به مدت ۳۰ ثانیه نمایش داده می‌شود، سپس به مدت ۳۰ ثانیه در حالت آماده به کار نمایش داده می‌شود).	
	زمان قابل تنظیم: ۱ دقیقه - ۱ ساعت، گام ۱ دقیقه‌ای، دمای قابل تنظیم ۷۵-۲۰۰ درجه، گام ۵ درجه‌ای	دکمه عملکرد را برای انتخاب عملکرد گرم کردن مجدد فشار دهید. زمان پخت به طور پیش‌فرض ۶ دقیقه و دما به طور پیش‌فرض ۱۲۰ درجه سانتی‌گراد است. دکمه تنظیم زمان و دکمه تنظیم دما را برای تنظیم زمان یا دما فشار دهید. پس از اتمام تنظیمات، دکمه start/pause را فشار دهید تا شمارش معکوس و زمان پخت شروع شود. پس از آن، وارد حالت صرفه‌جویی در مصرف انرژی یا پاورسیونگ می‌شود (End به مدت ۳۰ ثانیه نمایش داده می‌شود، سپس به مدت ۳۰ ثانیه در حالت آماده به کار نمایش داده می‌شود).	

	زمان قابل تنظیم: ۱ دقیقه - ۱ ساعت، گام ۱ دقیقه‌ای، دمای قابل تنظیم ۷۵- ۲۰۰ درجه، گام ۵ درجه‌ای	دکمه عملکرد را برای انتخاب عملکرد سفارشی فشار دهید، زمان پخت به طور پیش‌فرض بر روی --- دقیقه و دما به طور پیش‌فرض روی --- درجه سانتی‌گراد تنظیم می‌شود. دکمه تنظیم زمان، دکمه تنظیم دما را فشار دهید و زمان یا دما را تنظیم کنید. پس از اتمام تنظیمات، دکمه start/pause را فشار دهید تا شمارش معکوس و زمان پخت شروع شود. پس از آن، وارد حالت صرفه‌جویی در مصرف انرژی یا پاورسیوینگ می‌شود (End به مدت ۳۰ ثانیه نمایش داده می‌شود، سپس به مدت ۳۰ ثانیه در حالت آماده به کار نمایش داده می‌شود). برای تنظیم دما برای اولین بار، کلید دما یا منفی را فشار دهید، درجه حرارت به طور پیش‌فرض روی ۲۰۰ درجه سانتی‌گراد است، که می‌تواند تنظیم شود. برای اولین بار تنظیم، کلید بعلاوه یا منهای زمان را فشار دهید، زمان پیش‌فرض روی ۱ دقیقه است که قابل تنظیم است. دستگاه بدون تنظیم دما و زمان اولیه نمی‌تواند شروع به کار کند.	
	زمان قابل تنظیم: ۱ دقیقه - ۱ ساعت، گام ۱ دقیقه‌ای، دمای قابل	دکمه عملکرد را فشار دهید تا عملکرد مرغ را انتخاب کنید. زمان پخت به طور پیش‌فرض ۲۵ دقیقه و درجه حرارت به طور پیش‌فرض ۱۷۵ درجه سانتی‌گراد است. دکمه تنظیم زمان و دکمه تنظیم دما را برای تنظیم زمان یا دما فشار دهید. پس از اتمام تنظیمات، دکمه start/pause را فشار دهید تا شمارش معکوس	

	تنظیم ۷۵- ۲۰۰ درجه، گام ۵ درجه‌ای	و زمان پخت شروع شود. پس از آن، وارد حالت صرفه‌جویی در مصرف انرژی یا پاورسیوینگ می‌شود (End) به مدت ۳۰ ثانیه نمایش داده می‌شود، سپس به مدت ۳۰ ثانیه در حالت آماده به کار نمایش داده می‌شود).	
--	---	---	--

حافظه حالت خاموش

در هنگام قطعی برق، پس از وارد شدن به حالت کار، عملکرد حافظه عمل می‌کند. هنگامی که برق پس از ۱ تا ۵ پنج دقیق وصل شود، عملکرد به همان شرایط تنظیم شده ادامه به کار می‌دهد. هنگامی که در حالت کار نباشد و برق قطع شود، پس از روشن شدن برق، سیستم وارد حالت آماده به کار می‌شود.

حفاظت از خرابی سنسور

هنگامی که سنسور دما از کار می‌افتد، نمایشگر دیجیتال یک کد خطا را نمایش می‌دهد و ۱۰ بار بوق می‌زند. در این حالت، دستگاه هیچ کاری را انجام نمی‌دهد و به هیچ کلیدی پاسخ نمی‌دهد. هنگامی که در حالت محافظت شده قرار می‌گیرد، حتی اگر سخت‌افزار معیوب باشد، به هیچ کلیدی پاسخ نمی‌دهد.

عیب یابی

در نمایشگر دیده می شود.	حالت خطا	دلیل	راه حل
E2	عمل توقف عملیات کلیدی را نمی پذیرد. فوراً درخواست خودآزمایی داده می شود و درخواست تشخیص وضعیت بعد از ۶۰ ثانیه روشن می شود	سنسور مدار باز	بررسی کنید که آیا مدار ترمیستور غیرعادی است یا خیر؟
E4	عمل توقف عملیات کلیدی را نمی پذیرد. (خود بررسی، درخواست در حالت عادی)	سنسور مدار کوتاه	

Respected User:

Thank you for purchasing the Air Fryer . In order to use and maintain this machine correctly, please read the manual carefully before use and keep it for future reference.

All contents in this manual are only for the user's reference when using and maintaining, the actual object shall prevail, and the pictures are for reference only. If you still have problems in use, please consult our dealer or customer service center, and we will provide you with satisfactory service in a timely manner.

Safety Precautions


- Please read this manual carefully before use and keep it properly.
- This product is only for household use, not suitable for other places.
- A grounded socket with a rated current of more than 10A must be used, and the plug must be inserted tightly. Do not use the universal socket with other electrical appliances at the same time.
- When the plug is inserted into the socket, it must be inserted all the way, otherwise the components will be overheated and burned out due to poor contact.
- Do not plug and unplug with wet hands to avoid electric shock. Please unplug the power plug when the product is not in use.
- Do not put the product in the reach of children, or let children use it alone to avoid electric shock or burns.
- It is forbidden to insert foreign objects such as metal chips, iron wires, needles, etc. into the product or in the gap, otherwise it will cause electric shock or abnormal operation.
- When using this product, it must be placed on a stable desktop. Do not use this product in a place with high temperature and high humidity. and keep away from flammable materials.

- This product is not suitable for the following people: people with sensory or psychological dysfunction, lack of relevant experience or knowledge (including children) and other people. unless they use this product under the supervision of a professional. Children should be supervised to ensure that they do not play with this product.
- Make sure that the power cord does not come into contact with sharp edges, burrs, other protruding sharp objects or objects with hot surfaces, which may cause leakage of electricity, resulting in electric shock or fire.
- A few minutes of peculiar smell may appear when using it for the first time, which is a normal phenomenon.
- When cleaning this product, do not immerse it in water or wash it under the tap.
- If the power cord or plug is found to be damaged or broken, it must be replaced with a special flexible cord or a special component purchased from its manufacturer or designated maintenance department.
- If the product fails, please turn off the power first, pull out the plug from the socket, do not continue to use it, and contact the company's after-sales service personnel, do not replace non-original parts or disassemble and repair by yourself .

Product Specification Sheet

<i>model</i>	<i>NL-2977BS</i>
<i>Rated power</i>	<i>2 3 0V~50-60Hz</i>
<i>rated power</i>	<i>1300W</i>
<i>Rated Capacity</i>	<i>3QT</i>

Operation interface

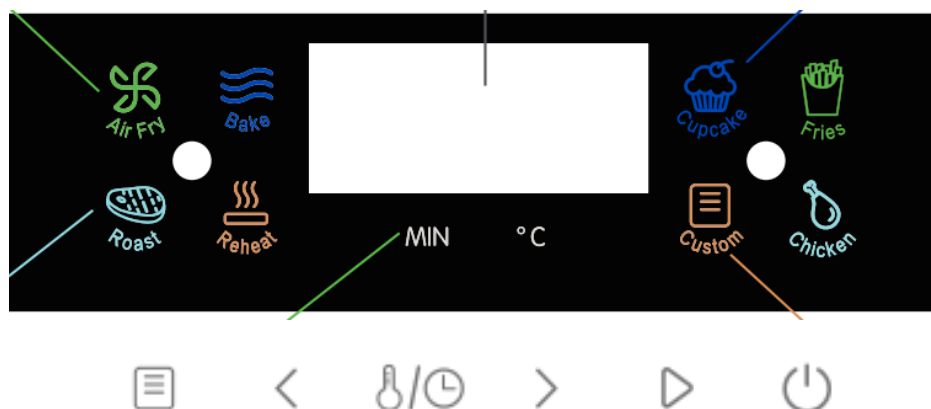

Key Function Description

"Function key": Press the "Function" key to select Air Fry 、 Bake 、 Cupcake、 Fries Roast、 Reheat、 Custom 、 Chickenfunction, the corresponding indicator lights up, and then press the start key again , and the Air Fryer automatically enters the cooking state.	
"Open key" ■After power on, press this key to enter the function function selection mode ■Short press in working mode to return to standby mode	
" Time/Temperature Switch" key	

■ Press this key to set cooking time/temperature mode when not working or working.	
" Press the Left and Right " key ■In Function Settings mode, press this key to adjust cooking time/temperature.	
"Start/Pause " button ■After the function parameters are set, press the start/pause button to start working. ■During work, press the start/pause button to pause the work.	

display rules

Standby state : ■ Turn on the power, the buzzer sounds, the digital tube, function indicator lights are on for 1s, enter the power saving mode. ■ Press the switch button to enter standby mode, all indicators will light up, digital tube will show ----, no operation for 2 minutes to return to power saving mode
Function selection status : ■ Press the function button in standby mode, all corresponding function button lights shine, press the start/pause button to start work; ■ No operation in standby mode for 2 minutes to return to power saving state;

- Function setting mode digital screen temperature/time cycle display, 1 second switch;
- Temperature/time button first set the time press again to set the temperature, cycle selection;
- Return to standby state after 2 minutes of no operation in selected function mode;

The working status of each function :

- All modules that are currently being set or working are on, and the selected function is shining. The time and temperature are switched periodically, once every 3 seconds
- In the state of selection, the function menu indicator light should immediately light up when the parameter selection stops, and then blink with the original frequency;
- Pause for 10 minutes and then switch to power-saving mode
- End will be displayed after the function is complete, and it will switch to power saving mode after 30 seconds or switch to standby mode after fetching buckets within 30 seconds
- The machine can operate the key after taking the bucket
- Set the core temperature of the function to be greater than 80°C, stop heating 45 seconds before the end of the function, and the fan stops working at the end of the function.
- The electric tube and fan cannot work after the bucket is removed in any state.
- Press pause button, digital tube flashing display, time stop counting
- Maximum time display 60 minutes at 60:00

LED display

Function	Function Details	time adjustment	Remark
	Press the function button to select the air fry function, the cooking time is 18 minutes by default, and the temperature is 200 °C by default . Press the time setting button and the temperature setting button to adjust the time or temperature. After the setting is completed, press the start/pause button to start the countdown and the cooking time. After the end, enter the power saving state (End will be displayed for 30 seconds, then standby for 30 seconds)	Adjustable time: 1 minute - 1 hour, step 1 minute, adjustable temperature 75-200 °C, step 5 °C	
	Press the function button to select the bake function, the cooking time is 20 minutes by default, and the temperature is 190 °C by	Adjustable time: 1 minute-1 hour, step 1 minute, adjustable temperature 75-200 °C, step 5 °C	

	default. Press the time setting button and the temperature setting button to adjust the time or temperature. After the setting is completed, press the start/pause button to start the countdown and the cooking time. After the end, enter the power saving state(End will be displayed for 30 seconds, then standby for 30 seconds)		
	Press the function button to select the cupcake preset function, the cooking time is 10 minutes by default, and the temperature is 170 °C by default . Press the time setting button and the temperature setting button to adjust the time or temperature. After the setting is completed, press the start/pause button to start the countdown and cook. After the time is over, it	Adjustable time: 1 minute-1 hour, step 1 minute, adjustable temperature 75-200 °C, step 5 °C	

	will enter the power saving state (End will be displayed for 30 seconds, then standby for 30 seconds)		
	Press the function button to select the fries preset function, the cooking time is 18 minutes by default, and the temperature is 180 °C by default . Press the time setting button and the temperature setting button to adjust the time or temperature. After the setting is completed, press the start/pause button to start the countdown and cook. After the time is over, it will enter the power saving state(End will be displayed for 30 seconds, then standby for 30 seconds)	Adjustable time: 1 minute-1 hour, step 1 minute, adjustable temperature 75-200 °C, step 5 °C	

	Press the function button to select the roast function, the cooking time is 12 minutes by default, and the temperature is 200 °C by default . Press the time setting button and the temperature setting button to adjust the time or temperature. After the setting is completed, press the start/pause button to start the countdown and the cooking time ends. After that, it enters the power saving state (End will be displayed for 30 seconds, then standby for 30 seconds)	Adjustable time: 1 minute - 1 hour, step 1 minute, adjustable temperature 175 - 200 °C, step 5 °C	
	Press the function button to select the reheat function, the cooking time is 6 minutes by default, and the temperature is 120 °C by default . Press the time setting button and the temperature setting button to adjust the time or temperature. After the	Adjustable time: 1 minute-1 hour, step 1 minute, adjustable temperature 75-200 °C, step 5 °C	

	setting is completed, press the start/pause button to start the countdown and the cooking time ends. After that, it enters the power saving state (End will be displayed for 30 seconds, then standby for 30 seconds)		
	Press the function button to select the custom function, the cooking time defaults to ---- minutes, and the temperature defaults to --°C . Press the time setting button, temperature setting button, and adjust the time or temperature. After the setting is completed, press the start/pause button to start the countdown. Work, after the cooking time is over, it will enter the power-saving state (End will be displayed for 30 seconds, then standby for 30 seconds)	Adjustable time: 1 minute-1 hour, step 1 minute, adjustable temperature 75- 200 °C, step 5 °C	

	To set the temperature for the first time, press the temperature plus or minus key, the temperature defaults to 200 °C, which can be adjusted; for the first time setting, press the time plus or minus key, the time defaults to 1 minute, which can be adjusted; it cannot start to work without setting the initial temperature and time.		
	Press the function button to select the chicken function, the cooking time is 25 minutes by default, and the temperature is 175 °C by default . Press the time setting button and the temperature setting button to adjust the time or temperature. After the setting is completed, press the start/pause button to start the countdown and the cooking time ends. After	Adjustable time: 1 minute-1 hour, step 1 minute, adjustable temperature 75-200 °C, step 5 °C	

	that, it enters the power saving state (End will be displayed for 30 seconds, then standby for 30 seconds)		
--	---	--	--

Power- down memory

In the power failure after entering the working state, a memory function is required. When the power is turned on within 1-5 minutes, the working state before the power failure will continue. When it is not in the working state, the power is cut off, and the system enters the standby state after the power is turned on.

Sensor failure protection

When the temperature sensor fails, the digital tube displays an error code and beeps 10 times, the prototype cannot perform any work, and does not respond to any keys. Once in the protected state, it cannot respond to any keystrokes even if the hardware is faulty. The system must be reset after the fault has been removed.

Handling of errors

Display shows	error state	wrong reason		Solution
E2	The stop action does not accept key operations. (Self-test prompts immediately, and 60S prompt for work detection is turned on)	part bad	sensor open circuit	Check whether the thermistor circuit is abnormal
E4	The stop action does not accept key operations. (Self-check, prompt prompt in normal mode)		sensor short circuit	



QUALITY EXPERIENCE



Air Fryer

Model: NL-2977BS

فارسی ☐

English ☐