

NEW LAND

New Generation of Appliance



زودپز چندکاره

مدل: NL-3135BS

فارسی ☐

English ☐

مشتری گرامی،

از خرید زودپز چندکاره سپاسگزاریم. برای استفاده و نگهداری صحیح از این دستگاه، لطفاً دفترچه راهنما را به دقت مطالعه کرده و برای مراجعات بعدی نگهداری کنید. تمامی محتوای این دفترچه صرفاً جهت راهنمایی کاربر در استفاده و نگهداری از دستگاه ارائه شده است. ممکن است تصاویر صرفاً برای مرجع باشند و ظاهر محصول واقعی در اولویت باشد. اگر همچنان در استفاده از دستگاه با مشکلی مواجه شدید، لطفاً با نمایندگی یا مرکز خدمات مشتریان ما تماس بگیرید؛ ما خدمات رضایت‌بخشی را در کوتاه‌ترین زمان ممکن ارائه خواهیم کرد.

هشدارهای ایمنی مهم

دفترچه راهنما را با دقت مطالعه کرده و بر اساس دستورالعمل‌های آن عمل کنید.

۱. دستگاه را به برق متصل کرده و مطمئن شوید که ولتاژ پریز برق با ولتاژ دستگاه مطابقت دارد.
۲. در اولین استفاده، تمامی قطعات داخل قابلمه داخلی را خارج کرده و شستشو دهید.
۳. اطمینان حاصل کنید که هیچ‌گونه ناخالصی در کف قابلمه داخلی وجود ندارد.
۴. قابلمه را با یک دستمال نرم و آب تمیز کنید. از برس‌های زبر، سیم ظرفشویی یا پارچه‌های خشن برای تمیز کردن استفاده نکنید. لطفاً پس از استفاده، دستگاه را خاموش کرده و سیم برق را از پریز جدا کنید.
۵. از اتصال یا جدا کردن دوشاخه برق با دست‌های خیس خودداری کنید تا از برق‌گرفتگی جلوگیری شود. زمانی که دستگاه استفاده نمی‌شود، سیم برق را جدا کنید.
۶. دستگاه را دور از دسترس کودکان نگه دارید و اجازه ندهید کودکان به تنهایی از آن استفاده کنند تا از برق‌گرفتگی یا سوختگی جلوگیری شود.


۷. از وارد کردن اشیاء خارجی مانند براده‌های فلزی، سیم‌های آهنی، سوزن و غیره به داخل دستگاه یا شکاف‌های آن خودداری کنید، زیرا ممکن است منجر به برق‌گرفتگی یا عملکرد غیرعادی شود.
۸. هنگام استفاده از این دستگاه، آن را روی یک سطح ثابت قرار دهید. از استفاده دستگاه در مکان‌های با دمای بالا و رطوبت زیاد خودداری کرده و آن را دور از مواد قابل اشتعال نگه دارید.
۹. هنگام کار کردن دستگاه، قابلمه داخلی را لمس نکنید.
۱۰. در حین پخت، دست‌ها یا صورت خود را نزدیک به خروجی بخار قرار ندهید تا از سوختگی جلوگیری شود.
۱۱. خروجی بخار را با پارچه نپوشانید تا از وقوع حوادث یا خرابی دستگاه جلوگیری شود.
۱۲. هنگام پخت‌وپز، دستگاه را جابجا یا تکان ندهید.
۱۳. دستگاه را در آب غوطه‌ور نکنید.
۱۴. پس از گرم شدن قابلمه داخلی، از شستن آن با آب سرد بلافاصله خودداری کنید.
۱۵. این دستگاه برای افراد زیر مناسب نیست: افراد با اختلالات حسی یا روانی، افراد بدون تجربه یا دانش مرتبط (از جمله کودکان)، مگر اینکه تحت نظارت یک فرد متخصص باشند. کودکان باید تحت نظارت باشند تا مطمئن شوید با دستگاه بازی نمی‌کنند.
۱۶. مطمئن شوید که سیم برق با لبه‌های تیز، سطوح داغ یا اشیاء تیز تماس ندارد، زیرا ممکن است منجر به برق‌گرفتگی یا آتش‌سوزی شود.
۱۷. هنگام استفاده اولیه، ممکن است بوی خاصی به مدت چند دقیقه ایجاد شود که این پدیده طبیعی است.
۱۸. هنگام تمیز کردن دستگاه، آن را در آب غوطه‌ور نکنید یا زیر شیر آب نشوید. اگر سیم برق یا دوشاخه آسیب دیده باشد، باید آن را با سیم انعطاف‌پذیر مخصوص یا

قطعه‌ای که از تولیدکننده یا بخش تعمیرات مجاز خریداری شده است، جایگزین کنید.

۱۹. در صورت خرابی دستگاه، ابتدا برق را خاموش کرده و دوشاخه را از پریز خارج کنید. از ادامه استفاده خودداری کنید و با بخش خدمات پس از فروش شرکت تماس بگیرید. قطعات غیر اصل را جایگزین نکنید و خودتان اقدام به تعمیر نکنید.

۲۰. از ریختن مایعات روی اتصالات دستگاه خودداری کنید تا از برق‌گرفتگی یا سوختگی جلوگیری شود. سطح صفحه حرارتی پس از استفاده ممکن است حرارت باقیمانده داشته باشد. از لمس صفحه حرارتی خودداری کنید تا از آسیب به پوست جلوگیری شود.



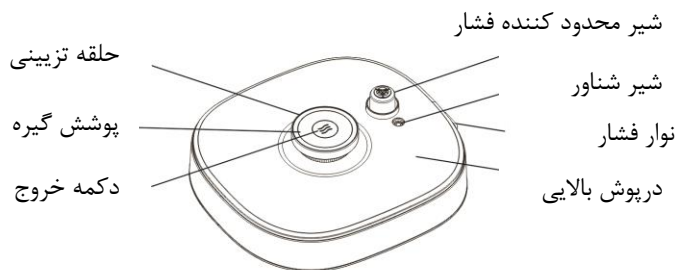

لوازم جانبی





وضعیت رویی و خروجی




حالت آب بندی

دکمه خروج


شیر محدود کننده
فشار

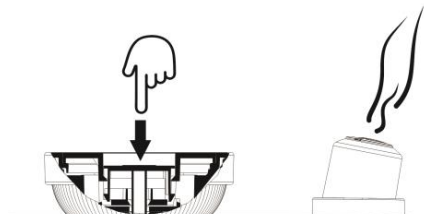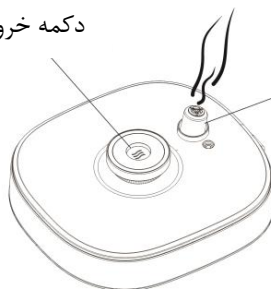

حالت خروج

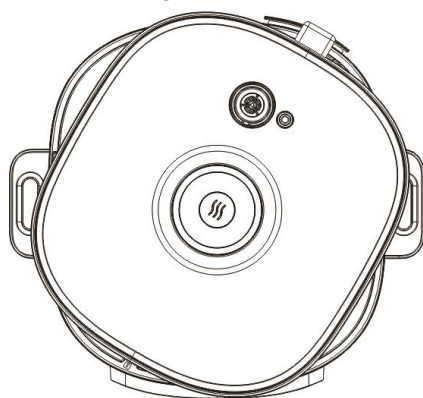

جهت باز کردن

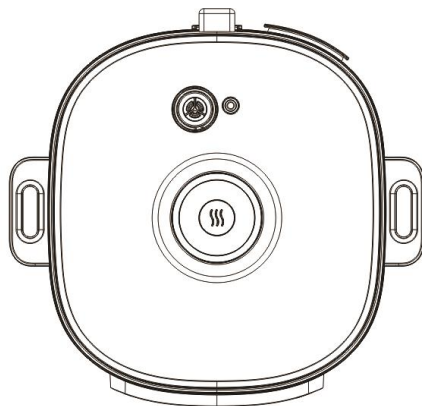

جهت بستن

قبل از استفاده، به موارد زیر توجه کنید:




همیشه بخش گرمکن را تمیز کنید



از قاشق ضد خش استفاده کنید

کنترل پنل

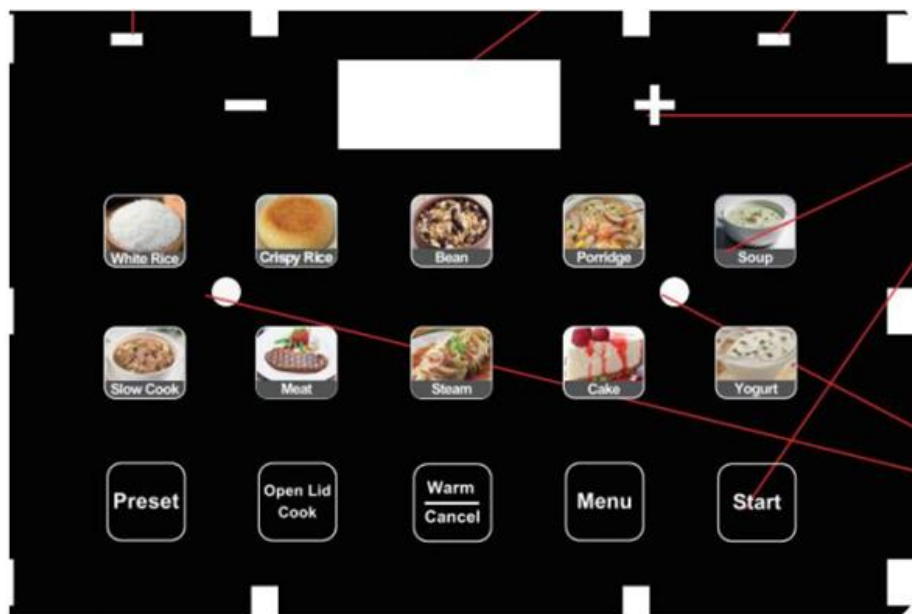

مشخصات فنی دستگاه

مشخصه	مقدار
نوع	زودپز چندکاره
توان مصرفی	۱۰۰۰ وات
ولتاژ	۲۲۰ ولت / ۵۰ هرتز
ظرفیت اسمی	۶ لیتر
فشار کاری	۳۰ کیلوپاسکال - ۷۰ کیلوپاسکال
حداکثر فشار مجاز	۹۰ کیلوپاسکال
دمای گرم‌نگهداری	۷۸-۷۰ درجه سانتی‌گراد
مدت زمان تنظیم پیش‌فرض	۲۴ ساعت

شرح عملکرد دستگاه

۱. دکمه "Menu" (منو)

■ در حالت آماده‌به‌کار (غیر فعال)، با فشردن این دکمه می‌توانید عملکردهای مختلف را انتخاب کنید. عملکردهای قابل انتخاب شامل: پخت برنج سفید، حبوبات، غلات، فرنی، سوپ، پخت آرام، گوشت، بخارپز کردن، کیک، و ماست است.

۲. دکمه "Preset" (تنظیم پیش‌فرض)

■ پس از انتخاب گزینه از منوی عملکرد، با فشردن این دکمه وارد حالت تنظیم زمان پیش‌فرض می‌شوید. با استفاده از دکمه‌های +/- زمان را تنظیم کرده و حالت عملکرد با زمان پیش‌فرض فعال می‌شود. نشانگر "Preset" روشن می‌شود.

توجه: زمان پیش‌فرض به حالت شمارش معکوس برای اتمام تنظیم می‌شود.

۳. دکمه "+/-"

- در حالت انتخاب عملکرد، با فشردن این دکمه می‌توانید زمان عملکرد را تنظیم کنید. (مراجعه به جزئیات عملکرد برای اطلاعات بیشتر در مورد گام‌های زمانی)
- در حالت تنظیم زمان پیش‌فرض، با فشردن این دکمه می‌توانید زمان پیش‌فرض را تنظیم کنید. (با گام‌های ۳۰ دقیقه‌ای)

۴. دکمه "Keep Warm/Cancel" (گرم‌نگه‌داشتن/لغو)

- با فشردن این دکمه در حالت آماده‌به‌کار، حالت گرم‌نگه‌داشتن فعال می‌شود. نشانگر "Keep Warm" روشن شده و زمان به دقیقه نمایش داده می‌شود. (88:88 نشان‌دهنده مدت زمان گرم‌نگه‌داری است).
- در حالت انتخاب عملکرد یا حالت عملکرد فعال، با فشردن این دکمه وارد حالت آماده‌به‌کار می‌شوید.

۵. دکمه "Open Lid Cook" (پخت با درب باز)

- با فشردن این دکمه در حالت آماده‌به‌کار، وارد حالت انتخاب عملکرد پخت با درب باز می‌شوید.

۶. دکمه "Menu" (منو)

- در حالت آماده‌به‌کار، با فشردن این دکمه می‌توانید منوها را انتخاب کنید.

صدای بوق (Buzzer)

- صدای بوق به صورت «دی» «دی» شنیده می‌شود.
- هنگام روشن شدن دستگاه، صدای بوق یک بار (به مدت ۰.۵ ثانیه) شنیده می‌شود.
- با هر بار فشردن یک دکمه معتبر، صدای بوق یک بار (۰.۲ ثانیه) شنیده می‌شود.
- ۵ بوق به هنگام پایان کار (۰.۵ ثانیه برای هر بوق).
- ۵ بوق به هنگام پایان حالت گرم‌نگه‌داشتن (۰.۵ ثانیه برای هر بوق).
- ۱۰ بوق به هنگام خرابی در حالت آماده‌به‌کار یا کارکرد (۰.۵ ثانیه برای هر بوق).

قوانین نمایش دستگاه

۱. حالت آماده به کار (Standby mode):

- هنگامی که زودپز به برق متصل می شود:
- لامپ های نشانگر و صفحه نمایش دیجیتال به مدت ۱ ثانیه به طور کامل روشن می شوند.
- صدای بوق شنیده می شود و دستگاه وارد حالت آماده به کار می شود. صفحه نمایش دیجیتال: - - - - را نشان می دهد و نشانگر «شروع» به صورت چشمک زن (۱ ثانیه روشن، ۱ ثانیه خاموش) فعال است.
- طی ۳۰ ثانیه پس از اتصال برق، دکمه های قابل عملکرد (پخت با درب باز، گرم نگه داشتن/لغو، و کلید عملکرد) روشن می شوند؛ نور نوار نیز روشن می ماند.
- پس از ۳۰ ثانیه: صفحه نمایش همچنان - - - - را نشان می دهد، نشانگر «شروع» چشمک می زند و فقط چراغ های دکمه عملکرد، پخت با درب باز، و لغو پیش فرض روشن می ماند. سایر چراغ ها خاموش می شوند.

۲. وضعیت انتخاب عملکرد (Function selection status):

- در حالت آماده به کار، با فشردن دکمه عملکرد:
- عملکرد انتخاب شده روشن می شود و چراغ آن چشمک می زند.
- چراغ سایر عملکردها روشن می ماند.
- زمان کاری پیش فرض عملکرد انتخاب شده نمایش داده می شود. اگر زمان به صورت پیش فرض تغییر نکند، نمایشگر دیجیتال ثابت باقی می ماند.

۳. وضعیت انتخاب زمان عملکرد (Function time selection status):

- اگر عملکردی دارای گزینه انتخاب زمان باشد:
- با فشردن دکمه های + یا - وارد حالت تنظیم زمان می شوید. در این حالت، نمایشگر دیجیتال و چراغ عملکرد انتخاب شده چشمک می زنند.
- با نگه داشتن دکمه های + یا - تنظیم سریع زمان امکان پذیر است.

۴. وضعیت تنظیم پیش فرض (Preset selection status):

• اگر عملکردی دارای گزینه تنظیم پیش فرض باشد:

■ با فشردن دکمه "Preset" وارد حالت تنظیم زمان پیش فرض می شوید. نشانگر "Preset" روشن می شود.

■ در حالت تنظیم پیش فرض، صفحه نمایش دیجیتال به صورت 88:88 چشمک می زند:

- با فشردن دکمه "+" زمان پیش فرض به میزان ۳۰ دقیقه افزایش می یابد.
- با فشردن دکمه "-" زمان پیش فرض به میزان ۳۰ دقیقه کاهش می یابد.
- زمان پیش فرض اولیه ۲ ساعت است.

○ در حالت 88:88، نمایش ثابت باقی می ماند. تنظیم سریع با نگه داشتن دکمه ها امکان پذیر است.

■ پس از انتخاب زمان، با فشردن دکمه «شروع» یا "start" عملکرد پیش فرض آغاز می شود. صفحه نمایش، زمان پیش فرض را نمایش داده و چراغ نشانگر "Preset" روشن می شود. شمارش معکوس زمان نمایش داده می شود.

■ زمان پایان تنظیم پیش فرض شامل زمان کاری عملکرد است. اگر زمان پیش فرض کمتر از زمان کاری عملکرد باشد، عملکرد به طور خودکار آغاز می شود.

■ با اتمام عملیات، دکمه «شروع» را فشار دهید تا عملکرد پیش فرض آغاز شود.

وضعیت عملکرد دستگاه در حین کار

۱. عملکرد، زمان، و تنظیم پیش فرض:

■ پس از تکمیل تنظیمات، دکمه «شروع» را فشار دهید تا عملکرد فعال شود.

۲. حالت نمایش ماژول دیجیتال در حین تنظیم یا کار:

■ در حالت تنظیم: نمایشگر دیجیتال به صورت چشمک زن نمایش داده می شود.

■ در حالت کار: ":" به صورت چشمک زن نمایش داده می شود.

۳. هر عملکرد پخت: پس از شروع کار، چراغ نشانگر عملکرد مربوطه به صورت ثابت روشن باقی می ماند.

۴. **انتقال به حالت پخت:** هنگامی که برنامه به حالت پخت منتقل می‌شود، نشانگر

تنظیم پیش‌فرض خاموش می‌شود و چراغ عملکرد مربوطه روشن می‌شود.

۵. **گرم‌نگه‌داشتن:** در حالت کار، تنظیم گرم‌نگه‌داشتن خاموش می‌شود. در حالت

عملکردی، چراغ گرم‌نگه‌داشتن روشن می‌ماند.

۱. حالت گرم‌نگه‌داشتن (Keep Warm):

■ پس از اتمام عملکرد پخت، دستگاه به‌طور خودکار وارد حالت گرم‌نگه‌داشتن می‌شود. چراغ گرم‌نگه‌داشتن روشن می‌شود و زمان در ناحیه ساعت به‌صورت دقیقه به دقیقه جمع می‌شود.

■ حداکثر مدت زمان گرم‌نگه‌داشتن ۱۲ ساعت است. پس از گذشت ۱۲ ساعت، دستگاه به حالت آماده‌به‌کار منتقل می‌شود.

■ به‌عنوان مثال: اگر زمان گرم‌نگه‌داشتن به‌صورت «۰:۳۰» نمایش داده شود، به این معنی است که دستگاه به مدت ۳۰ دقیقه در حالت گرم‌نگه‌داشتن قرار داشته است. ■ دمای نگه‌داری باید در بازه ۷۰-۷۸ درجه سانتی‌گراد باشد.

توضیحات تکمیلی:

- عملکرد گرم‌نگه‌داشتن برای حفظ دمای مناسب غذا طراحی شده و از گرم‌شدن بیش‌ازحد یا خنک‌شدن غذا جلوگیری می‌کند.

شرح منوی عملکردها

عملکرد	مراحل عملیات	دامنه تنظیم زمان	زمان پیش‌فرض
برنج سفید	انتخاب عملکرد "White Rice"، زمان پیش‌فرض "۲۰ دقیقه" نمایش داده می‌شود. پس از انتخاب، دکمه "Start" را فشار دهید تا عملکرد شروع شود.	--	بله/۲۴ ساعت

		هنگام پخت، زمان معکوس نمایش داده می‌شود (مثال: ۱۰:۰). پس از اتمام کار، بوق ۵ بار به صدا در می‌آید (هر بار ۱ ثانیه) و دستگاه به‌طور خودکار وارد حالت گرم‌نگه‌داشتن می‌شود. توجه: زمان پیش‌فرض برای دم کردن برنج ۵ دقیقه است.	
ته دیگ	انتخاب عملکرد "Crispy Rice"، زمان پیش‌فرض "۱ ساعت و ۵۰ دقیقه" نمایش داده می‌شود. پس از انتخاب، دکمه "Start" را فشار دهید. هنگام پخت، بوق ۱۰ بار به صدا در می‌آید و تخلیه دستی بخار برای بهترین نتیجه توصیه می‌شود. توجه: کف برنج باید طلایی شود، با ۳ پیمانه برنج و ۵۰ میلی‌لیتر روغن بپزید.	۲۰ دقیقه - ۳ ساعت ۱) دقیقه‌ای)	خیر
حبوبات	انتخاب عملکرد "Bean"، زمان پیش‌فرض "۴۰ دقیقه" نمایش داده می‌شود. پس از انتخاب، دکمه "Start" را فشار دهید. پس از اتمام کار، بوق ۵ بار به صدا در می‌آید و دستگاه به‌طور خودکار وارد حالت گرم‌نگه‌داشتن می‌شود.	۲۰ دقیقه - ۱ ساعت و ۳۰ دقیقه	بله/۲۴ ساعت

فرنی	انتخاب عملکرد "Porridge"، زمان پیش فرض "۳۰ دقیقه" نمایش داده می شود. پس از انتخاب، دکمه "Start" را فشار دهید. پس از اتمام کار، بوق ۵ بار به صدا درمی آید و دستگاه به طور خودکار وارد حالت گرم نگه داشتن می شود.	۲۰ دقیقه - ۴۰ دقیقه (۱) دقیقه ای)	بله/۲۴ ساعت
سوپ	انتخاب عملکرد "Soup"، زمان پیش فرض "۳۰ دقیقه" نمایش داده می شود. پس از انتخاب، دکمه "Start" را فشار دهید. پس از اتمام کار، بوق ۵ بار به صدا درمی آید و دستگاه به طور خودکار وارد حالت گرم نگه داشتن می شود.	۲۰ دقیقه - ۱ ساعت و ۳۰ دقیقه	بله/۲۴ ساعت
پخت آرام	انتخاب عملکرد "Slow Cook"، زمان پیش فرض "۳۰ دقیقه" نمایش داده می شود. پس از انتخاب، دکمه "Start" را فشار دهید. پس از اتمام کار، بوق ۵ بار به صدا درمی آید و دستگاه به طور خودکار وارد حالت گرم نگه داشتن می شود.	۲۰ دقیقه - ۱ ساعت و ۳۰ دقیقه	خیر
گوشت	انتخاب عملکرد "Meat"، زمان پیش فرض "۳۵ دقیقه" نمایش داده می شود. پس از انتخاب، دکمه "Start"	۲۰ دقیقه - ۱ ساعت و ۳۰ دقیقه	بله/۲۴ ساعت

		را فشار دهید. پس از اتمام کار، بوق ۵ بار به صدا درمی‌آید و دستگاه به‌طور خودکار وارد حالت گرم‌نگه‌داشتن می‌شود.	
بخارپز	انتخاب عملکرد "Steam"، زمان پیش‌فرض "۴ دقیقه" نمایش داده می‌شود. قبل از رسیدن به فشار تنظیم‌شده، افکت ماریچ نمایش داده می‌شود. پس از رسیدن به فشار، شمارش معکوس شروع می‌شود. پس از اتمام کار، بوق ۵ بار به صدا درمی‌آید و دستگاه به‌طور خودکار وارد حالت گرم‌نگه‌داشتن می‌شود.	۱ دقیقه - ۳۰ دقیقه	خیر
کیک	انتخاب عملکرد "Cake"، زمان پیش‌فرض "۴۰ دقیقه" نمایش داده می‌شود. پس از انتخاب، دکمه "Start" را فشار دهید. پس از اتمام کار، بوق ۵ بار به صدا درمی‌آید و دستگاه به‌طور خودکار وارد حالت گرم‌نگه‌داشتن می‌شود. برای دستیابی به بهترین نتیجه، می‌توانید تخلیه دستی بخار را انجام دهید.	۲۰ دقیقه - ۱.۵ ساعت	خیر
ماست	انتخاب عملکرد "Yogurt"، زمان پیش‌فرض "۸ ساعت" نمایش داده می‌شود.	۶ ساعت - ۱۲ ساعت	خیر

	۳۰) دقیقه‌ای)	می‌شود. پس از انتخاب، دکمه "Start" را فشار دهید. پس از اتمام کار، بوق ۵ بار به صدا درمی‌آید و دستگاه به‌طور خودکار وارد حالت گرم‌نگه‌داشتن می‌شود.	
پخت با درب باز	۲۰ دقیقه - ۱.۵ ساعت	انتخاب عملکرد "Open Lid Cook"، زمان پیش‌فرض "۲۰ دقیقه" نمایش داده می‌شود. پس از انتخاب، دکمه "Start" را فشار دهید. پس از رسیدن به فشار تنظیم‌شده، بوق ۵ بار به صدا درمی‌آید و خروجی متوقف می‌شود. نمایشگر دیجیتال کد "E5" را نشان می‌دهد.	خیر
گرم‌نگه‌داشتن	- -	انتخاب عملکرد "Keep Warm"، چراغ مربوطه روشن می‌شود و زمان در نمایشگر به دقیقه شمارش می‌شود. حداکثر زمان گرم‌نگه‌داشتن ۱۲ ساعت است. پس از این مدت، دستگاه به حالت آماده‌به‌کار منتقل می‌شود.	خیر

ویژگی حافظه در قطع برق

- دستگاه تنها زمانی دارای عملکرد حافظه است که در حالت کار فعال باشد. اگر برق ظرف ۲ ساعت پس از قطع بازگردد، دستگاه به حالت کاری قبل از قطع برق ادامه می‌دهد.

- اگر دستگاه در حالت کار نباشد و برق قطع شود، پس از بازگشت برق، سیستم وارد حالت آماده به کار می شود.

مشکلات و روش های حل آن

نمایش خطا	وضعیت	علت خطا	راه حل
E1	عدم امکان کارکرد و عدم پذیرش عملیات دکمه ها	خرابی قطعات یا اتصال ضعیف مدار حسگر کف	حسگر دما را به درستی متصل کنید (یا به دمای عادی بازگردید) و دستگاه را دوباره روشن کنید.
E2	عدم امکان کارکرد و عدم پذیرش عملیات دکمه ها	دمای بیش از حد	حسگر دما را به درستی متصل کنید (یا به دمای عادی بازگردید) و دستگاه را دوباره روشن کنید.
E3	عدم امکان کارکرد و عدم پذیرش عملیات دکمه ها	اتصال کوتاه حسگر کف	حسگر دما را به درستی متصل کنید (یا به دمای عادی بازگردید) و دستگاه را دوباره روشن کنید.
E4	عدم امکان کارکرد و عدم پذیرش عملیات دکمه ها	خرابی حسگر فشار	حسگر فشار را به درستی متصل کنید و دستگاه را دوباره روشن کنید.

توضیحات تکمیلی:

- اطمینان حاصل کنید که تمامی اتصالات به درستی انجام شده و هیچگونه مشکلی در سیم کشی وجود ندارد.
- اگر مشکلات تکرار شد، با مرکز خدمات پس از فروش تماس بگیرید.

Value customer,

Thank you for purchasing the Multi-pressure cooker. In order to use and maintain this machine correctly, please read the manual carefully before use and keep it for future reference. All contents in this manual are only for the user's reference when using and maintaining, the actual object shall prevail, and the pictures are for reference only. If you still have problems in use, please consult our dealer or customer service center, and we will provide you with satisfactory service in a timely manner.

IMPORTANT SAFEGUARDS



Read the instruction manual carefully and do it according to the indication of IM.

1. Plug in and make sure the voltage of home socket is match with this product.
2. Please take out all parts in inner pot and wash it in the first time to use.
3. Please make sure there is no any impurities in the bottom of inner pot.
4. Please clean the pot with a soft cloth and water. Do not scrub it with a pot brush, steel ball or a hard dish cloth. Please turn off the power and unplug the power cord after using;
5. Do not plug and unplug with wet hands to avoid electric shock. Please unplug the power plug when the product is not in use.
6. Do not put the product in the reach of children, or let children use it alone to avoid electric shock or burns.
7. It is forbidden to insert foreign objects such as metal chips, iron wires, needles, etc. into the product or in the gap, otherwise it will cause electric shock or abnormal operation.
8. When using this product, it must be placed on a stable desktop. Do not use this product in a place with high temperature and high humidity. and keep away from flammable materials.
9. Don't touch Inner pot when working.
10. Don 't put your hands or face close to the steam hole to avoid burn when cooking.

11. Don 't cover the steam hole with cloth to avoid accidents or product failure.
12. Don 't move or shake the product when cooking.
13. Don't immerse the product in water.
14. Don't wash inner pot by cold water directly after high temperature heating.
15. This product is not suitable for the following people: people with sensory or psychological dysfunction, lack of relevant experience or knowledge (including children) and other people, unless they use this product under the supervision of a professional. Children should be supervised to ensure that they do not play with this product.
16. Make sure that the power cord does not come into contact with sharp edges, burrs, other protruding sharp objects or objects with hot surfaces, which may cause leakage of electricity, resulting in electric shock or fire.
17. A few minutes of peculiar smell may appear when using it for the first time, which is a normal phenomenon.
18. When cleaning this product, do not immerse it in water or wash it under the tap. If the power cord or plug is found to be damaged or broken, it must be replaced with a special flexible cord or a special component purchased from its manufacturer or designated maintenance department.
19. If the product fails, please turn off the power first, pull out the plug from the socket, do not continue to use it, and contact the company's after-sales service personnel, do not replace non-original parts or disassemble and repair by yourself.
20. Avoid spillage on the connector to avoid electric shock or burns. The surface of the heating plate will have residual heat after use. Do not touch the heating plate. It may cause skin damage.

Introduction



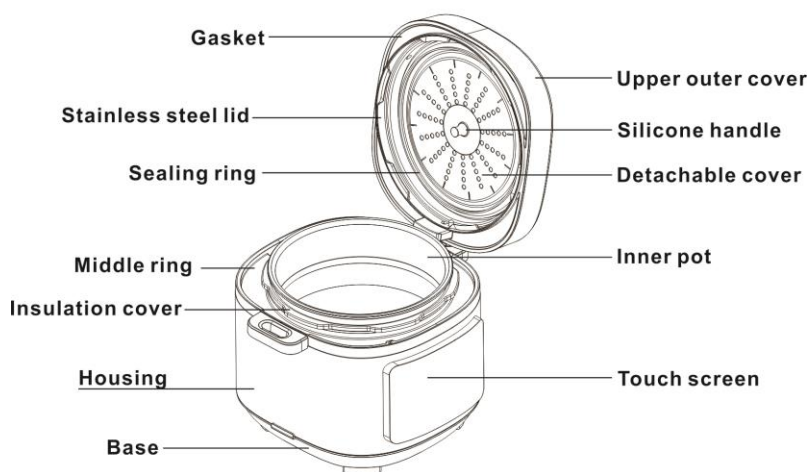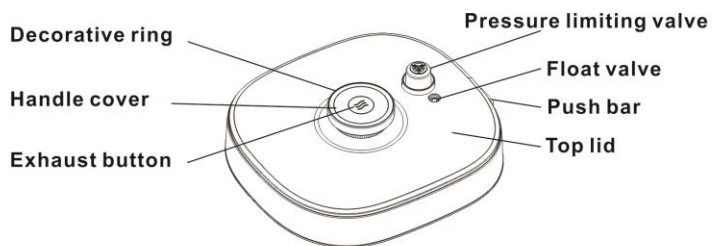

Accessories:



Measure cup



Rice spoon



Soup spoon





Power cord


Sealed/Exhaust status




Sealed status

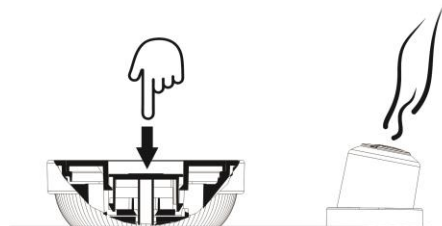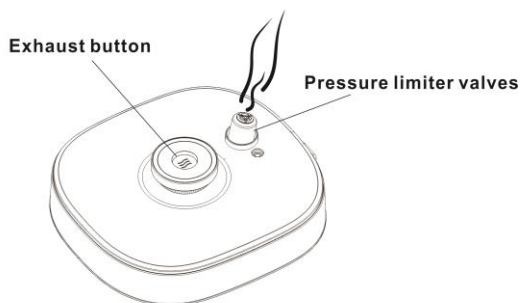

Exhaust status

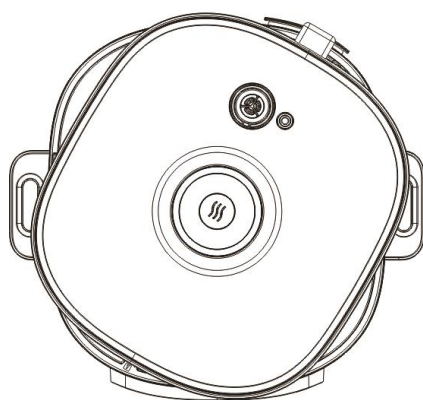

Opening Direction

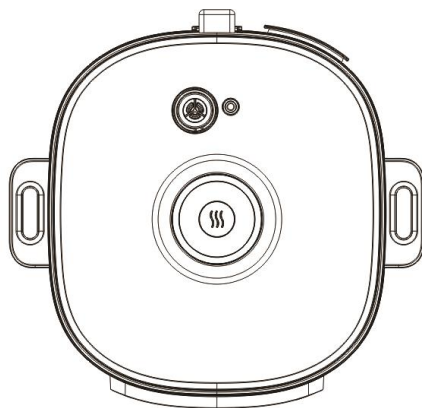

Closing Direction

Notice before using




Keep heating plate clean



Use a non-metallic spoon

Control Panel

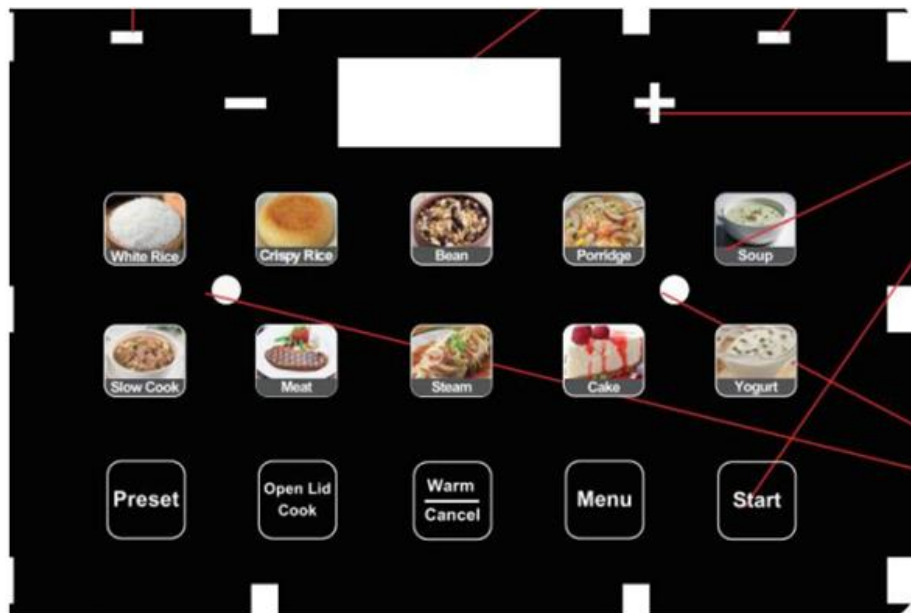

Specification Sheet

Type	Power	Rated	Capacity	Working pressure	Limiting pressure	Keep warm temperature	Preset
	220V/50 Hz	1000 W	6L	30Kpa - 70Kpa	90Kpa	70-78°C	24H

Function description

1. "Menu"

■ In the non-working state, press the function key to select the function: the optional functions are: White rice, Crispy rice, Beans, Multigrain, Porridge, Soup, Slow cooking, Meat, Steaming, Cake, Yogurt function.

2. "Preset"

■ After selecting the menu with preset function, press this button to enter the preset time setting state, press the +/- button to adjust the time, and enter the preset time working state. The "Preset" indicator lights up.

Note: The preset time is set to the completion countdown mode.

3. "+/-"

■ In the function selection state, press this key to adjust the function time status. (See feature details for time stepping)

■ In the Preset Time Setting state, press this button to adjust the preset time status. (30 minutes in steps)

4. "Keep warm/ Cancel "

■ Press this button in standby mode to enter the keep warm mode, the "keep warm" indicator lights up, and the time is measured in minutes. 88:88 shows the keep warm time.

■ In the function selection state or function working state, press this button to enter the standby state.

5. "Open lid cook"

- Press this button in standby mode to enter the open lid and cook function selection state.

6. "Menu"

- Press this key in standby mode can also select menus.

Buzzer

- The beep is "Di" "Di";
- Power on ,buzzer will sound once (0.5 for 0.5 seconds);
- The buzzer will sound once (once in 0.2 seconds) every time you press the valid button;
- 5 beeps at the end of the work (0.5 for 0.5 seconds);
- 5 beeps at the end of keeping warm (0.5 in 0.5 seconds);
- 10 beeps (0.5 for 0.5 seconds) in case of failure in standby or work;

Display rules

1. Standby mode:

- The rice cooker is connected to the power, the digital tube and indicator light are fully displayed for 1 second, the buzzer rings and enters the standby state, and the digital tube displays: - - - , the start light flashes (1 second on, 1 second off); Within 30 seconds of powering on, the operable status button (open lid and cook; Keep Warm/Cancellation; The function key light is lit); The ribbon light is on.
- After 30 seconds, keep the digital tube display: - - - , the start light flashes (1 second on, 1 second off); The function key light, the open lid boiling button, and the heat preset cancellation light are lit; The rest of the lights go out.

2. Function selection status:

■ Press the function button in standby mode, the selected function will be shining, and the rest of the function lights will be on.

■ There is a function of default working time to display the default working time; If the time does not change by default, the digital tube part does not need to be shiny.

3. Function time selection status:

■ There is a time selection function, press the preset +/- key to enter the setting state, and the function and digital tube part are flashed.

■ Long press +/- to support fast stepping.

4. Preset selection status:

■ There is a function of preset selection, press the preset button to enter the preset time setting state, and the "Preset" indicator light will be displayed.

■ Press the "Preset" button to enter the preset adjustment mode, the digital tube part flashes, "88:88", press the "+" button once to increase the preset time by 30 minutes, press the "-" button once to reduce the preset time by 30 minutes.

■ The default working hours for preset are 2 hours.

■ When it shows "88:88", stay on; support long press to fast step.

■ After selecting the time, press the start button to start the preset function. The display screen shows the preset time, the "preset button" indicator light is on, and the time countdown is displayed.

■ The end time of the preset includes the working hours of the function, and the working time of the function will be automatically entered when the preset time is less than the start of the working hours of the function.

■ After the operation is completed, press the start button to start the preset function.

5. Functional working status:

- Function, time, preset; When the operation is completed, press the start button to start the function.
- Display mode of digital tube module in setting or working, digital flashing in setting, flashing ":" in work.
- Each cooking function、 Steady on after starting work。
- When the program is switched to cooking mode, the preset indicator is turned off and the corresponding function indicator is lit up.
- Keep warm, set to turn off in working state, light up in functional working state.

1. Keep warm

- When the function is completed, it will automatically enter the keep warm state, the keep warm light will be on, the time in the clock area will be accumulated by 1 minute, the maximum heat preset time will be 12 hours, and the time will be transferred to the standby function after more than 12 hours.

For example, if the holding time is displayed as 0:30, it means that it has been kept warm for 30 minutes, and it will return to standby mode after holding for 12 hours. The temperature requirement is 70-78°C.

Menu description

Menu	Operation step	Time adjustment range	Preset time
------	----------------	-----------------------	-------------

White Rice	Select the “White rice” function, the default display time is "20mins", after the selection is completed, press the start button to automatically enter the function, start the marquee display, when the function enters the stewed rice, the countdown time of the stewed rice will be displayed (e.g. 0:10), after the work is completed, the buzzer will sound 5 times (the duration of a single time is 1S), and it will automatically transfer to keep warm function. Note: 1. The default time for simmering rice is 5mins.	- -	YES/24hrs
Crispy rice	Select “Crispy rice” function, the default display is "1hr and 50 mins", after the selection is completed, press the start button to automatically enter the function, start the timing work, after the work is completed, the buzzer will sound 5 times (single duration 1S), and it will automatically turn into keep warm function.	20mins-3hr 1min/step	NO

	Note: 1.Rice bottom should be golden, cook 3 cups of rice with 50mL of oil. 2.During the cooking stage, the buzzer will sound 10 times and manual exhaust will be used to achieve optimal results.		
Bean	Select the “Bean” function, the default display "40mins" after the selection is completed, press the start button to automatically enter the function, start the timing work, after the work is completed, the buzzer rings 5 times (single duration 1S), automatically turn into keep warm function.	20mins-1hr and 30mins 1min/step	YES/24hrs
Porridge	Select the “Porridge function”, the default display "30mins" after the selection is completed,press ”Start” button to start cooking. After complete the work, After the work is completed, the buzzer will beep 5 times. Automatically turn into keep warm function. .	20mins-40mins 1 min/step	YES/24hrs

Soup	Select the “Soup” function, the default display "30mins" after the selection is completed, press ”Start” button to start cooking. After complete the work, After the work is completed, the buzzer will beep 5 times. Automatically turn into keep warm function.	20mins-1hr and 30mins 1 min/step	YES/24hrs
Slow cook	Select the “Slow cook” function, the default display "30mins" after the selection is completed. Press ”Start” button to start cooking. After complete the work, After the work is completed, the buzzer will beep 5 times. Automatically turn into keep warm function.	20mins-1hr and 30mins 1 min/step	NO
Meat	Select the “Meat” function, the default display "35mins" after the selection is completed,press ”Start” button to start cooking. After complete the work, After the work is completed, the buzzer will beep 5 times. Automatically turn into keep warm function.	20mins-1hr and 30mins 1 min/step	YES/24hrs
Steam	Select the “Steam” function, the default display "4mins" after the selection is	1min-30mins 1 min/step	NO

	completed, press "Start" button to start cooking. After complete the work, After the work is completed, the buzzer will beep 5 times. Automatically turn into keep warm function. Note: The marquee effect is displayed before the preset pressure is reached; Once the preset pressure is reached, the countdown begins.		
Cake	Select the "Cake" function, the default display "40mins" after the selection is completed,press "Start" button to start cooking. After complete the work, After the work is completed, the buzzer will beep 5 times. Automatically turn into keep warm function. The pressure hammer can be manually removed to achieve maximum effect.	20mins-1.5hrs	NO
Yogurt	Select the "Yogurt" function, the default display "8hr" after the selection is completed,press "Start" button to start cooking. After complete the work, After the	6hrs -12 hrs 30 min /step	NO

	work is completed, the buzzer will beep 5 times. Automatically turn into keep warm function.		
Open lid cook	Select “Open the lid” function, the default display is "20mins", after the selection is completed, press the start button to automatically enter the function, start the timing work, after the work is completed, the buzzer will sound 5 times (the duration of a single time is 1S), and it will automatically turn into keep warm function. Note: 1. Steaming function process. 2. After reaching the preset pressure, the buzzer prompts 5 sounds; The digital tube displays "E5"; The output stops.	20mins-1.5hrs 1min/step	NO
Keep warm	Press “keep warm” function, the light will turn on, the clock area time will be accumulated by 1 minute, the maximum keep warm time will be 12 hours, and the time will be transferred	- -	NO

	to standby function after the time exceeds 12 hours.		
--	--	--	--

Power-off memory

It has a memory function only after the power failure enters the working state, and when the electricity comes within 2 hours, the working state before the power failure continues. The power will be cut off when it does not enter the working state, and the system will enter the standby state after the electricity comes.

Problem and method of solving

Display	status	Error reason		Solution
E1	Cannot operate and do not accept button operation .	Poor components	Poor connection of bottom sensor circuit	Connect the thermistor correctly (or restore to normal temperature) and power on again.
E2	Cannot operate and do not accept button operation .		Over temperature	Connect the thermistor correctly (or restore to normal temperature) and power on again.。

E3	Cannot operate and do not accept button operation .		Bottom sensor short circuit	Connect the thermistor correctly (or restore to normal temperature) and power on again.。
E4	Cannot operate and do not accept button operation .		Pressure sensor failure	Connect the pressure sensor correctly and power it on again.



QUALITY EXPERIENCE



Multi Pressure Cooker
Model: NL-3135BS

فارسی ☐
English ☐