

NEW LAND

New Generation of Appliance




دستگاه تصفیه آب

مدل: NL-3033BL

فارسی ☐


English ☐

اصول کار دستگاه

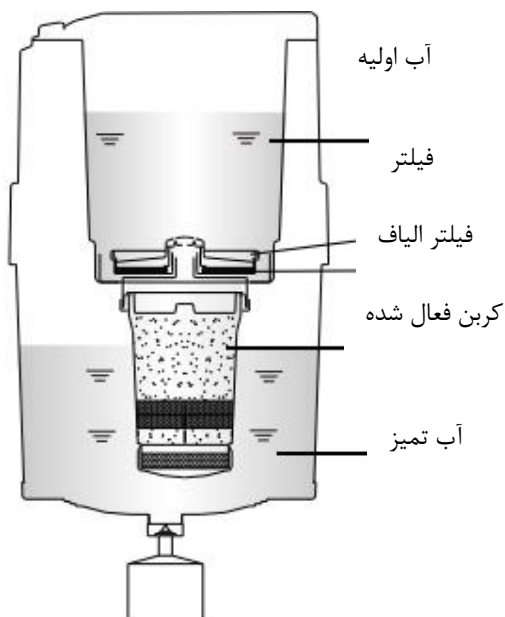


توجه:

۱. این محصول باید در جایی دور از نور مستقیم آفتاب نگهداری شود.

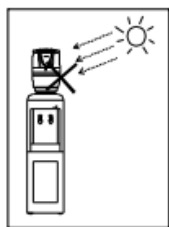


۲. در صورت عدم استفاده از دستگاه برای چند روز، آب مخزن پایینی را تخلیه کنید.



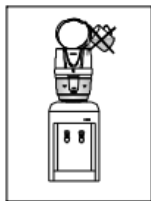

۳. در صورتی که سطح آب در مخزن پایینی بالا است، برای جلوگیری از سرریز آب از فیلتر تصفیه، آب بیشتری اضافه نکنید.

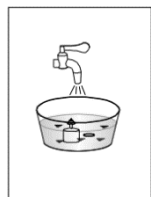

۴. برای اطمینان از عملکرد موثر درزگیری، به طور مرتب اجزای آب‌بندی (پد لاستیکی مخروطی شکل، حلقه لاستیکی) را تمیز کنید.



۵. هنگام اولین استفاده از فیلتر تصفیه آب، اجزای شناور، مخزن پایینی، فیلتر الیاف و فیلتر کربن فعال را با آب تمیز بشوید.

مشخصات فنی:

نوع آب ورودی: آب شهری

دبی (حجم جریان) آب: ۰/۳ لیتر بر دقیقه

حجم کل: ۱۵ لیتر

دستورالعمل

۱. تمیز کردن

هنگام اولین استفاده، اجزای شناور، زیر مخزن، فیلتر کربن فعال و فیلتر استریلیزاسیون را با آب تمیز بشوید.

تمیز کردن فیلتر کربن فعال

الف) حلقه نگهدارنده را از داخل مخزن جدا کنید، سپس فیلتر کربن فعال را خارج کنید.

ب) با آب شیر بشوید. در حین شستشو، فیلتر را تکان دهید و سپس آب را خالی کنید، چندین بار این کار را تکرار کنید.

ج) به شستشو ادامه دهید، اما تا زمانی که آب خروجی از فیلتر دیگر سیاه نباشد فیلتر را تکان ندهید (شکل ۵).



شکل ۵

تمیز کردن زیر مخزن

با آب تمیز، دیواره زیر مخزن را تمیز کنید.

تمیز کردن شناور

شناور را از جعبه خارج کنید و کیسه پلاستیکی را بردارید. سطح شناور را با آب تمیز بشویید (توجه: قسمت مخروطی جدا یا کج نشود).

۲. نصب


۱. نصب اجزای داخلی مخزن

۱) صفحه فیلتر را جدا کنید.

یک فیلتر کربنی (مشکی) و یک فیلتر الیاف (سفید) را از کیسه قطعات یدکی بردارید و به ترتیب با صفحه فلزی زیر داخل فیلتر قرار دهید (توجه: ابتدا فیلتر کربنی، سپس فیلتر الیاف و در نهایت صفحه فلزی را به ترتیب صحیح قرار دهید، در غیر این صورت بر طول عمر فیلتر تأثیر می‌گذارد).

۲) فیلتر را محکم به قسمت پایین مخزن داخلی بپیچانید (شکل ۷).

توجه: حلقه لاستیکی در محل اتصال مخزن داخلی و فیلتر را بررسی کنید.

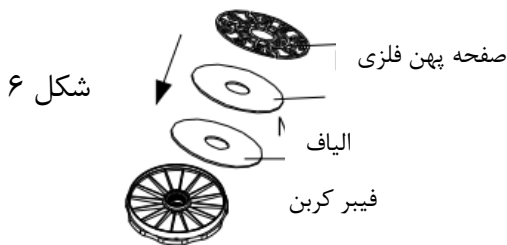



شکل ۷




شکل ۸

۳) فیلتر کربن فعال واقع در کف مخزن داخلی را با برداشتن حلقه نگهدارنده، جدا کنید (شکل ۹).

۲. شناور را از روی سوپاپ کف مخزن جدا کنید.

۳. با چرخاندن خلاف جهت عقربه‌های ساعت، محافظ آب خروجی را از جایگاهش خارج کنید. سپس دستگاه تصفیه آب را روی جایگاه مربوطه قرار دهید.

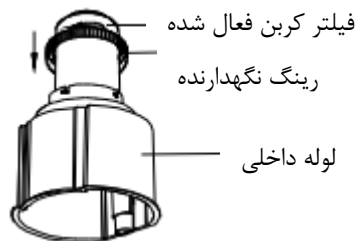


شکل ۹

۴. با افزودن آب شیر به مخزن داخلی، آب به طور خودکار تصفیه می‌شود.

نگهداری دوره‌ای:

۱. برای تمیز کردن رسوبات از سطح مخزن و شناور باید آن‌ها را هر ۳ تا ۶ ماه یکبار جدا کنید. در صورت پایین بودن کیفیت آب ورودی، این تمیزکاری را در فواصل زمانی کوتاه‌تری انجام دهید.

۲. با گذشت زمان، رسوبات بیشتری در کف مخزن داخلی به دلیل ته نشینی ذرات معلق در آب خام جمع می‌شود. به همین دلیل، تمیز کردن دوره‌ای این بخش توصیه می‌شود.

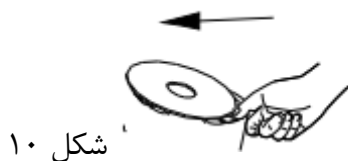

شکل ۱۰

ب) فیلتر الیاف و کربن را به طور جداگانه در آب قرار دهید و چندین بار آبکشی کنید. فیلتر الیاف و کربن را با یک دست نگه دارید و به آرامی روی کف دست دیگر ضربه بزنید تا آلودگی‌ها جدا شوند (شکل ۱۱). سپس با آب شیر دوباره آبکشی کنید و این فرآیند را چند بار تکرار کنید.



شکل ۱۱

نکات مهم:

۱. هنگام تمیز کردن الیاف کربن، آن‌ها را مالش ندهید.
۲. برای تمیز کردن فیلتر الیاف و کربن، از هیچ ماده شوینده‌ای استفاده نکنید.
۳. در صورت آسیب دیدگی یا غیرقابل استفاده شدن فیلتر الیاف و کربن پس از تمیز کردن، آن‌ها را تعویض کنید.
۴. به ترتیب قرارگیری فیلتر الیاف و کربن هنگام مونتاژ مجدد دقت کنید.

ج) تمیز کردن فیلتر کربن فعال

Purification principle


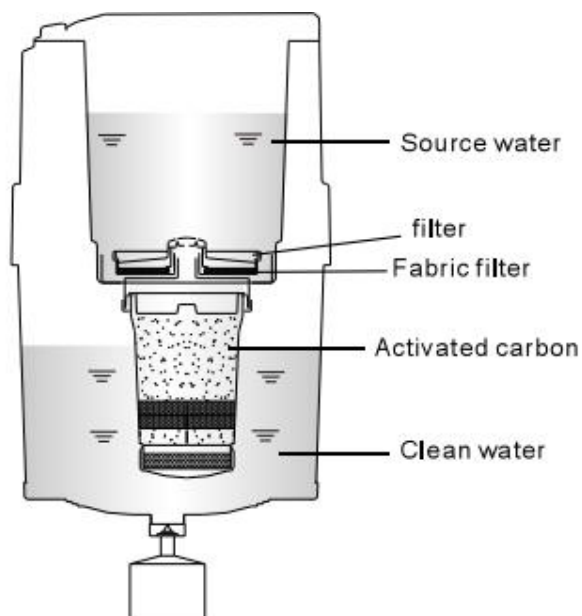



Figure 1

Notes


1. This product should be placed in the absence of direct sunlight.

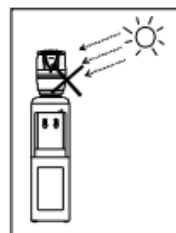


2. A few days do not use this product, should drain the water in the under barrel.

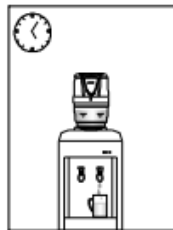


3. Higher water level in the under barrel, do not add water to prevent water spill from middle of water purifier.

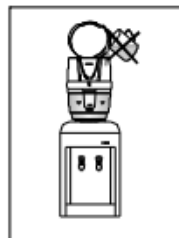

4. All sealing elements (cone-shaped pad, O-ring), should regularly clean to ensure the sealing performance.

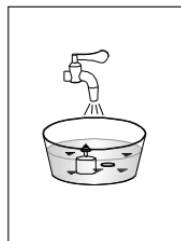

5. First time use water purifier, the float components, under barrel, soften filter, activated carbon filter have to wash by clean water.

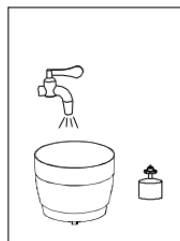

Technical parameters

Provide water: municipal water

Water flow: 0.3L/min

Total volume: 15L

Instructions

1. Cleaning

When used for the first time, float components, under barrel. activated carbon filter, sterilization filter should wash by clean water.

Activated carbon filter cleaning

- a. Remove the retainer ring from inner barrel, then remove the activated carbon filter.
- b. washing by tap water, this time shaking the filter, and then poured water, do so several times.
- c. Continue to flush, but do not wobble the filter until the filter no black water outflow.



Figure 5

Under barrel cleaning

Use clean water to clean under barrel wall.

Float unit cleaning

Take the Float unit from the box, remove the plastic bag. Wash float

surface by clean water (Note: cone-shaped do not be detached and skew).

II. Installation

1. Inner barrel components installation

1) Remove the platen from filter,

take out one carbon fiber(black) and one non-woven fabric(white) from the spare parts bag, then fit in the filter by the platen (Figure 6)

Note: The first load of carbon fiber, and then non-woven, last the platen, its order without any error, otherwise will impact on filter life.

2) Screw the filter tightly on the bottom of the Inner barrel (Figure 7)

NOTE: O-ring at the joint of inner barrel

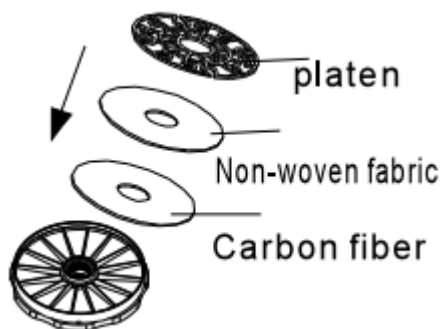


Figure 6

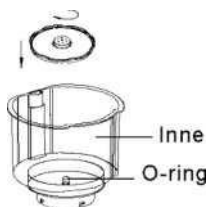


Figure 7

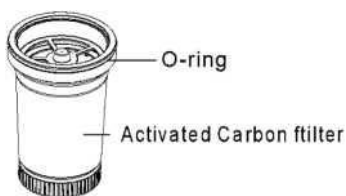


Figure 8

- 3) Activated carbon filter fit on the bottom of the inner barrel by retainer ring. (Figure 9)
2. Float unit fit on the valve pedestal of bottom barrel.
3. Counterclockwise rotation, remove the water guarder in water dispenser, put the water purifier on the top of water dispenser.

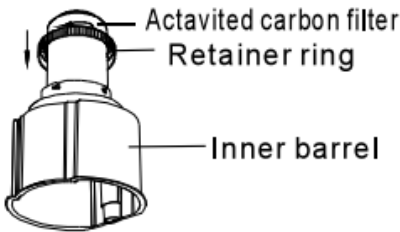


Figure 9

4. Add tap water in inner barrel, the water will automatically purified and softening.

Routine maintenance

1. Bottom barrel, float unit should be removed for cleaning to remove sediments on parts of the surface, it is recommended every 3-6 months to clean one time, if bad quality of raw water, please appropriately increase the cleansing frequency.
2. Water purifiers use a period of time, there would be more sediment on bottom of inner barrel, because the suspended. solids in raw water subside, suggest regular cleaning.

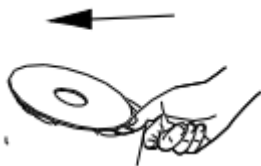


Figure 10

- b. Put the non-woven fabric and carbon fiber in water respectively and rinse several times, one hand holding non-woven fabric and carbon fiber,

gently tapping on the palm of your another hand, releases of pollutants, (Figure 11), re-use tap wafer rinse, repeat this method several times

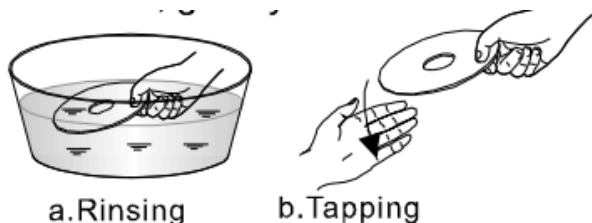


Figure 11

1. Carbon fiber cleaning do not rub
2. Non-woven, carbon fiber cleaning, do not use any cleaning agent
3. Non-woven and carbon fiber damaged or after cleaning invalid, please replace
4. Please attention of non-woven fabric and carbon fiber assembly sequence.
3. Activated carbon filter cleaning



QUALITY EXPERIENCE



Water Purifier
Model: NL-3033BL

فارسی ☐
English ☐